

Geneva 08102

Geneva Advance Clock Co. 10-inch Wall Clock Model 08102 Instruction Manual

INTRODUCTION

Thank you for choosing the Geneva Advance Clock Co. 10-inch Wall Clock, Model 08102. This manual provides essential information for the proper setup, operation, and maintenance of your new wall clock. Please read these instructions carefully before use and retain them for future reference.

PRODUCT OVERVIEW

The Geneva Advance Clock Co. 10-inch Wall Clock is designed for indoor use, featuring a classic analog display and reliable quartz movement. Its sleek design makes it a suitable addition to various room types, including kitchens.

Key Features:

- **Dimensions:** 10 inches in diameter.
- **Dial Diameter:** 8.5 inches.
- **Movement:** Accurate Quartz movement.
- **Power Source:** Requires 1 AA battery (not included).
- **Display:** Analog.
- **Mounting:** Wall mountable.



Figure 1: Front view of the Geneva Advance Clock Co. 10-inch Wall Clock. This image displays the clock's black frame, white dial with clear black numbers, and black hour, minute, and second hands.

SETUP

1. Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

2. Setting the Time

1. Turn the time-setting knob, usually located on the back of the clock's movement mechanism, in either direction until the hands display the correct time.
2. Avoid forcing the hands directly. Always use the setting knob.

3. Mounting the Clock

1. Choose a suitable location on a wall for mounting. Ensure the wall can support the clock's weight (approximately 0.75 lbs).
2. Use an appropriate wall anchor and screw (not included) for secure installation.
3. Hang the clock using the integrated hanging hook on the back of the clock's movement mechanism.

OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, the clock will begin to operate automatically. The quartz movement ensures accurate timekeeping. No further user interaction is required for daily operation.

MAINTENANCE

Cleaning

- Wipe the clock's surface with a soft, dry cloth.
- Do not use abrasive cleaners or solvents, as these may damage the finish or the clock face.

Battery Replacement

- Replace the AA battery annually or when the clock begins to lose time or stops functioning.
- Follow the battery installation steps outlined in the "Setup" section.
- Dispose of used batteries responsibly according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock stops or loses time.	Low or dead battery.	Replace the AA battery with a new one. Ensure correct polarity.
Clock hands are stuck or not moving smoothly.	Obstruction or damage to the movement.	Gently check if the hands are bent or touching each other or the clock face. If not, the internal mechanism may be faulty.
Loud ticking sound.	Characteristic of the quartz movement.	This model features a standard quartz movement which may produce an audible ticking sound. This is normal operation and not a defect. Consider placement in areas where ticking is less noticeable if it causes disturbance.
Time is incorrect after setting.	Hands were not properly aligned during manufacturing or shipping.	Re-set the time using the setting knob. If the issue persists, the hands may need gentle manual adjustment if accessible and safe to do so, or contact support.

SPECIFICATIONS

Brand	Geneva
Model Number	08102
Manufacturer	Advance Clock Co.
Product Dimensions	10"W x 10"H
Dial Diameter	8.5"

Color	Black
Display Type	Analog
Movement Type	Quartz
Power Source	Battery Powered (1 AA battery required, not included)
Mounting Type	Wall Mount
Indoor/Outdoor Usage	Indoor
Item Weight	0.75 Pounds
Frame Material	Wood

WARRANTY AND SUPPORT

Specific warranty details for the Geneva Advance Clock Co. 10-inch Wall Clock, Model 08102, are not provided in this manual. For warranty information or technical support, please refer to the product packaging or contact the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.

For general inquiries or further assistance, you may also attempt to contact the manufacturer, Advance Clock Co., through their official channels if available.

© 2023 Geneva Advance Clock Co. All rights reserved.

This manual is subject to change without notice.