

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Aiwa](#) /
- › [Aiwa CSD-TD69 CD/Cassette Boombox User Manual](#)

Aiwa CSD-TD69

Aiwa CSD-TD69 CD/Cassette Boombox User Manual

Model: CSD-TD69

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your Aiwa CSD-TD69 CD/Cassette Boombox. Please read this manual thoroughly before using the unit and retain it for future reference. This device combines a CD player, cassette player/recorder, and an AM/FM radio tuner into a portable unit.

PRODUCT OVERVIEW



Image: Front view of the Aiwa CSD-TD69 CD/Cassette Boombox. This image displays the main unit with its CD compartment, cassette deck, radio tuner display, and control buttons. The speakers are visible on either side.

The Aiwa CSD-TD69 is a portable audio system designed for versatile media playback. It features a top-loading CD player, a front-loading cassette deck, and a digital-synthesized AM/FM radio tuner. The unit is equipped with stereo speakers and can be powered by AC current or batteries for portability. A remote control is included for convenient operation.

SETUP

1. Power Connection

- **AC Power:** Connect the supplied AC power cord to the AC IN jack on the unit and then to a standard wall outlet.
- **Battery Power:** For portable use, open the battery compartment on the bottom of the unit. Insert 8 x "D" size batteries (not included), ensuring correct polarity (+/-). Close the compartment securely.

2. Antenna Setup

- **FM Antenna:** Extend the telescopic FM antenna fully and adjust its position for optimal FM reception.
- **AM Antenna:** The unit has a built-in AM antenna. Rotate the unit itself for best AM reception.

OPERATING INSTRUCTIONS

General Controls

- **Power On/Off:** Press the **POWER** button to turn the unit on or off.
- **Function Selector:** Use the **FUNCTION** switch (CD/RADIO/TAPE) to select the desired mode of operation.
- **Volume Control:** Rotate the **VOLUME** knob to adjust the sound level.

CD Player Operation

1. Select **CD** mode using the Function Selector.
2. Open the CD compartment lid by pressing the **OPEN/CLOSE** button.
3. Place a CD with the label side facing up onto the spindle.
4. Close the CD compartment lid. The display will show the total number of tracks.
5. Press the **PLAY/PAUSE** (▶/–) button to start playback.
6. Press **STOP** (■) to stop playback.
7. Use **SKIP** (▶▶ | / | ◀◀) buttons to skip tracks.
8. Press **REPEAT** to repeat the current track or all tracks.

Cassette Player/Recorder Operation

1. Select **TAPE** mode using the Function Selector.
2. Press the **STOP/EJECT** button to open the cassette compartment.
3. Insert a cassette tape with the open edge facing upwards.
4. Close the cassette compartment.
5. Press **PLAY** (▶) to start playback.
6. Press **RECORD** (●) to begin recording (ensure a recordable tape is inserted).
7. Use **FAST FORWARD** (▶▶) and **REWIND** (◀◀) for tape navigation.
8. Press **STOP/EJECT** to stop playback/recording and eject the tape.

Radio Tuner Operation

1. Select **RADIO** mode using the Function Selector.
2. Press the **BAND** button to select AM or FM.
3. Use the **TUNING** buttons (▶▶|/|◀◀) to manually tune to a station. Press and hold for auto-scan.
4. **Setting Presets:**
 - Tune to the desired station.
 - Press the **MEMORY** button.
 - Use the **PRESET (+/-)** buttons to select a preset number.
 - Press **MEMORY** again to confirm.
5. **Recalling Presets:** Use the **PRESET (+/-)** buttons to cycle through stored stations.

Remote Control

The included remote control allows for convenient operation of most functions from a distance. Ensure the remote's battery is inserted correctly and that there are no obstructions between the remote and the unit's sensor.

MAINTENANCE

- **Cleaning the Unit:** Wipe the exterior with a soft, dry cloth. For stubborn stains, use a cloth lightly dampened with mild detergent, then wipe dry. Do not use abrasive cleaners or solvents.
- **CD Lens Cleaning:** Use a commercially available CD lens cleaner disc periodically to maintain optimal CD playback quality.
- **Cassette Head Cleaning:** After every 10-20 hours of use, clean the tape heads, pinch rollers, and capstan with a cotton swab lightly moistened with isopropyl alcohol.
- **Battery Replacement:** When the unit's performance degrades during battery operation, replace all batteries with new ones of the same type. Do not mix old and new batteries.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-------------------------------------|--|--|
| No power | AC cord not connected; Batteries depleted or incorrectly inserted. | Ensure AC cord is firmly connected. Replace batteries, checking polarity. |
| No sound | Volume too low; Function mode incorrect. | Increase volume. Select the correct function (CD/RADIO/TAPE). |
| CD skips or does not play | CD dirty or scratched; CD inserted incorrectly; Lens dirty. | Clean CD with a soft cloth. Reinsert CD correctly. Use a CD lens cleaner. |
| Cassette tape not playing/recording | Tape incorrectly inserted; Tape heads dirty; Tape jammed. | Reinsert tape correctly. Clean tape heads. Do not force jammed tapes. |
| Poor radio reception | Antenna not extended/positioned correctly; Interference. | Extend and adjust FM antenna. Rotate unit for AM. Move away from other electronic devices. |

SPECIFICATIONS

- **Model:** Aiwa CSD-TD69
- **Power Output:** 2.5 watts per channel
- **Speaker Type:** Stereo
- **Tuner:** Digital-synthesized AM/FM tuner with 30 station presets
- **CD Player:** Top-loading, compatible with audio CDs
- **Cassette Deck:** Full-logic mechanism, play and record functions
- **Connectivity:** Auxiliary input
- **Power Source:** AC 230V, 50Hz or 8 x "D" size batteries (DC 12V)
- **Package Dimensions (approx.):** 57.66 x 50.8 x 46.48 cm
- **Item Weight (approx.):** 17.92 kg
- **Included Accessories:** Remote control