

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Mattel](#) /

› [Mattel Classic Football 2 Game Instruction Manual](#)

Mattel 43567

Mattel Classic Football 2 Game Instruction Manual

Model: 43567

INTRODUCTION

The Mattel Classic Football 2 Game is a handheld electronic game designed to simulate real-life football. This updated version features passing, kicking, and backward movement, allowing for dynamic gameplay. It supports one or two players, enabling competition against another player or the computer. This manual provides essential information for setting up, operating, and maintaining your game.



Image: Front view of the Mattel Classic Football 2 Game, showing the screen and control buttons.

SETUP

Battery Installation

The Mattel Classic Football 2 Game requires two (2) AA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the game unit.
2. Carefully slide off the battery compartment cover.
3. Insert two new AA batteries, ensuring the positive (+) and negative (-) terminals are aligned correctly as indicated inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Rear view of the Mattel Classic Football 2 Game, showing the open battery compartment and the instructions label.

Note: Always use fresh batteries for optimal performance. If the game malfunctions, battery wear may be the cause.

OPERATING INSTRUCTIONS

Familiarize yourself with the game controls and functions to enjoy the Mattel Classic Football 2 Game.

Game Controls

- **ON/OFF Switch:** Located on the game unit, this switch powers the game on or off.
- **SOUND Switch:** Use this switch to turn the game's sound effects on or off.
- **PRO 1 / PRO 2 Switch:** Slide this switch to select the desired difficulty level. PRO 1 is for standard play, while PRO 2 offers advanced gameplay.
- **ST Key:** Press the ST key to view Home and Visitor scores, as well as the time remaining in the game.

- **ARROW Keys:** These keys are used to maneuver the ball carrier (represented by a bright blip) through opposing tacklers (dimmer blips).
- **PASS Key:** Press the PASS key to throw the ball to your receiver.
- **KICK Key:** On fourth down, press the K key to punt or kick a field goal.
- **RUN Key:** Use this key to initiate a running play.

Gameplay Overview

The computer controls the running back on defense. Your objective is to control your team's offense.

- **Starting Play:** Press the ST key for downs, field position, and yards to go.
- **Movement:** Use the ARROW keys to move your ball carrier. If tackled, the game stops.
- **Passing:** Press the PASS key to throw the ball to an open receiver.
- **Kicking/Punting:** On fourth down, press the K key to punt or attempt a field goal.

MAINTENANCE

Cleaning

To clean the game unit, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the plastic and electronic components.

Storage

When not in use for extended periods, store the game in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for several months to prevent leakage and potential damage to the unit.

TROUBLESHOOTING

Game Malfunctions

If the game unit malfunctions or does not respond correctly, it may indicate battery wear. Replace the existing batteries with new AA batteries, ensuring correct polarity. If the issue persists after replacing batteries, contact customer support.

No Power

If the game does not power on, check the following:

- Ensure the ON/OFF switch is in the "ON" position.
- Verify that the batteries are correctly installed with the proper positive (+) and negative (-) alignment.
- Replace old batteries with new ones.

SPECIFICATIONS

| Feature | Detail |
|--------------|--------------------------|
| Model Number | 43567 |
| Brand | Mattel |
| Item Weight | 7.2 ounces (0.45 Pounds) |

| | |
|---------------------------|----------------------------|
| Product Dimensions | 10.39 x 6.69 x 1.69 inches |
| Power Source | Battery Powered |
| Batteries Required | 2 AA batteries |
| Display Type | LCD |
| Material | Plastic |
| Form Factor | Handheld |
| Recommended Age | 8 - 12 years |
| UPC | 074299435676 |

WARRANTY AND SUPPORT

For customer support or inquiries regarding your Mattel Classic Football 2 Game, please contact Mattel directly.

- **Manufacturer:** Mattel
- **Customer Service:** 1 (800) 524-TOYS

Legal Disclaimer

For residents of Ontario, please check your local laws before purchasing this product.

© 2002 Mattel, Inc. All rights reserved.