

[Manuals.plus](#) /

> [Tivoli Audio](#) /

> Tivoli Audio Model CD Player User Manual

Tivoli Audio MCDTPEB

Tivoli Audio Model CD Player

USER MANUAL

Introduction

The Tivoli Audio Model CD Player is designed to complement your existing Tivoli Audio system, such as the Model Two Stereo Radio or Model Three Clock Radio, or to integrate seamlessly into any home stereo setup. Its compact, front-loading slot design offers flexible placement options, and the elegant cherry wood cabinet provides a sophisticated aesthetic.

This manual provides detailed instructions for setting up, operating, and maintaining your Model CD Player to ensure years of high-quality audio enjoyment.

Key Features

- Matching, front-loading CD player for Tivoli Model One and Model Two table radios
- Minimalist front panel with large, easy-to-read display and primary controls
- Compatible with standard audio CD and CD-R formats (does not play CD-RW)
- Credit-card-sized remote includes shuffle, repeat, intro, and track access functions
- Compact dimensions: 8.375 x 4.5 x 5.875 inches (W x H x D)

Product Overview

Familiarize yourself with the components and controls of your Tivoli Audio Model CD Player.



Figure 1: Front Panel of the Model CD Player. Features include a central display, a slot for disc insertion, and control buttons for playback and navigation.



Figure 2: Angled View of the Model CD Player. This view emphasizes the compact design and the quality of the cherry wood finish.

The rear panel includes full-size RCA outputs for connecting to an amplifier or receiver, and a 1/8-inch stereo headphone output for private listening. It also features an AC power input for the included adapter and is capable of running on DC power.

Setup

Unpacking

- Carefully remove the Model CD Player and all accessories from the packaging.
- Verify that all included components are present: Model CD Player, AC adapter, stereo RCA to stereo 1/8-inch mini plug connecting cable, and credit card remote control.

Connecting the Model CD Player

1. **Power Connection:** Connect the supplied AC adapter to the DC input on the rear of the Model CD Player and plug the adapter into a wall outlet.
2. **Audio Output:** Use the included stereo RCA to 1/8-inch mini plug cable to connect the RCA outputs on the Model CD Player to the auxiliary input of your Tivoli Audio Model Two, Model Three, or other audio system. Ensure the correct input is selected on your receiving device.
3. **Headphone Output:** For private listening, plug standard 1/8-inch (3.5mm) stereo headphones into the headphone jack on the rear panel.

Operation

Basic Controls (On Unit)

- **Power Button:** Press to turn the unit on or off.
- **Eject Button:** Press to eject a disc from the slot.
- **Play/Pause Button:** Press to start or pause disc playback.
- **Stop Button:** Press to stop disc playback.
- **Skip/Search Buttons (◀◀ / ▶▶):** Press briefly to skip to the previous or next track. Press and hold to fast reverse or fast forward through a track.

Remote Control Functions

The credit-card-sized remote control provides additional functions for convenient operation:

- **Shuffle:** Plays tracks in a random order.
- **Repeat:** Repeats the current track or the entire disc.
- **Volume:** Adjusts the output volume (if connected to a compatible Tivoli Audio device or amplifier with remote volume control).
- **Intro:** Plays the first few seconds of each track.
- **Direct Track Access:** Allows direct selection of tracks using number buttons.

Disc Compatibility

The Model CD Player is designed to play standard audio CDs and CD-R discs. It **does not** support CD-RW discs.

Front Panel Display

The bright and crisp front panel display shows track number, elapsed time, and playback status, providing clear visual feedback during operation.

Maintenance

Cleaning

- To clean the cabinet, use a soft, dry cloth. Avoid abrasive cleaners or solvents, as they may damage the finish.
- For the display, use a soft, lint-free cloth. Do not spray cleaning solutions directly onto the display.

General Care

- Place the unit on a stable, level surface to prevent vibrations that could affect playback.
- Avoid exposing the unit to extreme temperatures, humidity, or direct sunlight.
- Do not block ventilation openings.

Troubleshooting

If you encounter issues with your Model CD Player, please refer to the table below for common problems and their solutions.

Problem	Possible Cause	Solution
Disc not playing or ejecting	Disc is dirty, scratched, or incompatible (CD-RW). Unit malfunction.	Clean the disc with a soft cloth. Try a different, known-good audio CD. Ensure the disc is not a CD-RW. If the problem persists, contact customer support.
Distorted or no audio output	Incorrect cable connection, wrong input selected on amplifier, volume too low.	Check all audio cable connections. Ensure the correct input source is selected on your amplifier or radio. Increase the volume on both the CD player (if applicable) and the connected audio system.
Remote control not working	Dead battery, obstructed signal, remote out of range.	Replace the battery in the remote control. Ensure there are no obstructions between the remote and the unit's sensor. Operate the remote within its effective range.
Unit powers on but does not respond	Temporary electronic glitch.	Unplug the unit from the power outlet for 30 seconds, then plug it back in.

Specifications

Feature	Specification
Product Dimensions (W x H x D)	8.375 x 4.5 x 5.875 inches (21.27 x 11.43 x 14.92 cm)
Item Weight	7 pounds (3.18 kg)
Model Number	MCDTPEB
Color	Cherry Wood / Metallic Taupe
Connectivity Technology	Auxiliary (RCA output)
Included Components	AC Adapter, Remote Control, Stereo RCA to 1/8-inch Mini Plug Cable
Number of Discs	1
Disc Compatibility	Standard Audio CD, CD-R (Does not play CD-RW)

Warranty and Support

The Tivoli Audio Model CD Player comes with a 1-year limited warranty from the date of purchase. Please retain your proof of purchase for warranty claims.

For further assistance, technical support, or warranty service, please visit the official Tivoli Audio website or refer to the full [User Manual \(PDF\)](#) for more detailed information.

