

Manuals.plus /

› Olympus /

› Olympus D560 3.2 MP Digital Camera User Manual

Olympus D560

Olympus D560 3.2 MP Digital Camera User Manual

Model: D560

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Olympus D560 3.2 MP Digital Camera. Please read this manual thoroughly before using the camera and keep it for future reference.

SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Use only specified batteries and memory cards.
- Do not attempt to disassemble or modify the camera.
- Keep the camera away from extreme temperatures and direct sunlight.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Olympus D560 Digital Camera
- 16 MB xD-Picture Card
- USB Cable
- Video Cable
- Wrist Strap
- 2 AA Alkaline Batteries
- Instruction Manual (Printed)
- Warranty Card

- CD-ROM: Camedia Master Software, Windows 98 Driver, Camera Reference Manual

CAMERA OVERVIEW

Familiarize yourself with the main components of your Olympus D560 camera.



Image: Front view of the Olympus D560 digital camera, showing the lens, flash, and branding.

The camera features a compact design, a 3x optical zoom lens, and a built-in flash. The front panel includes the lens, flash unit, and self-timer lamp.



Image: Rear view of the Olympus D560 digital camera, highlighting the 1.8-inch LCD screen and control buttons.

The rear panel houses the 1.8-inch color TFT LCD screen for viewing images and navigating menus, along with various control buttons for operation.

SETUP

1. Battery Installation

The camera operates on two AA batteries. For optimal performance, rechargeable NiMH batteries are recommended, though alkaline batteries are included for initial use.

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Memory Card Installation

The camera uses xD-Picture Cards for image storage. A 16 MB card is included.

1. Open the memory card slot cover, typically located on the side of the camera.
2. Insert the xD-Picture Card with the label facing the correct direction until it clicks into place.
3. Close the memory card slot cover.

3. Initial Power On

To power on the camera, slide the lens cover open. The lens will extend, and the LCD screen will activate. To power off, slide the lens cover closed; the lens will retract.

OPERATING THE CAMERA

1. Basic Photography (Point and Shoot)

1. Turn on the camera by sliding the lens cover open.
2. Frame your subject using the LCD screen.
3. Press the shutter button halfway down to focus. The camera will automatically adjust exposure and focus.
4. Press the shutter button fully to capture the image.

2. Zoom Function

Use the zoom controls (usually marked 'W' for Wide and 'T' for Telephoto) to adjust the 3x optical zoom. The camera also features a 3.4x digital zoom for a total 10x seamless zoom.

3. Flash Modes

The built-in flash has multiple modes, including Auto, Red-eye Reduction, Fill-in, and Slow Synch. Select the appropriate mode via the camera's menu or dedicated flash button.

4. Scene Program Modes

The D560 offers four scene program modes to optimize settings for specific shooting conditions:

- **Portrait:** Enhances skin tones.
- **Landscape:** For richer blues and greens in outdoor scenes.
- **Night Scene:** Adjusts for low-light conditions.
- **Self-Portrait:** For close-up shots of yourself.

5. Movie Mode

The camera can capture continuous video (without sound) in QuickTime Motion JPEG format.

- **320 x 240 pixels:** Up to 15 seconds.
- **160 x 120 pixels:** Up to 60 seconds.

To activate movie mode, select it from the camera's shooting mode menu.

6. Reviewing Images and Videos

Press the 'Quick View' button or navigate to playback mode to review your captured photos and videos on the 1.8-inch LCD screen. Use the directional pad to scroll through images.

7. Connecting to a Computer

The D560 features Auto-Connect USB for hassle-free file transfer.



Image: Rear view of the Olympus D560 digital camera with a USB cable connected to the port.

1. Ensure the camera is powered off.
2. Connect one end of the supplied USB cable to the camera's USB port and the other end to your computer.
3. Turn on the camera. Your computer should recognize the camera as a removable storage device.
4. Transfer images and videos to your computer.

The included CD-ROM contains Camedia Master software for image management and a Windows 98 driver, though newer operating systems (Windows Me/2000/XP and Mac OS 8.6 or later) typically do not require additional drivers for basic file transfer.

MAINTENANCE

- **Cleaning the Camera:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Battery Care:** Remove batteries when the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Memory Card Handling:** Always format new memory cards in the camera before first use. Avoid removing the memory card while the camera is writing data.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Check battery installation and charge level. Replace with fresh batteries if necessary.
Lens does not retract immediately.	The camera requires a few seconds for the lens to retract after closing the cover. This is normal operation.
Images are blurry.	Ensure the camera is held steady during shooting. Check focus settings and lighting conditions. For close-ups, use the macro mode (flower setting).
Cannot transfer photos to computer.	Verify USB cable connection. Ensure camera is powered on after connecting. For older operating systems, ensure the Camedia Master software and drivers are installed.
Batteries drain quickly.	Using rechargeable NiMH batteries is recommended for better battery life. Frequent use of flash or LCD can increase power consumption.
Memory card error.	Ensure the xD-Picture Card is inserted correctly. Try formatting the card (this will erase all data). If the problem persists, the card may be faulty.

SPECIFICATIONS

Model Name	Olympus D560
Effective Still Resolution	3.2 Megapixels (2048 x 1536 pixels)
Photo Sensor Technology	CCD
Optical Zoom	3x
Digital Zoom	3.4x (10x total seamless zoom)
Lens	5.8-17.4mm (35-105mm equivalent in 35mm photography), f/3.1 aperture
Screen Size	1.8 Inches (Color TFT LCD)
Storage Media	xD-Picture Card (16 MB included)
Video Resolution	320x240 (15s), 160x120 (60s)
Connectivity	USB 1.1, Video Out
Power Source	2 AA Batteries (Alkaline or NiMH)
Dimensions (W x H x D)	Approx. 4.4 x 2.4 x 1.6 inches
Weight	Approx. 5.8 ounces (without batteries)
Supported File Format	JPEG, RAW (for stills), MOV (for video)
Flash Modes	Auto, Red-eye Reduction, Fill-in, Slow Synch
Scene Modes	Portrait, Landscape, Night Scene, Self-Portrait
White Balance	Auto, Daylight, Overcast, Tungsten, Fluorescent
Self Timer	10 Seconds
Model Number (Manufacturer)	225380 (also referred to as C740)
UPC	050332140714

WARRANTY INFORMATION

The Olympus D560 Digital Camera comes with a **1 Year Limited Warranty** from the date of purchase. Please refer to the included warranty card for detailed terms and conditions. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting beyond this manual, or warranty service, please contact Olympus customer support. Refer to the contact information provided on the warranty card or the official Olympus website.

