

Altec Lansing 120

Altec Lansing 120 Satellite Speaker System Instruction Manual

INTRODUCTION

The Altec Lansing 120 is a two-satellite speaker system designed to enhance the audio experience for various devices. This system provides clear sound for personal computers, video gaming systems, portable CD players, MP3 players, and other audio sources. Its compact design and simple connectivity make it a versatile audio solution.

Key features include:

- 2 Watts total Continuous Power output.
- Compatibility with multiple audio sources including PCs, gaming systems, portable CD players, and MP3 players.
- Integrated Power On/Off and Master Volume controls for easy operation.
- Convenient Headphone Jack for private listening.
- Shielded Satellites to prevent interference with other electronic devices.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Two (2) Altec Lansing 120 Satellite Speakers
- One (1) Audio Input Cable (3.5mm stereo jack)
- One (1) AC Power Adapter

SETUP INSTRUCTIONS

Follow these steps to set up your Altec Lansing 120 speaker system:

1. **Speaker Placement:** Place the two satellite speakers on a stable, flat surface, ideally on either side of your listening area (e.g., computer monitor, TV) for optimal stereo sound. Ensure they are

positioned to direct sound towards you.

2. **Connect to Power:** Plug the AC power adapter into the designated power input port on one of the satellite speakers. Then, plug the other end of the power adapter into a standard wall electrical outlet.
3. **Connect to Audio Source:** Locate the 3.5mm audio input jack on the back of the primary satellite speaker. Connect one end of the supplied audio input cable to this jack. Connect the other end of the audio cable to the audio output jack (typically green) on your PC, gaming console, portable CD player, or MP3 player.



Image: The Altec Lansing 120 satellite speakers, showing their compact design and typical setup next to a computer monitor. The image illustrates the two speakers with their cables connected, ready for use.

OPERATING INSTRUCTIONS

Once the speakers are set up, follow these steps for operation:

- **Power On/Off:** Locate the integrated power control (often combined with the volume knob) on the primary satellite speaker. Turn the knob clockwise to power on the speakers. Turn it counter-clockwise until it clicks to power off.
- **Adjusting Volume:** Rotate the master volume control knob on the primary satellite speaker to increase or decrease the sound level. It is recommended to start with a low volume and gradually increase it to a comfortable listening level. Also, ensure the volume on your audio source device (PC, MP3 player, etc.) is adequately adjusted.
- **Using the Headphone Jack:** For private listening, plug your headphones into the headphone jack located on the primary satellite speaker. Plugging in headphones will automatically mute the speaker output. Unplugging the headphones will restore sound through the speakers.

MAINTENANCE

To ensure the longevity and optimal performance of your Altec Lansing 120 speaker system, follow these

maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the speakers. Avoid using liquid cleaners, aerosols, or abrasive materials, as these can damage the finish or internal components.
- **Ventilation:** Ensure that the speakers are placed in an area with adequate ventilation. Do not block any vents or openings on the speaker enclosures.
- **Storage:** If storing the speakers for an extended period, disconnect them from power and audio sources. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharply bending or crimping the power and audio cables. Regularly check cables for any signs of wear or damage.

TROUBLESHOOTING

If you encounter issues with your speaker system, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound from speakers	<ul style="list-style-type: none">• Speakers not powered on.• Volume too low on speakers or audio source.• Audio cable not connected properly.• Headphones plugged in.	<ul style="list-style-type: none">• Ensure speakers are powered on.• Increase volume on both speakers and audio source.• Check all audio cable connections.• Unplug headphones from the jack.
Distorted or unclear sound	<ul style="list-style-type: none">• Volume too high.• Poor quality audio source.• Loose cable connections.	<ul style="list-style-type: none">• Lower the volume on speakers and/or audio source.• Try a different audio source or file.• Ensure all cables are securely connected.
Only one speaker working	<ul style="list-style-type: none">• Loose connection to the non-working speaker.• Faulty audio cable.	<ul style="list-style-type: none">• Check the connection of the non-working speaker to the primary speaker.• Try a different audio cable if available.

SPECIFICATIONS

Technical details for the Altec Lansing 120 Satellite Speaker System:

Feature	Detail
Brand	Altec Lansing
Model Number	120
Speaker Type	Satellite
Connectivity Technology	Wired
Mounting Type	Freestanding, Plug Mount

Feature	Detail
Power Source	Corded Electric
Control Method	Remote (<i>Note: Refers to integrated controls, not a separate remote unit</i>)
Color	Black
UPC	021986940029

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and technical support, please visit the official Altec Lansing website or contact their customer service department. Keep your purchase receipt as proof of purchase for any warranty claims.

Note: Specific warranty terms may vary by region and retailer.