

GPX D715

GPX D715 AM/FM/CD Digital Clock Radio with Dual Alarm User Manual

Model: D715

INTRODUCTION

Thank you for purchasing the GPX D715 AM/FM/CD Digital Clock Radio with Dual Alarm. This manual provides detailed instructions for the setup, operation, and maintenance of your new device. Please read this manual thoroughly before use and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Do not expose this unit to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper ventilation around the unit.
- Use only attachments/accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel.
- Dispose of batteries properly, following local regulations.

PACKAGE CONTENTS

Please ensure all items are present:

- GPX D715 AM/FM/CD Digital Clock Radio
- AC Power Cord (integrated or separate)
- User Manual (this document)
- *Note: A 9V battery for backup is not included and must be purchased separately.*

PRODUCT OVERVIEW



Figure 1: Front view of the GPX D715 AM/FM/CD Digital Clock Radio. The unit features a silver and grey casing with a red LED display on the front, flanked by stereo speakers. A top-loading CD compartment is visible on the upper surface.

The GPX D715 is a versatile clock radio designed for convenience and functionality. It includes an AM/FM tuner, a top-loading CD player, a digital clock with a red LED display, and dual alarm capabilities. The unit is equipped with stereo full-range speakers for clear audio output and a battery backup system to maintain time and alarm settings during power outages.

SETUP

1. Power Connection

Plug the AC power cord into a standard wall outlet. The unit will power on, and the display will illuminate.

2. Battery Backup Installation

For uninterrupted timekeeping and alarm settings during power interruptions, install a 9V battery (not included) into the battery compartment located on the bottom of the unit. Ensure correct polarity (+/-) when inserting the battery.

3. Setting the Clock

1. Press and hold the **TIME SET** button. The hour digits on the display will begin to flash.
2. Press the **HOUR** button repeatedly to adjust the hour. Pay attention to the AM/PM indicator.
3. Press the **MINUTE** button repeatedly to adjust the minutes.
4. Press the **TIME SET** button again to confirm the time.

OPERATING INSTRUCTIONS

Radio Operation (AM/FM)

1. Press the **FUNCTION** button to select either FM or AM radio mode.
2. Extend the FM wire antenna for better FM reception. For AM, rotate the unit for optimal reception.
3. Use the **TUNING** knob or **TUNE +/-** buttons to manually tune to your desired station.
4. Adjust the volume using the **VOLUME** knob.

CD Player Operation

1. Open the CD compartment door located on top of the unit.
2. Place a CD with the label side facing up into the compartment. Close the door securely.
3. Press the **FUNCTION** button to select CD mode. The CD will begin to play automatically.
4. Use the **PLAY/PAUSE** button to pause or resume playback.
5. Press the **STOP** button to stop playback.
6. Use the **SKIP/SEARCH** buttons (**<<</>>>**) to skip tracks or search within a track.
7. **Programming Tracks:** While in STOP mode, press the **PROGRAM** button. Select desired tracks

using the **SKIP/SEARCH** buttons and press **PROGRAM** again to confirm each track. Up to 20 tracks can be programmed. Press **PLAY** to start programmed playback.

Setting Alarms (Dual Alarm)

The D715 features two independent alarms (Alarm 1 and Alarm 2).

1. Press and hold the **ALARM 1 SET** or **ALARM 2 SET** button. The hour digits for that alarm will flash.
2. Use the **HOUR** and **MINUTE** buttons to set the desired alarm time.
3. Press the **ALARM SET** button again to confirm the time.
4. Immediately after setting the time, press the **ALARM MODE** button (or similar, refer to unit's specific button) to cycle through wake options: **Buzzer**, **Radio**, or **CD**.
5. To activate/deactivate an alarm, press the respective **ALARM ON/OFF** button. An indicator will appear on the display when an alarm is active.
6. To temporarily silence an alarm, press the **SNOOZE** button. The alarm will sound again after approximately 9 minutes.
7. To turn off an alarm completely, press the **ALARM ON/OFF** button for the active alarm.

MAINTENANCE

Cleaning the Unit

Wipe the exterior of the unit with a soft, damp cloth. Do not use abrasive cleaners or solvents. Ensure the unit is unplugged before cleaning.

CD Player Care

Keep the CD compartment clean and free of dust. Avoid touching the CD lens. If the lens requires cleaning, use a specialized CD lens cleaner disc.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not securely plugged in.	Check power cord connection to outlet and unit.
Radio static/poor reception	Antenna not extended/positioned correctly. Interference from other electronics.	Extend and adjust FM wire antenna. Rotate unit for AM reception. Move unit away from other electronic devices.
CD not playing/skipping	CD is dirty, scratched, or inserted incorrectly. CD compartment door not closed.	Clean CD with a soft cloth. Ensure CD is inserted label-side up. Close CD compartment door completely. Try a different CD.
Alarm does not sound	Alarm not activated. Alarm volume too low.	Ensure alarm indicator is visible on display. Increase volume if waking to radio/CD.
Clock/alarm settings lost after power outage	9V backup battery is dead or not installed.	Install a fresh 9V battery or replace existing one.

SPECIFICATIONS

Brand: GPX

Model: D715

Tuner Technology: AM, FM

Radio Bands Supported: 2-Band

Special Feature: Dual Alarm, Digital Clock, CD Player

Power Source: AC Power, 9V Battery (for backup)

Frequency: 108 MHz (FM upper limit, typical)

UPC: 047323007156


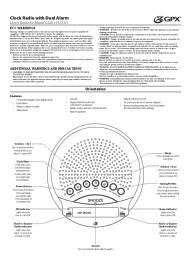 
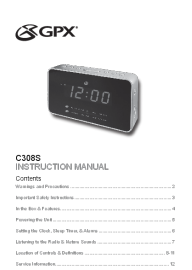 
Dimensions (approx.): 28.45 x 24.64 x 12.95 cm (L x W x H)



 
Weight (approx.): 1.66 kg

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official GPX website. Keep your proof of purchase for warranty claims.

Related Documents - D715

	<p>GPX C209B Clock Radio with Intelli Set™ User's Guide</p> <p>User's guide for the GPX C209B Clock Radio with Intelli Set™ featuring AM/FM radio, digital alarm, and auxiliary input. Includes setup, operation, safety instructions, and control glossary.</p>
	<p>GPX C226 Dual Alarm Clock Radio User Guide and Manual</p> <p>Learn how to operate and set up your GPX C226 Dual Alarm Clock Radio with this comprehensive user guide. Includes instructions for setting time, alarms, radio presets, and important safety warnings.</p>
	<p>GPX C308S Clock Radio Instruction Manual</p> <p>Comprehensive instruction manual for the GPX C308S digital clock radio, covering setup, features, operation, safety, and troubleshooting.</p>

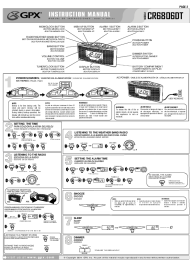	<p>GPX HM3817DTBLK Home Music System User Guide</p> <p>User guide for the GPX HM3817DTBLK Home Music System, covering setup, radio operation, auxiliary input, CD playback, alarm settings, and clock functions.</p>
	<p>GPX C280 Sunrise Clock Radio User's Guide</p> <p>Comprehensive user's guide for the GPX C280 Sunrise Clock Radio, detailing features, setup, operation of clock, alarm, radio, and line input, along with important safety information and company details.</p>
	<p>GPX CR6806DT Clock Radio Instruction Manual</p> <p>User guide for the GPX CR6806DT clock radio, covering setup, operation, features like alarm, radio, weather band, and troubleshooting. Includes safety warnings and care instructions.</p>

Documents - GPX – D715

[\[pdf\]](#)

und Kupplungshebel Brems POLO Motorrad May 20 2022 · MT 09 SP MTN 890 MTN890D RN69
e13*168 2013*00867 2020 723 Tracer 9 GT MTT890 MTT890D RN70 2013*00954 DE001090221 srsltid
AfmBOOpYBilEIL YylfZcWKdtTHMePiAY5fMglXp66TVbRv7ipIFL6VP polo motorrad on demandware
static Sites master default dw9b124f34 Motorradund MotorradMay 723May D715 1985 110 020 CB 500
PC26 G555 1993 111 014 CX C PC01 GPX 600 R ZX600A D753 1988 310 225 ZX600C G418May
YAMAHA I 4163 Austausch Typ BC 723MT 723KW5 KW18 3 1 7 Ort der Prüfung Köln 4
HandelsmarkeDE001090221
AfmBOOr5TRBnolmg3YM06toufhk11oDJWj6Lv7yuhWtWljS0QYinEajDE001090221
AfmBOOpqsS4zLD7b2NbPV224qLRBilWoKMnt7gx9j6KSv2jiJd3YJbpgDE001090221
AfmBOOrQU8WP6xYG QFZiXh99UWG2 wjKZVpE9EoV qSFbu 74FjMjMqpolo
YylfZcWKdtTHMePiAY5fMglXp66TVbRv7ipIFL6VPpolo
AfmBOOr5TRBnolmg3YM06toufhk11oDJWj6Lv7yuhWtWljS0QYinEajpolo
AfmBOOpqsS4zLD7b2NbPV224qLRBilWoKMnt7gx9j6KSv2jiJd3YJbpgpolo AfmBOOpXU OnG
3yleXorTlwHzs5pgvZUT4ptnSkr55HKAzFdKk2 PyL |||
Brems- und Kupplungshebel Allgemeine Betriebserlaubnis ABE 92007*00 Kraftfahrt-
Bundesamt DE-2493 ... C01 PC34 PC34 PC19 PC23 PC25 Austausch Brems- und
Kupplungshebel, Typ BC EG-BE Nr. / ABE Nr. A400 **D715** G555 B647 K016
e13*92/61*0020 E515 E978 F648 Baujahr ab 1978 1985 1993 1980 1998 1999 1987
198...
lang:de score:11 filesize: 1.91 M page_count: 34 document date: 0000-00-00



**ABE
2013**

 
**Stahlflex-
Bremsleitungen**

[\[pdf\]](#)

Kraftfahrt Bundesamt POLO Motorrad D715 1985 Honda 450 CB S PC17 E139 1986 CR PE02 EBE GPX
600 R Ausf C ZX600A D753 Kawasaki DE000493080 srsItid AfmBOor
m42RY9pZTVFhILMvMDfZH6gaTT2OekvtIKjAOgy2ulweuRui polo motorrad on demandware static Sites
master default dw2c458246 |||

...

lang:de score:9 filesize: 646.65 K page_count: 48 document date: 2013-05-15

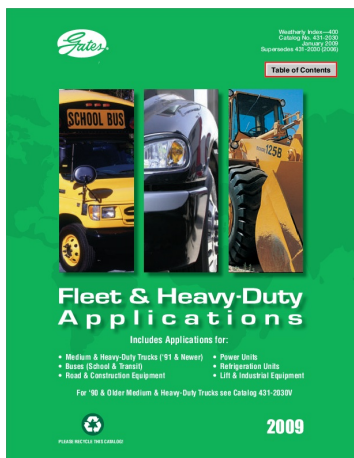

[\[pdf\]](#) User Manual Catalog

Gates 2009 Fleet Heavy Duty Applications Poppy Program Available in either automatic or manual rewind
reels For greater convenience longer hose life and a manuals to verify recommended replacement parts
conveniently coil out of the way extend prevent accidental trips falls safer work area choose Gates!
Corbeil Crown coach Dodge Ford RBR HeavyDuty carquestprofessionals catalogs fleet hd
Weatherly Index--400 Catalog No. 431-2030 January 2009 Supersedes 431-2030
2006 Table of Contents ... SLER IND. 30 ENG.; CHRYSLER 6-CYL. 230 ENG. Belt -
Fan Gen..... **D715** TR24489 Belt - Hyd.
Pump..... **D716** TR22397 D424 CHRYSLER ...

lang:de score:9 filesize: 4.37 M page_count: 789 document date: 2009-01-16