

[Manuals.plus](#) /

› [WENKO](#) /

› Wenko Profi Rolling Garment Rack Instruction Manual

WENKO 4364810100

Wenko Profi Rolling Garment Rack Instruction Manual

Model: 4364810100

1. INTRODUCTION

Thank you for choosing the Wenko Profi Rolling Garment Rack. This robust and mobile garment rack is designed to provide additional storage space for coats, jackets, suits, and shirts, supporting a total weight of up to 100 kg. Its practical design, featuring four smooth-rolling casters, makes it ideal for airing clothes or transporting textiles. The integrated metal shelf offers convenient storage for shoes and other accessories. Please read this manual carefully before assembly and use to ensure safe and optimal performance of your product.

2. SAFETY INSTRUCTIONS

- **Weight Capacity:** Do not exceed the maximum load capacity of 100 kg (220 lbs) for the garment rack. Overloading can cause instability and damage.
- **Stability:** Ensure the garment rack is assembled correctly and all connections are secure before loading. Distribute weight evenly to prevent tipping.
- **Caster Brakes:** Always engage the brakes on the casters when the rack is stationary to prevent unintended movement.
- **Children and Pets:** Keep children and pets away from the garment rack during assembly and ensure it is stable when in use to prevent accidents.
- **Placement:** Place the garment rack on a flat, stable surface. Avoid placing it on uneven ground or near stairs.
- **Moving the Rack:** When moving the rack, ensure casters are unlocked and move it slowly to avoid sudden shifts in weight or collisions.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all components are present:

- 1x Top hanging rail
- 2x Vertical support poles
- 2x Base frames with casters
- 1x Grid shoe shelf
- Necessary fasteners and tools (if included)



Image showing the main components of the Wenko Profi Garment Rack, highlighting the 100 kg capacity, four large casters, and the grid shoe shelf.

4. SETUP AND ASSEMBLY

Assembly instructions are required. Please follow these general steps. Specific diagrams may be included with your product packaging.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
2. **Attach Casters to Base Frames:** If not pre-assembled, attach the four casters to the designated points on the two base frames. Ensure they are securely fastened.
3. **Connect Vertical Support Poles to Base Frames:** Insert the vertical support poles into the upright sockets of the base frames. Secure them using the provided fasteners (e.g., screws, clips).
4. **Install Grid Shoe Shelf:** Place the grid shoe shelf onto the lower crossbars of the base frames. Ensure it sits firmly and is level.
5. **Attach Top Hanging Rail:** Connect the top hanging rail to the upper ends of the vertical support poles. Secure it firmly.
6. **Final Check:** Once assembled, gently shake the rack to ensure all connections are tight and the structure is stable. Engage the caster brakes.



A close-up view of one of the large caster wheels, showing the locking mechanism for stability.

5. OPERATING INSTRUCTIONS

- **Hanging Garments:** Use hangers to place clothes on the top rail. Distribute the weight as evenly as possible across the rail to maintain balance.
- **Using the Shoe Shelf:** The lower grid shelf is designed for storing shoes, boxes, or other accessories. Ensure items do not obstruct the movement of the rack if it is to be rolled.
- **Moving the Rack:** To move the garment rack, disengage the brakes on all casters. Gently push or pull the rack to its desired location. Once positioned, engage the brakes to secure it.
- **Airing Clothes:** The mobile design is suitable for moving clothes to an area with better air circulation for airing.





The Wenko Profi Garment Rack fully assembled and in use, displaying clothes on the hanging rail and shoes on the lower shelf.

6. MAINTENANCE

- **Cleaning:** Wipe the metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the chrome finish.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.
- **Caster Care:** Keep the casters free of dust, hair, and debris to ensure smooth rolling.

7. TROUBLESHOOTING

- **Rack is Unstable:**
 - Ensure all assembly screws and connections are fully tightened.
 - Verify that the rack is placed on a flat, level surface.
 - Check if the weight on the rail is evenly distributed and not exceeding the 100 kg limit.
- **Casters Not Rolling Smoothly:**

- Check if the caster brakes are disengaged.
- Remove any hair, dust, or debris that may be caught in the wheels.
- Ensure the casters are securely attached to the base frames.

• **Difficulty Assembling:**

- Refer back to the assembly steps and diagrams.
- Ensure you are using the correct parts for each step.
- Do not force parts together; if they don't fit, re-check the instructions.

8. SPECIFICATIONS

Feature	Detail
Model Number	4364810100
Brand	WENKO
Material	Chrome-plated Metal, Polypropylene (for casters/connectors)
Color	Chrome
Dimensions (L x W x H)	121 cm x 52 cm x 185 cm (47.6 x 20.5 x 72.8 inches)
Weight	6.25 kg (13.78 lbs)
Maximum Load Capacity	100 kg (220 lbs)
Installation Type	Freestanding
Special Features	Rolling casters (with brakes), Integrated shoe shelf, Heavy-duty construction



Diagram illustrating the dimensions of the Wenko Profi Garment Rack: 121 cm length, 52 cm width, and 185 cm height.

9. WARRANTY INFORMATION

The manufacturer provides a **5-year warranty** for this product. Please retain your proof of purchase for warranty claims. For detailed warranty terms and conditions, please refer to the official WENKO website or contact customer support.

10. CUSTOMER SUPPORT

For further assistance, questions, or to report any issues with your Wenko Profi Rolling Garment Rack, please contact WENKO customer support:

- **Website:** Visit the official [WENKO store on Amazon](#) or the main WENKO corporate website for contact details.
- **Email/Phone:** Refer to the contact information provided on the product packaging or the official WENKO website.

© 2024 WENKO. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00008WZ0Z>

More documents and user manuals: <https://manuals.plus/>