

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Playskool Lullaby Gloworm Model 6552 Instruction Manual

Hasbro 6552

Hasbro Playskool Lullaby Gloworm Model 6552 Instruction Manual

Your guide to setting up and using your Lullaby Gloworm.

INTRODUCTION

The Hasbro Playskool Lullaby Gloworm Model 6552 is a soft, cuddly companion designed to help soothe infants and toddlers to sleep. Featuring a friendly glowing face and gentle lullabies, this toy provides a comforting presence during quiet time and bedtime.

The Gloworm activates its light and music with a simple squeeze, offering a calming experience for your child. It is made from soft, huggable fabric, making it an ideal slumber partner.

PRODUCT FEATURES

- Plays six different soothing lullabies.
- Plastic face lights up with a gentle glow.
- Activates light and music with a gentle squeeze or press on the stomach.
- Soft, huggable fabric construction.
- Features a purple nightshirt with an embroidered moon and star on its nightcap.



Image: The Lullaby Glowworm in its retail packaging, highlighting its key features and design. The toy has a friendly, glowing face and is depicted in a blue and purple outfit.

SETUP AND BATTERY INSTALLATION

The Lullaby Glowworm is shipped in "Demo" mode. For full functionality, follow these steps to install batteries and select an operating mode:

1. Locate the battery compartment on the back of the toy. This compartment is secured with a fabric closure.
2. Open the back closure to access the battery unit.
3. Using a Phillips head screwdriver, open the battery compartment cover.
4. Insert three (3) AA batteries, ensuring correct polarity (+/-). Three AA batteries are included with the product.
5. Replace the battery compartment cover and secure it with the screw.
6. Inside the back closure, locate the mode selector switch. Select one of the three available modes for full use.
7. Close the fabric closure securely.

Warning: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

OPERATING INSTRUCTIONS

Once batteries are installed and a mode is selected, operating the Lullaby Glowworm is simple:

- To activate the glowing face and lullabies, gently squeeze the Glowworm's body or press its stomach.
- The toy will play one of six soothing lullabies and its face will light up.
- The duration of the light and music may vary depending on the selected mode.

CARE AND MAINTENANCE

To ensure the longevity and cleanliness of your Lullaby Glowworm, follow these care instructions:

- **Surface Clean Only:** The Lullaby Glowworm is not machine washable. To clean, gently wipe the surface with a damp cloth and mild soap.
- **Air Dry:** Allow the toy to air dry completely before use. Do not immerse in water.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

If your Lullaby Glowworm is not functioning as expected, please check the following:

- **No Sound or Light:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old or depleted batteries with new AA batteries.
 - Verify that the mode selector switch inside the back closure is set to an active mode, not "Demo" mode.
- **Sound is Too Low or Distorted:**
 - Check battery levels and replace if necessary.
 - Ensure no obstructions are covering the speaker area.

SPECIFICATIONS

Feature	Detail
Brand	Hasbro
Model Number	6552 (06552)
ASIN	B00008X35E
UPC/GTIN	076930065525
Power Source	Battery Powered
Battery Type	3 x AA batteries (included)
Material	Plastic (face), Soft Fabric (body)
Item Weight	0.88 Pounds
Operation Mode	Manual (squeeze/press to activate)
Assembly Required	No
Indoor/Outdoor Usage	Indoor
Educational Objective	Reading

WARRANTY AND SUPPORT

For questions or support regarding your Hasbro Playskool Lullaby Glowworm, please contact Hasbro customer service.

- **Customer Service:** Call 1-800-PLAYSKL
- **Manufacturer:** Hasbro, Pawtucket, RI 02862 USA.
- Product and colors may vary. All rights reserved.

Note: This product was manufactured in 2007. Information regarding specific warranty periods may require direct contact with the manufacturer.

© 2007 Hasbro. All rights reserved. Playskool and Lullaby Gloworm are trademarks of Hasbro.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question