

[Manuals.plus](#) /

› [Nintendo](#) /

› Nintendo Super Smash Bros. Melee GameCube Instruction Manual

Nintendo B000094G2O

Super Smash Bros. Melee Instruction Manual

Model: B000094G2O

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Super Smash Bros. Melee game for the Nintendo GameCube system. Please read this manual thoroughly before use to ensure optimal gameplay and longevity of your product.

2. PACKAGE CONTENTS

Verify that your package contains the following items:

- Super Smash Bros. Melee Game Disc
- Instruction Booklet (this document)



Image: Super Smash Bros. Melee Game Disc. The disc features a colorful label with game artwork.

3. SETUP

1. **Prepare your Nintendo GameCube:** Ensure your GameCube console is connected to a power source and to your

television using the appropriate audio/video cables.

2. **Open the Disc Lid:** Gently press the open button on the GameCube console to lift the disc lid.
3. **Insert the Game Disc:** Carefully place the Super Smash Bros. Melee game disc onto the spindle in the disc tray, with the label side facing up. Ensure the disc is seated correctly.
4. **Close the Disc Lid:** Gently close the disc lid until it clicks into place.
5. **Connect Controllers:** Plug your Nintendo GameCube controllers into the controller ports on the front of the console.
6. **Power On:** Press the POWER button on the GameCube console. The console's indicator light should illuminate.

4. OPERATING INSTRUCTIONS

4.1 Starting the Game

After powering on the GameCube, the system will attempt to read the game disc. The Nintendo GameCube logo will appear on your screen, followed by the game's title screen. If the game does not start, refer to the Troubleshooting section.

4.2 Main Menu Navigation

Use the control stick on your GameCube controller to navigate through the main menu options. Press the A button to select an option and the B button to go back.

4.3 Gameplay Overview

Super Smash Bros. Melee is a fighting game where players select characters from various Nintendo franchises and battle on themed stages. The objective is to knock opponents off the stage. Damage is represented by a percentage, which increases as a character takes hits, making them easier to launch.

- **Character Selection:** Choose from a roster of 25 unique characters, each with distinct moves and abilities.
- **Battle Modes:** The game offers various modes including:
 - *Melee Mode:* Standard battles for 1-4 players.
 - *Adventure Mode:* A single-player journey through various stages and boss fights.
 - *Classic Mode:* A series of battles culminating in a final boss.
 - *All-Star Mode:* Fight against all characters in sequence.
 - *Training Mode:* Practice character moves and combos.
- **Controls:** Familiarize yourself with the controller layout for movement, attacks, special moves, shields, and grabs. The in-game tutorial or instruction booklet provides detailed control information.



Image: Super Smash Bros. Melee character selection screen. Various Nintendo characters are displayed for player choice, with Falco and Fox selected for a match.

5. MAINTENANCE AND CARE

- **Disc Handling:** Always hold the game disc by its edges. Avoid touching the reflective surface.
- **Cleaning the Disc:** If the disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive cleaners or solvents.
- **Storage:** Store the game disc in its original case when not in use to protect it from dust and scratches. Keep it away from direct sunlight and extreme temperatures.
- **Console Care:** Ensure your GameCube console is kept in a clean, dust-free environment with adequate ventilation.

6. TROUBLESHOOTING

Problem	Solution
Game does not start or "Disc could not be read" error appears.	1. Ensure the game disc is clean and free of scratches. Clean if necessary (refer to Section 5). 2. Verify the disc is inserted correctly, label side up, and fully seated on the spindle. 3. Ensure the GameCube disc lid is fully closed. 4. Turn the GameCube console off, wait a few seconds, then turn it back on. 5. If the problem persists, try another GameCube game to determine if the issue is with the console or the game disc.
Controller inputs are not responding.	1. Ensure the controller is securely plugged into the GameCube controller port. 2. Try plugging the controller into a different port. 3. Test with another GameCube controller if available.
No audio or video output.	1. Check all audio/video cable connections between the GameCube and your television. 2. Ensure your television is set to the correct input channel (e.g., AV1, Component, HDMI if using an adapter). 3. Verify the television's volume is not muted or set too low.

7. SPECIFICATIONS

- **Product Name:** Super Smash Bros. Melee
- **Platform:** Nintendo GameCube
- **ASIN:** B000094G2O
- **Item Weight:** 0.01 ounces
- **Product Dimensions:** 7.5 x 0.75 x 5.5 inches (packaging)
- **Release Date:** August 13, 2008 (Date First Available on Amazon)
- **Rating:** Rating Pending (ESRB rating not specified in data, using provided "Rating Pending")

8. WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support, please refer to the official Nintendo website or contact the retailer from whom the game was purchased. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question