

Fiskars 7947

Fiskars 10 Inch POWER TOOTH Folding Saw (Model 7947) Instruction Manual

INTRODUCTION

The Fiskars 10 Inch POWER TOOTH Folding Saw (Model 7947) is designed for efficient pruning and cutting of wood. It features a patented Razor Tooth Power Tooth blade for aggressive cutting on the pull stroke, reducing binding. The saw is equipped with a comfortable hardwood handle and a secure folding mechanism for safety and convenience.

SAFETY INFORMATION

- Always wear appropriate safety gear, including eye protection and gloves, when operating the saw.
- Keep hands and body clear of the blade during operation.
- Ensure the blade is securely locked in the open position before use.
- Store the saw in its folded and locked position when not in use, out of reach of children.
- Do not use the saw for purposes other than its intended use.

PRODUCT FEATURES

- Conveniently designed saw ideal for aggressive cutting without binding.
- Comfortable hardwood handle with easy grip design.
- 10-inch patented Power Tooth blade.
- Easy-to-use push button lock for added safety.
- Fully hardened carbon-steel blade holds a sharp edge longer.



An image showing the Fiskars 10 Inch POWER TOOTH Folding Saw. The saw is depicted in both its folded, compact state and its open, ready-to-use position, highlighting the 10-inch serrated blade and the wooden handle.

SETUP

To prepare the saw for use, locate the push-button lock mechanism near the pivot point of the blade. Press the button and carefully unfold the blade until it clicks securely into the open position. Ensure the blade is fully locked before beginning any cutting tasks.

OPERATING INSTRUCTIONS

Position the material to be cut securely. Begin cutting with a light push stroke to initiate the cut, then apply pressure primarily on the pull stroke. The patented Power Tooth blade is designed to cut efficiently on the pull stroke and clear debris on the push stroke. Maintain a steady rhythm and avoid excessive force, allowing the blade to do the work. For larger branches, consider making an undercut first to prevent bark stripping.

MAINTENANCE

After each use, clean the blade of any sap, resin, or debris using a damp cloth. For stubborn residue, a mild solvent designed for garden tools can be used. Dry the blade thoroughly to prevent rust. Periodically check the blade for sharpness. While the carbon-steel blade is designed to hold an edge, professional sharpening may be required over time. Do not attempt to sharpen the blade yourself unless you have appropriate tools and expertise.

STORAGE

To store the saw, press the push-button lock and carefully fold the blade back into the handle until it is fully enclosed and locked. This protects the blade and prevents accidental injury. Store the folded saw in a dry place, away from moisture and extreme temperatures.

TROUBLESHOOTING

Blade Binding: If the blade binds during cutting, it may be due to improper technique or cutting material that is too large or under tension. Ensure you are cutting primarily on the pull stroke. For larger branches, make an undercut first to relieve pressure. If binding persists, remove the saw, reposition, and restart the cut carefully.

SPECIFICATIONS

Brand	Fiskars
--------------	---------

Model Number	7947 (also known as 79476935J)
Blade Material	Carbon Steel
Blade Length	10 Inches
Blade Shape	Serrated (Power Tooth design)
Handle Material	Wood
Power Source	Manual
Item Weight	3.2 ounces
GTIN/UPC	046561179472

WARRANTY AND SUPPORT

The Fiskars 10 Inch POWER TOOTH Folding Saw (Model 7947) comes with a **Lifetime Warranty**. For warranty claims or product support, please contact Fiskars directly or visit the official [Fiskars Store](#).