

[Manuals.plus](#) /

› [jWIN](#) /

› JWIN JL705 Projection & LED Alarm Clock Radio User Manual

jWIN JL705

JWIN JL705 Projection & LED Alarm Clock Radio User Manual

Model: JL705

Brand: jWIN

1. INTRODUCTION

Thank you for purchasing the JWIN JL705 Projection & LED Alarm Clock Radio. This manual provides detailed instructions for the setup, operation, and maintenance of your new device. Please read this manual thoroughly before use to ensure proper functionality and to maximize your user experience.

The JL705 combines a digital alarm clock with an AM/FM radio and a unique projection feature, allowing you to project the time onto a wall or ceiling. It features a 120-degree projection with focus adjustment, a multi-jog dial for easy time and alarm setting, and a projection on/off switch.

2. SAFETY INFORMATION

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not expose the unit to water, moisture, or extreme temperatures.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Ensure proper ventilation. Do not block any ventilation openings.
- Use only attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PRODUCT OVERVIEW

The JWIN JL705 is designed for ease of use and includes several key components:



Figure 1: JWIN JL705 Projection & LED Alarm Clock Radio. This image displays the JWIN JL705 Projection & LED Alarm Clock Radio. The device features a circular main body with a digital LED display on the front showing '12:00'. Above the main body, a projection arm extends, casting the time '12:00' onto a surface, demonstrating its projection capability. The device has a silver trim around the display and a 'SNOOZE' button visible at the top.

Key Features:

- **Projection Display:** Projects time onto a wall or ceiling with 120-degree rotation and focus adjustment.
- **LED Display:** Clear digital time display on the front panel.
- **Multi Jog Dial:** Intuitive control for setting time and alarms.
- **AM/FM Radio:** Built-in tuner for listening to your favorite radio stations.
- **Alarm Function:** Set alarms with radio or buzzer options.
- **Snooze Function:** Temporarily pauses the alarm.

4. SETUP

4.1 Power Connection

1. Unpack the JWIN JL705 and all accessories from the packaging.
2. Connect the AC power adapter (not included, if applicable, or use the integrated power cord) to the DC input jack on the back of the unit.
3. Plug the other end of the power adapter into a standard wall outlet.
4. The LED display should illuminate, indicating the unit is receiving power.

4.2 Battery Backup (Optional)

While the unit operates on AC power, it may have a battery compartment for backup power (batteries not included). This feature helps retain time and alarm settings during a power outage.

1. Locate the battery compartment on the bottom or back of the unit.
2. Open the compartment cover.
3. Insert the required batteries (e.g., 2 x AAA or 9V, refer to the compartment label) observing the correct polarity (+/-).
4. Close the battery compartment cover securely.

5. OPERATING INSTRUCTIONS

5.1 Setting the Time

1. Press and hold the **TIME SET** button (or rotate the Multi Jog Dial to the 'Time Set' position).
2. The hour digits on the LED display will begin to flash.
3. Rotate the **Multi Jog Dial** to adjust the hour. Pay attention to AM/PM indicators if present.
4. Press the **TIME SET** button again (or push the Multi Jog Dial) to confirm the hour and move to minute setting.
5. Rotate the **Multi Jog Dial** to adjust the minutes.
6. Press the **TIME SET** button (or push the Multi Jog Dial) one last time to save the time setting.

5.2 Setting the Alarm

1. Press and hold the **ALARM SET** button (or rotate the Multi Jog Dial to the 'Alarm Set' position).
2. The alarm hour digits will flash. Rotate the **Multi Jog Dial** to set the desired alarm hour.
3. Press the **ALARM SET** button again to confirm the hour and move to minute setting.
4. Rotate the **Multi Jog Dial** to set the desired alarm minutes.
5. Press the **ALARM SET** button again to save the alarm time.
6. Use the **ALARM MODE** switch/button to select the alarm source (Buzzer or Radio).

5.3 Radio Operation

1. Press the **POWER/RADIO ON/OFF** button to turn on the radio.
2. Use the **AM/FM** switch to select the desired band.
3. Rotate the **TUNING** dial (or use the Multi Jog Dial in tuning mode) to find your desired station.
4. Adjust the volume using the **VOLUME** dial.
5. Extend the FM wire antenna fully for better reception. For AM, rotate the unit for best reception.

5.4 Projection Feature

1. Locate the projection lens on top of the unit.
2. Use the **PROJECTION ON/OFF** switch to activate or deactivate the projection.
3. Rotate the projection arm to adjust the angle of the projected time (up to 120 degrees).
4. Adjust the **FOCUS** dial (usually near the projection lens) until the projected time is clear and sharp on the surface.

5.5 Snooze Function

When the alarm sounds, press the large **SNOOZE** button located on top of the unit. The alarm will temporarily stop and sound again after approximately 9 minutes.

6. MAINTENANCE

6.1 Cleaning

- Before cleaning, unplug the unit from the power outlet.
- Use a soft, dry cloth to wipe the exterior surfaces of the unit.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Gently wipe the projection lens with a soft, lint-free cloth to ensure clear projection.

6.2 Storage

If you plan to store the unit for an extended period, unplug it from the power source and remove any backup batteries to prevent leakage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Power cord not securely plugged in.	Check power connection to the unit and wall outlet.
Alarm does not sound.	Alarm not set or alarm volume too low. Alarm mode incorrect.	Verify alarm time and ensure alarm is activated. Check alarm volume and mode (Buzzer/Radio).
Poor radio reception.	Antenna not extended or unit position.	Extend FM wire antenna fully. For AM, rotate the unit for best reception.
Projected time is blurry.	Focus not adjusted.	Rotate the FOCUS dial near the projection lens until the image is clear.

8. SPECIFICATIONS

Feature	Detail
Model	JL705
Brand	jWIN
Display Type	Digital LED
Projection	120-degree rotation with focus adjustment
Radio Tuner	AM/FM
Power Source	AC Power (Battery backup optional, batteries not included)
Dimensions (L x W x H)	13.03 x 18.26 x 11.86 cm (5.13 x 7.19 x 4.67 inches)
Weight	1.36 kg (3 lbs)

9. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. Specific warranty terms may vary by region and retailer.

For technical support or further assistance, please visit the official jWIN website or contact their customer service department. Contact details are typically available on the manufacturer's website or product packaging.

© 2023 jWIN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B000095S6N>

More documents and user manuals: **<https://manuals.plus/>**