

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Waring](#) /

› [Waring WMK300 Belgian Waffle Maker Instruction Manual](#)

Waring WMK300

Waring WMK300 Belgian Waffle Maker Instruction Manual

Model: WMK300 | Brand: Waring

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electrical shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to OFF, then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Waring WMK300 Belgian Waffle Maker is designed to produce professional-quality Belgian waffles with extra-deep pockets. Its unique 180-degree rotary feature ensures consistent baking and even browning, resulting in perfect, large, round, restaurant-style waffles.



Image: The Waring WMK300 Belgian Waffle Maker with its lid open, revealing the non-stick waffle grids. The handle is extended upwards, and the unit sits on its base.

SETUP

- Unpacking:** Carefully remove the waffle maker from its packaging. Retain all packaging materials for future storage or shipping.
- Initial Cleaning:** Wipe down the exterior of the unit with a damp cloth. The non-stick plates should be wiped clean with a damp cloth or sponge. Do not use abrasive cleaners or scouring pads.
- Positioning:** Place the waffle maker on a clean, flat, stable, and heat-resistant surface. Ensure there is adequate ventilation around the unit.
- Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.
- Seasoning (First Use):** Before first use, lightly brush the non-stick grids with vegetable oil or cooking spray. Close the lid and preheat the unit. Once preheated, unplug and let it cool. Wipe off any excess oil. This helps maintain the non-stick surface.

OPERATING INSTRUCTIONS

- Preheating:** Plug in the waffle maker. The red 'POWER' indicator light will illuminate. Turn the browning control knob to your desired setting (1-6). The green 'READY' indicator light will illuminate when the unit is preheated and ready for use. An audio beep tone will also sound.
- Adding Batter:** Open the lid. Pour approximately 3/4 cup of waffle batter onto the center of the lower grid. Distribute the batter evenly.
- Closing and Rotating:** Close the lid and immediately rotate the waffle maker 180 degrees using the handle. This ensures even distribution of batter and consistent cooking.
- Cooking:** The green 'READY' light will turn off during cooking. It will re-illuminate, and an audio beep tone will sound when the waffle is done according to your selected browning setting.

5. **Removing Waffle:** Rotate the waffle maker back to its upright position. Open the lid and carefully remove the cooked waffle using a heat-resistant, non-metallic utensil (e.g., plastic or wooden spatula). Do not use metal utensils as they can damage the non-stick coating.
6. **Drip Tray:** The removable drip tray catches any excess batter that may overflow during cooking, making cleanup easier.



Image: The Waring WMK300 Belgian Waffle Maker in its closed position, showcasing its brushed stainless steel housing and the removable drip tray at the base.

MAINTENANCE & CLEANING

1. **Cool Down:** Always unplug the waffle maker and allow it to cool completely before cleaning.
2. **Cleaning Grids:** The non-stick grids should be cleaned with a damp cloth or sponge. For stubborn batter, pour a small amount of cooking oil onto the batter and let it sit for 5 minutes, then wipe clean. Do not use steel wool or abrasive cleaners.
3. **Cleaning Exterior:** Wipe the exterior of the waffle maker with a soft, damp cloth. Dry thoroughly.
4. **Drip Tray:** The removable drip tray can be washed in warm, soapy water or placed on the top rack of a dishwasher.
5. **Storage:** Store the waffle maker in a clean, dry place.

TROUBLESHOOTING

- **Waffles sticking:** Ensure the grids were properly seasoned before first use. Lightly brush or spray the grids with cooking oil before each batch of waffles. Do not use too much batter, as overflow can cause sticking.
- **Uneven browning:** Make sure to rotate the waffle maker 180 degrees immediately after closing the lid with batter inside. Adjust the browning control knob to a higher setting for darker waffles or a lower setting for lighter waffles.

- **Waffle maker not heating:** Check if the unit is properly plugged into a working electrical outlet. Ensure the 'ON' switch is engaged. If the issue persists, contact customer support.
- **Excessive steam:** Some steam is normal during cooking. If steam is excessive and prolonged, it might indicate too much batter or a need to adjust the browning setting.

SPECIFICATIONS

Brand	Waring
Model Number	WMK300
Color	Brushed Stainless
Material	Stainless Steel
Product Dimensions	16.25"D x 9.25"W x 7.75"H
Item Weight	9 Pounds
Voltage	120 Volts
Number of Settings	6 (Browning Control)
Special Feature	Deep Pockets

WARRANTY & SUPPORT

This Waring WMK300 Belgian Waffle Maker comes with a **Limited 1-Year Appliance Warranty**. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your product packaging or visit the official Waring website.

© 2026 Waring. All rights reserved.