

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Toastmaster](#) /
- › [Toastmaster TBR15 1-1/2-Pound Breadmaker User Manual](#)

## Toastmaster TBR15

# Toastmaster TBR15 1-1/2-Pound Breadmaker User Manual

Model: TBR15

## INTRODUCTION

---

Welcome to your new Toastmaster TBR15 1-1/2-Pound Breadmaker. This manual provides essential information for the safe and efficient operation of your appliance. Please read all instructions carefully before first use.



Image of the Toastmaster TBR15 1-1/2-Pound Breadmaker, a white appliance with a control panel and viewing window on top.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

## SETUP

---

### Unpacking

Carefully remove the breadmaker and all accessories from the packaging. Retain packaging for future storage or shipping.

### First Use Preparation

1. Before first use, wipe the exterior of the breadmaker with a damp cloth.
2. Wash the bread pan and kneading paddle with warm, soapy water. Rinse and dry thoroughly.
3. To eliminate any manufacturing odors, run the "Bake Only" cycle for 10 minutes without any ingredients. Ensure adequate ventilation during this process.

### Placement

Place the breadmaker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure there is adequate clearance around the unit for ventilation.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview



The control panel features an electronic touchpad with a digital display, program indicator lights, and buttons for selecting settings.

The Toastmaster TBR15 features an electronic touchpad with a digital display and various program buttons.

- **Display:** Shows program number, time remaining, and other indicators.
- **Menu Button:** Selects one of the 8 available programs.
- **Crust Control Button:** Adjusts crust darkness (Light, Medium, Dark).
- **Delay Timer Buttons (+/-):** Sets the delay start time for up to 13 hours.
- **Start/Stop Button:** Initiates or cancels a program.

## Bread Programs

The breadmaker offers 8 different settings:

1. **Basic:** For white and mixed breads.
2. **Fast Bake:** For quick baking of basic breads.
3. **French:** For light breads made from fine flour.
4. **Whole Wheat:** For breads containing a high percentage of whole wheat flour.
5. **Sweet:** For breads with high sugar, fats, and proteins.
6. **Quick Bread:** For breads using baking powder/soda instead of yeast.
7. **Dough:** Prepares dough for rolls, pizza, or other baked goods.
8. **Bake Only:** For baking pre-made dough or adding extra baking time.

## Basic Bread Making Steps

1. **Add Ingredients:** Place ingredients into the bread pan in the order specified by your recipe (liquids first, then dry ingredients, yeast last). Ensure the kneading paddle is properly installed.
2. **Insert Pan:** Place the bread pan securely into the breadmaker.
3. **Select Program:** Press the **Menu** button to choose your desired bread program.
4. **Select Crust:** Press the **Crust Control** button to select Light, Medium, or Dark crust.
5. **Set Delay (Optional):** If you wish to delay the start, use the +/- buttons to set the desired delay time.
6. **Start:** Press the **Start/Stop** button. The breadmaker will begin the selected cycle.
7. **Completion:** Once the cycle is complete, the breadmaker will beep and automatically switch to a 1-hour "Keep Warm" cycle.
8. **Remove Bread:** Carefully remove the bread pan using oven mitts. Invert the pan to release the bread. Allow bread to cool on a wire rack before slicing.

## MAINTENANCE AND CLEANING

### Daily Cleaning

1. **Unplug:** Always unplug the breadmaker from the power outlet and allow it to cool completely before cleaning.
2. **Bread Pan and Kneading Paddle:** Remove the bread pan and kneading paddle. Wash them with warm, soapy water using a soft sponge. Do not use abrasive cleaners or scourers. Rinse thoroughly and dry completely.
3. **Interior:** Wipe the interior of the baking chamber with a damp cloth. Do not immerse the unit in water.
4. **Exterior:** Wipe the exterior surface with a soft, damp cloth.

### Storage

Ensure the breadmaker is clean and dry before storing. Store in a cool, dry place.

### Product Care Instructions

As per manufacturer recommendations, wipe with a dry cloth for general cleaning of the exterior. For the bread pan and paddle, use warm, soapy water.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bread does not rise	Incorrect yeast amount; expired yeast; water too hot/cold; incorrect ingredient ratio.	Check yeast freshness and quantity. Ensure water temperature is between 105-115°F (40-46°C). Verify ingredient measurements.
Bread is too dense	Too much flour; not enough liquid; old yeast.	Measure flour accurately (spoon into cup, level off). Add liquid gradually if dough appears too dry. Use fresh yeast.
Bread sticks to pan	Pan not properly greased (if recipe requires); pan worn.	Ensure pan is clean and dry. If pan is old, non-stick coating may be compromised.
Kneading paddle stuck in bread	Common occurrence.	Allow bread to cool slightly. Use a non-metallic utensil to gently remove the paddle.
Unit not turning on	Not plugged in; power outage; faulty outlet.	Check power cord connection. Test outlet with another appliance.

## SPECIFICATIONS

**Brand:** Toastmaster

**Model:** TBR15

**Capacity:** 1.5 Pounds (for horizontal loaves)

**Color:** White

**Number of Programs:** 8

**Delay Timer:** Up to 13 hours

**Keep Warm Cycle:** 1 hour

**Product Dimensions:** 13.5 x 13.5 x 12.25 inches

**Item Weight:** 11.4 pounds

**UPC:** 048109350473

## WARRANTY AND SUPPORT

### Warranty Information

This Toastmaster TBR15 Breadmaker comes with a 1-year limited warranty from the date of purchase. Please refer to your purchase documentation for specific terms and conditions. Keep your proof of purchase for warranty claims.

### Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Toastmaster customer support. Visit the official Toastmaster website for contact information or refer to the documentation included with your product.

You can also find additional information and support resources on the [Toastmaster Store on Amazon](#).

