

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix A210 Digital Camera User Manual

Fujifilm A210

Fujifilm FinePix A210 Digital Camera User Manual

Model: A210

INTRODUCTION

This manual provides essential information for the safe and effective operation of your Fujifilm FinePix A210 Digital Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference.



Figure 1: Fujifilm FinePix A210 Digital Camera. This image shows the silver-colored camera from a slight angle, highlighting its lens, flash, and the "FinePix A210" branding.

PACKAGE CONTENTS

Verify that all items are present in your camera package:

- Fujifilm FinePix A210 Digital Camera
- 16 MB xD-Picture Card
- 2 AA Alkaline Batteries
- USB Cable
- A/V Cable
- Hand Strap
- Cradle Adapter
- Software CD-ROM (includes FinePix View 4.0, ImageMixer VCD, QuickTime 5, USB drivers)

SETUP

1. Inserting Batteries

Open the battery compartment cover located on the bottom of the camera. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the cover securely. For optimal performance and longer battery life, rechargeable NiMH batteries are recommended.

2. Inserting the xD-Picture Card

Locate the memory card slot, typically near the battery compartment. Insert the 16 MB xD-Picture Card with the label facing the correct direction until it clicks into place. To remove, press the card gently to release it.

3. Attaching the Hand Strap

Thread the hand strap through the strap eyelet on the side of the camera. Secure it firmly to prevent accidental drops.

4. Initial Power On and Date/Time Setting

Press the power button to turn on the camera. The first time you power on, you may be prompted to set the date and time. Use the camera's navigation buttons to adjust the settings and confirm.

OPERATING INSTRUCTIONS

Taking Still Photos

1. **Power On:** Press the power button to turn on the camera. The lens will extend.
2. **Select Mode:** Use the mode dial or buttons to select the desired shooting mode (e.g., Auto, Program).
3. **Frame Your Shot:** Use the 1.5-inch LCD monitor or the optical viewfinder to compose your image.
4. **Zoom:** Use the zoom lever/buttons to adjust the 3x optical zoom (equivalent to 36-108mm) or 3.2x digital zoom.
5. **Focus:** Press the shutter button halfway down to allow the camera to autofocus. The focus indicator will confirm focus.
6. **Capture:** Press the shutter button fully down to take the picture.
7. **Flash:** The built-in pop-up flash can be set to auto, red-eye reduction, forced flash, suppressed flash, or slow synchro modes.
8. **Self-Timer:** Activate the 10-second self-timer for delayed shots.

Recording Movies

The FinePix A210 can record video clips without audio.

- **Movie Mode:** Switch the camera to movie recording mode.
- **Start/Stop Recording:** Press the shutter button to start recording. Press it again to stop.
- **Resolutions:**
 - 320 x 240 pixels for up to 60 seconds
 - 160 x 120 pixels for up to 240 seconds (4 minutes)

Playback and Viewing

Switch the camera to playback mode to review your photos and videos on the LCD screen. Use the navigation buttons to scroll through images. You can also connect the camera to a TV using the A/V cable to view images on a larger screen.

Transferring Images to a Computer

Connect the camera to your computer using the supplied USB cable. The camera is compatible with Windows Me/2000/XP and Mac OS 8.6 or later without additional software installation. For enhanced management, install the

FinePix View 4.0 software from the included CD-ROM.

Alternatively, images can be transferred using the optional CP-FXA10 Picture Cradle (sold separately), which also allows for charging NiMH batteries.

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. Do not use abrasive materials or harsh chemicals.
- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water.
- **Battery Care:** Remove batteries if the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Storage:** Store the camera in a dry, dust-free environment away from extreme temperatures and direct sunlight.
- **Memory Card Care:** Avoid bending or exposing the xD-Picture Card to static electricity. Format the card periodically (this will erase all data) to maintain optimal performance.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Camera does not power on.	Check if batteries are inserted correctly with proper polarity. Batteries may be depleted; replace with fresh alkaline or charged NiMH batteries. Battery compartment cover may not be closed securely.
Pictures are blurry.	Ensure the lens is clean. Hold the camera steady during shooting. Ensure the camera has focused before fully pressing the shutter button. Check lighting conditions; use flash in low light.
Memory card error.	Reinsert the xD-Picture Card. The card may be full; delete some images or insert a new card. The card may be corrupted; try formatting the card (<i>all data will be lost</i>).
Cannot transfer images to computer.	Ensure the USB cable is securely connected to both the camera and the computer. Verify the camera is in the correct mode for PC connection. Check if USB drivers are installed (if required for your operating system, refer to CD-ROM). Try a different USB port on your computer.

SPECIFICATIONS

Feature	Detail
Model Name	Fujifilm FinePix A210
Effective Pixels	3.2 Million (3.2 MP)
Image Sensor	1/2.7-inch CCD

Feature	Detail
Optical Zoom	3x Fujinon (equivalent to 36-108mm on a 35mm camera)
Digital Zoom	3.2x
LCD Monitor	1.5-inch TFT color LCD
Viewfinder	Real-image optical viewfinder
Storage Media	xD-Picture Card (16 MB included)
Still Image Format	JPEG (Exif 2.2)
Movie Recording	AVI (Motion JPEG) without audio; 320x240 (60s), 160x120 (240s)
ISO Sensitivity	Equivalent to ISO 80
Shutter Speed	1/2000 sec. to 1/2 sec.
Flash Modes	Auto, Red-eye Reduction, Forced Flash, Suppressed Flash, Slow Synchro
White Balance	Automatic, Manual (Fine, Shade), Fluorescent (Daylight, Warm White, Cool White), Incandescent, Custom
Power Supply	2 AA alkaline batteries (included) or NiMH rechargeable batteries (recommended)
Dimensions (WxHxD)	Approx. 3.9 x 2.6 x 2.1 inches (99 x 66 x 53 mm)
Weight	Approx. 6.2 ounces (175g) excluding batteries and media
Connectivity	USB 1.1, A/V Out

WARRANTY INFORMATION

The Fujifilm FinePix A210 Digital Camera comes with a **1 Year Parts/Labor Warranty** from the manufacturer. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your product packaging or visit the official Fujifilm website.

SUPPORT

For further assistance, technical support, or to download the full user manual in PDF format, please visit the official Fujifilm support website or contact their customer service. A PDF version of the user manual is available at: [Fujifilm A210 User Manual \(PDF\)](#). You can also visit the Fujifilm Store on Amazon for product information and accessories:[Fujifilm Store](#).

