

Karcher 6.294-035

Karcher Plastiquereiniger RM 570 User Manual

Model: 6.294-035

1. INTRODUCTION

Welcome to the user manual for your Karcher Plastiquereiniger RM 570. This product is designed to effectively clean, protect, and maintain various plastic surfaces, including garden furniture, garden tools, and plastic window frames. Please read this manual carefully before using the product to ensure safe and optimal results. Proper use will extend the life and appearance of your plastic items.

2. SAFETY INSTRUCTIONS

WARNING: Always follow these safety guidelines to prevent injury or damage.

- Keep out of reach of children and pets.
- Avoid contact with eyes and skin. In case of contact, rinse immediately with plenty of water and seek medical advice if irritation persists.
- Do not ingest. If swallowed, seek immediate medical attention and show the product label.
- Use in a well-ventilated area.
- Do not mix with other cleaning agents or chemicals.
- Store in a cool, dry place, away from direct sunlight and extreme temperatures.
- Always test the product on an inconspicuous area first to ensure compatibility and colorfastness.

3. PRODUCT OVERVIEW

The Karcher Plastiquereiniger RM 570 is a high-quality cleaning solution specifically formulated for plastic surfaces. It comes in a convenient 5-litre container, providing ample volume for extensive cleaning tasks.



Image shows a bright yellow 5-litre container of Karcher Plastikereiniger RM 570. The label on the front displays the Karcher logo and product name, with an illustration of clean garden furniture on a wooden deck.

Key Features:

- **Volume:** 5 litres
- **Purpose:** Cleans, protects, and maintains plastic surfaces.
- **Applications:** Ideal for garden furniture, garden tools, plastic window frames, and other plastic items.

4. SETUP

1. **Surface Preparation:** Ensure the plastic surface is free from loose dirt, dust, or debris. For heavily soiled areas, a preliminary rinse with water may be beneficial.
2. **Product Readiness:** The Karcher Plastikereiniger RM 570 is typically ready-to-use. If specific dilution instructions are provided on the product label, follow them precisely.
3. **Application Method:** For best results, use a suitable spray bottle or apply directly onto a clean cloth or sponge.

5. OPERATING

1. **Apply the Cleaner:** Spray or apply the Plastikereiniger RM 570 evenly onto the plastic surface. Ensure complete coverage of the area to be cleaned.
2. **Allow to Dwell:** Let the cleaner work for a few minutes. The exact dwell time may vary depending on the level of soiling. Do not allow the product to dry on the surface.
3. **Agitate (if necessary):** For stubborn dirt, gently agitate the surface with a soft brush or sponge.
4. **Rinse Thoroughly:** Rinse the treated surface thoroughly with clean water, preferably using a garden hose or a damp cloth, until all cleaner residue is removed.
5. **Dry:** Allow the surface to air dry or wipe it dry with a clean, lint-free cloth for a streak-free finish.

6. MAINTENANCE

Proper maintenance of your cleaning tools and the product itself ensures longevity and effectiveness.

- **Cleaning Tools:** After each use, rinse any spray bottles, cloths, or sponges used for application with clean water.
- **Product Storage:** Store the Karcher Plastiquereiniger RM 570 in its original container, tightly sealed, in a cool, dry place, away from direct sunlight and freezing temperatures.
- **Disposal:** Dispose of empty containers and any unused product according to local regulations. Do not pour down drains or into waterways.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Streaks or residue left on surface	Insufficient rinsing; product dried on surface; too much product used.	Rinse more thoroughly with clean water; re-apply and rinse before it dries; use less product.
Dirt not completely removed	Insufficient dwell time; heavy soiling; surface not pre-cleaned.	Allow longer dwell time; agitate with a brush; pre-clean heavily soiled areas.
Surface discoloration or damage	Product not suitable for surface material; not tested on inconspicuous area.	Always test on an inconspicuous area first. This product is specifically for plastic surfaces.

8. SPECIFICATIONS

Product Name: Karcher Plastiquereiniger RM 570

Model Number: 6.294-035

Part Number: Kae-6.294-035.0

Volume: 5 litres

Item Weight: 5.28 kg

Package Dimensions: 23.6 x 19.2 x 15 cm

Manufacturer: Karcher

9. WARRANTY INFORMATION

This Karcher product is covered by a manufacturer's warranty. For specific details regarding the warranty period, terms, and conditions, please refer to the documentation included with your purchase or visit the official Karcher website. Please retain your proof of purchase for any warranty claims.

10. SUPPORT

For further assistance, technical support, or inquiries regarding the Karcher Plastiquereiniger RM 570, please contact Karcher customer service. You can find contact information and additional resources on the official Karcher website:

Visit Karcher Official Website

Please have your product model number (RM 570 or 6.294-035) and any relevant purchase details ready when contacting support.