

[manuals.plus](#) /

› [Logitech](#) /

› [Logitech Cordless Click! Optical Mouse User Manual Model 930952-0403](#)

Logitech 930952-0403

Logitech Cordless Click! Optical Mouse User Manual

Model: 930952-0403

1. INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Logitech Cordless Click! Optical Mouse. This device offers responsive cordless performance and smooth optical tracking for an enhanced computing experience.



Image 1.1: Logitech Cordless Click! Optical Mouse. This image displays the silver-colored cordless optical mouse from a top-down perspective, highlighting its ergonomic shape and button layout.

2. PACKAGE CONTENTS

Verify that your package contains the following items:

- Logitech Cordless Click! Optical Mouse
- USB Wireless Receiver
- AA Batteries (may be pre-installed or included separately)
- User Documentation (this manual)

3. SETUP

3.1. Installing Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

3.2. Connecting the USB Wireless Receiver

1. Plug the USB wireless receiver into an available USB port on your computer.
2. Your operating system should automatically detect and install the necessary drivers. This process may take a few moments.
3. Once installed, the mouse should be ready for use.

4. OPERATING THE MOUSE

The Logitech Cordless Click! Optical Mouse is designed for intuitive use with its ambidextrous, sculpted shape.

4.1. Basic Functions

- **Left-Click Button:** Primary selection and activation.
- **Right-Click Button:** Accesses contextual menus.
- **Scroll Wheel:** Scroll documents and web pages vertically. The scroll wheel may also function as a middle-click button.

4.2. Quick Switch Button

The mouse features a handy Quick Switch button, typically located near the scroll wheel. Refer to your operating system's mouse settings for customization options related to this button.

4.3. Optical Tracking

The advanced optical sensor provides smooth and precise cursor control on most surfaces. No mouse pad is required for optimal performance, though a clean, non-reflective surface is recommended.

5. MAINTENANCE

5.1. Battery Replacement

When the mouse performance degrades or the indicator light (if present) signals low power, replace the two AA batteries following the instructions in Section 3.1.

5.2. Cleaning

To clean the mouse, use a soft, dry, or slightly damp cloth. Avoid using harsh chemicals or abrasive cleaners. Ensure no liquid enters the optical sensor opening.

6. TROUBLESHOOTING

- **Mouse not responding:**

- Check battery installation and replace batteries if necessary.
- Ensure the USB wireless receiver is securely plugged into a working USB port.
- Try plugging the receiver into a different USB port.
- Move the mouse closer to the receiver to rule out interference.

- **Erratic cursor movement:**

- Clean the optical sensor area on the underside of the mouse.
- Ensure the surface you are using the mouse on is clean and non-reflective. Avoid highly reflective or transparent surfaces.

- **Connectivity issues:**

- Other wireless devices (e.g., Wi-Fi routers, cordless phones) may cause interference. Try to minimize their proximity to the mouse and receiver.
- Re-establish the connection between the mouse and receiver if your model supports a connect button (refer to specific product details if available).

7. SPECIFICATIONS

Feature	Detail
Model Number	930952-0403
Connectivity Technology	Radio Frequency, Wireless
Movement Detection Technology	Optical
Batteries Required	2 AA batteries
Color	Silver
Product Dimensions	9.25 x 9.25 x 2.5 inches
Item Weight	1.1 pounds

8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official Logitech website. For technical support, product registration, or to download the latest software, please visit www.logitech.com/support.

