

Fujifilm CP-FXA10

Fujifilm FinePix CP-FXA10 Universal Cradle Instruction Manual

Model: CP-FXA10

1. INTRODUCTION

The Fujifilm FinePix CP-FXA10 Universal Cradle is designed to enhance the functionality of compatible Fujifilm FinePix digital cameras. This cradle provides convenient features such as battery charging, easy image transfer to a personal computer, PC-Cam mode, and video output for television viewing. It is compatible with various FinePix A-series and E-series models, utilizing specific adapters for each camera type.

2. SAFETY INFORMATION

- Do not expose the cradle to water or excessive moisture.
- Use only the specified AC adapter (AC-3VW) and NH-10 Ni-MH battery with this device.
- Avoid disassembling or modifying the cradle. Refer servicing to qualified personnel.
- Keep out of reach of children.
- Ensure proper ventilation when in use to prevent overheating.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Fujifilm FinePix CP-FXA10 Universal Cradle
- USB Cable
- NH-10 Ni-MH Battery
- AC-3VW AC Power Adapter
- Camera-specific adapter (included with compatible cameras, not the cradle itself)



The image displays the product packaging for the Fujifilm FinePix CP-FXA10 Picture Cradle. The box highlights key features such as convenient NH-10 battery charging, easy image transfer to PC via USB, and compatibility with FinePix A310, A210, A205, A205S, A330, A340, E500, E510, and E550 digital cameras. It also indicates that an AC adapter and rechargeable battery are included.

4. SETUP

4.1 Connecting the AC Adapter

1. Connect the AC-3VW AC Power Adapter to the DC IN port on the back of the CP-FXA10 cradle.
2. Plug the AC adapter into a standard electrical outlet. The power indicator on the cradle may illuminate.

4.2 Inserting the Camera

The CP-FXA10 cradle requires a camera-specific adapter for proper fit and connection. This adapter is typically supplied with your compatible FinePix camera.

1. Ensure the correct adapter for your camera model (e.g., A205, A210, A310, A330, A340, E510, E550) is securely placed in the cradle.
2. Carefully align your FinePix digital camera with the adapter and the cradle's connector.
3. Gently press the camera down until it is firmly seated in the cradle.

4.3 Connecting to a Personal Computer (PC)

1. Connect one end of the supplied USB cable to the USB port on the CP-FXA10 cradle.
2. Connect the other end of the USB cable to an available USB port on your computer.

3. Ensure your camera is properly seated in the cradle and powered on (if required by your camera model).

5. OPERATING THE CRADLE

5.1 Charging the NH-10 Ni-MH Battery

When a compatible FinePix camera with an NH-10 Ni-MH battery pack is correctly seated in the cradle and the AC adapter is connected, the cradle will automatically begin charging the battery. The smart power system detects battery type and prevents charging of alkaline batteries, protecting the camera.

- Charging time for the NH-10 Ni-MH battery pack is approximately two hours.
- Refer to your camera's manual for specific battery indicator behavior during charging.

5.2 Image Transfer to PC

With the camera in the cradle and connected to a PC via USB, you can easily transfer images:

1. Turn on your computer and the camera (if not already on).
2. Your computer should recognize the camera as a removable storage device.
3. Use your computer's file explorer or Fujifilm's FinePix Viewer 4.0 software to access and download images.

5.3 PC-Cam Mode

The cradle supports PC-Cam conferencing mode when used with compatible FinePix cameras and the FinePix Viewer 4.0 software package. This allows for video conferencing capabilities through your computer.

- Install FinePix Viewer 4.0 software on your computer.
- Connect the camera to the cradle and the cradle to your PC via USB.
- Follow the instructions within the FinePix Viewer 4.0 software to activate and use PC-Cam mode.

5.4 Video Playback on Television

The CP-FXA10 cradle features a video out port, allowing you to view AVI Motion JPEG movie clips captured by your FinePix camera on a television set.

1. Connect a video cable (not included with cradle, typically supplied with camera) from the cradle's video out port to the video input on your television.
2. Select the appropriate video input channel on your television.
3. Use your camera's playback functions to view movies on the television screen.
4. Movies can also be recorded to a VCR if connected appropriately.

6. MAINTENANCE

- Clean the cradle regularly with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Keep the connectors free from dust and debris to ensure reliable connections.
- Store the cradle in a cool, dry place when not in use.

7. TROUBLESHOOTING

- **Cradle not powering on:** Ensure the AC adapter is securely connected to both the cradle and a working

power outlet.

- **Battery not charging:** Verify that the camera is correctly seated in the cradle with its specific adapter. Confirm that the battery is an NH-10 Ni-MH type.
- **Computer not recognizing camera:** Check the USB cable connection between the cradle and the PC. Ensure the camera is properly seated in the cradle. Try a different USB port on your computer.
- **No video output to TV:** Confirm the video cable connection between the cradle and the TV. Ensure the TV is set to the correct input channel.
- **Camera wobbles in cradle:** Ensure the correct camera-specific adapter is installed and that the camera is firmly seated.

8. SPECIFICATIONS

Feature	Description
Model Number	CP-FXA10
Compatibility	Fujifilm FinePix A205, A210, A310, A330, A340, E510, E550 (requires camera-specific adapter)
Functions	Battery Charging, Image Download, PC-Cam Mode, Video Output
Connectivity	USB (for PC connection), Video Out (for TV connection)
Power Input	AC-3VW AC Power Adapter
Battery Type (Charging)	NH-10 Ni-MH Battery Pack
Charging Time	Approx. 2 hours (for NH-10 Ni-MH battery)
Video Format Support	AVI Motion JPEG
Dimensions (Approx.)	Refer to product packaging for exact dimensions
Weight (Approx.)	0.01 Ounces (0.28 grams)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your original product purchase or visit the official Fujifilm website. Keep your proof of purchase for warranty claims. If you encounter issues not covered in this manual, please contact Fujifilm customer support for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question