

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Capresso](#) /

› [Capresso Infinity Conical Burr Grinder Model 560.01 User Manual](#)

## Capresso 560.01

# Capresso Infinity Conical Burr Grinder Model 560.01 User Manual

Model: 560.01

## INTRODUCTION

The Capresso Infinity Conical Burr Grinder Model 560.01 is designed to provide precise and consistent coffee grinding for various brewing methods. Its commercial-grade solid steel conical burrs ensure optimal flavor and aroma preservation by minimizing heat buildup during grinding. This manual provides essential information for the safe and efficient operation, maintenance, and care of your grinder.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any

control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Check hopper for presence of foreign objects before using.
- This appliance is for household use only.

## PRODUCT COMPONENTS

Familiarize yourself with the main components of your Capresso Infinity Conical Burr Grinder.



Figure 1: Overall view of the Capresso Infinity Conical Burr Grinder, showing the main unit, bean hopper, and ground coffee container.



Figure 2: Close-up of the control panel, highlighting the grind fineness settings (Extra Fine, Fine, Medium, Coarse) and the timer dial.



Figure 3: The transparent bean hopper filled with whole coffee beans, ready for grinding.



Figure 4: The ground coffee container, showing freshly ground coffee collected after operation.



Figure 5: The precision-engineered conical burrs, responsible for uniform grinding.

## SETUP

1. Unpack all components and remove any packaging materials.
2. Place the grinder on a stable, flat, and dry surface.
3. Ensure the ground coffee container is securely inserted into its slot at the front of the grinder.

4. Place the bean hopper onto the top of the grinder, aligning the black dot on the hopper with the desired grind setting (Extra Fine, Fine, Medium, Coarse) on the grinder base. Twist the hopper clockwise until it locks into place.
5. Plug the power cord into a 120V AC outlet.

## OPERATING INSTRUCTIONS

Follow these steps to grind your coffee beans:

1. **Fill the Bean Hopper:** Remove the lid from the bean hopper and pour whole coffee beans into it. The hopper has an 8.8-ounce capacity. Replace the lid securely.
2. **Select Grind Fineness:** Rotate the bean hopper to align the black dot with your desired grind setting. The grinder offers 16 settings, categorized as Extra Fine, Fine, Medium, and Coarse.
  - **Extra Fine:** Ideal for Turkish coffee.
  - **Fine:** Suitable for espresso machines.
  - **Medium:** Recommended for drip coffee makers.
  - **Coarse:** Best for French press and percolators.
3. **Set Grinding Time:** Turn the timer dial located on the front of the grinder to select the desired grinding duration, from 5 to 60 seconds. The grinder will automatically stop once the set time has elapsed.
4. **Start Grinding:** The grinder will begin operation once the timer is set and the hopper is correctly positioned.
5. **Collect Ground Coffee:** Once grinding is complete, carefully remove the ground coffee container from the front of the grinder.

Your browser does not support the video tag.

Video 1: This video demonstrates the key features and basic operation of the Capresso Infinity Conical Burr Grinder, including filling the hopper, selecting grind settings, and collecting ground coffee.

Your browser does not support the video tag.

Video 2: This video provides an overview of the Capresso Infinity coffee grinder, showcasing its ease of use, grind settings, and the process of grinding coffee beans.

## MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your grinder.

1. **Unplug the Grinder:** Always unplug the appliance from the power outlet before cleaning.
2. **Remove Bean Hopper:** Rotate the bean hopper counter-clockwise to align the black dot with the "unlock" symbol, then lift it off.
3. **Remove Upper Burr:** The upper burr is removable for easy cleaning. Lift it out of the grinding chamber.



Figure 6: Removing the upper burr for thorough cleaning of the grinding mechanism.

4. **Clean Burrs and Chamber:** Use the included cleaning brush to remove any residual coffee grounds from both the upper and lower burrs, as well as the grinding chamber.
5. **Clean Ground Coffee Container:** Empty and wash the ground coffee container with warm, soapy water. Ensure it is completely dry before reinserting.
6. **Wipe Exterior:** Wipe the exterior of the grinder with a damp cloth. Do not immerse the main unit in water.
7. **Reassemble:** Place the cleaned upper burr back into the grinding chamber, then reattach the bean

hopper by aligning the black dot and twisting clockwise to lock.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder does not start.	Power cord not plugged in; bean hopper not correctly locked; timer not set.	Ensure power cord is securely plugged in. Verify the bean hopper is locked into position. Set the timer dial to a desired grinding duration.
Inconsistent grind.	Burrs are dirty or worn; incorrect grind setting for bean type.	Clean the burrs and grinding chamber thoroughly. Adjust the grind setting to a finer or coarser option as needed for your coffee beans and brewing method.
Excessive static cling of ground coffee.	Dry air conditions; natural static buildup during grinding.	This is a common issue with coffee grinders. Try lightly misting the coffee beans with water before grinding to reduce static. Alternatively, allow the ground coffee to sit in the container for a few minutes before emptying.
Grinder jams.	Foreign object in beans; excessive amount of beans; burrs clogged.	Unplug the grinder. Remove the bean hopper and upper burr. Inspect for and remove any foreign objects. Clean the burrs and grinding chamber. Do not overfill the hopper.

## SPECIFICATIONS

- **Model:** 560.01
- **Color:** Black
- **Material:** ABS Plastic
- **Product Dimensions:** 7.75" L x 5" W x 10.5" H
- **Item Weight:** 3 pounds
- **Wattage:** 100W
- **Voltage:** 120V
- **Hertz:** 60Hz
- **Hopper Capacity:** 8.8 ounces (whole beans)
- **Ground Bin Capacity:** 4 ounces (ground coffee)
- **Grind Settings:** 16 (Extra Fine, Fine, Medium, Coarse)
- **Burr Type:** Commercial-grade solid steel conical burrs

## WARRANTY AND SUPPORT

The Capresso Infinity Conical Burr Grinder Model 560.01 comes with a one-year limited warranty. For detailed warranty information, product support, or to purchase replacement parts, please visit the official Capresso website or contact their customer service. Keep your purchase receipt as proof of purchase for warranty claims.

For further assistance, you may visit the [Capresso Store on Amazon](#).

