

[manuals.plus](#) /

- › [WEN](#) /
- › [WEN 6010 6-Inch Waxer/Polisher Instruction Manual](#)

WEN 6010

WEN 6010 6-Inch Waxer/Polisher Instruction Manual

Model: 6010 | Brand: WEN

1. PRODUCT OVERVIEW

The WEN 6010 6-Inch Random Orbital Waxer/Polisher is designed for efficient application and removal of waxes and polishes on various surfaces. Its ergonomic design ensures comfortable handling for both small and large areas, providing a streak-free finish. This tool is suitable for automotive detailing, as well as polishing surfaces in the garage, kitchen, and bathroom.



Figure 1: WEN 6010 6-Inch Waxer/Polisher with included applicator and terry cloth bonnets.

2. KEY FEATURES

- **High Performance Motor:** Equipped with a 120 V, 0.5 amp permanent magnet motor.
- **Speed:** Operates at 3500 RPM for effective polishing.
- **Ergonomic Design:** Contoured palm and body-grip for comfortable one or two-hand use.
- **Lockable ON/OFF Switch:** Provides continuous operation without holding the trigger.
- **Included Accessories:** Comes with one 6-inch applicator bonnet and one 6-inch terry cloth bonnet.

3. SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating this tool. Failure to follow warnings and instructions may result in electric shock, fire, and/or serious injury.

- Wear appropriate personal protective equipment, including eye protection.
- Ensure the work area is clean and well-lit.

- Keep children and bystanders away while operating the tool.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Avoid accidental starting. Ensure the switch is in the off-position before plugging in.
- Do not force the power tool. Use the correct power tool for your application.
- Disconnect the plug from the power source before making any adjustments, changing accessories, or storing power tools.

4. SETUP

4.1 Attaching Bonnets

The WEN 6010 uses elasticized bonnets that fit over the foam pad. To attach a bonnet, simply stretch it over the 6-inch foam pad until it is securely in place. Ensure the bonnet is centered and smooth to prevent uneven application.



Figure 2: WEN 6010 6-Inch Waxer/Polisher with a white polishing bonnet attached.



Figure 3: Close-up of the WEN 6010 6-Inch Waxer/Polisher with a foam pad, ready for bonnet attachment.

4.2 Power Connection

Connect the power cord to a standard 120V AC outlet. Ensure the ON/OFF switch is in the 'OFF' position before plugging in the tool.

5. OPERATING INSTRUCTIONS

5.1 General Operation

Apply a small amount of wax or polish directly to the surface or to the applicator bonnet. Place the polisher flat on the surface before turning it on. Use the lockable ON/OFF switch to start the tool. Guide the polisher with light, even pressure across the surface in overlapping passes. The random orbital action helps prevent swirl marks and ensures an even finish.



Figure 4: WEN 6010 6-Inch Waxer/Polisher showing the orange ON/OFF switch for easy operation.

5.2 Ergonomic Handling

The contoured design allows for comfortable single or two-handed operation, reducing fatigue during extended use. Maintain a firm grip on the tool for optimal control.



Figure 5: Hand holding the WEN 6010 6-Inch Waxer/Polisher to show its compact size and ergonomic fit.

5.3 Operational Demonstration

Your browser does not support the video tag.

Video 1: Demonstration of the WEN 6-inch Waxer/Polisher in use, highlighting its orbital action and ease of handling for detailing tasks.

Your browser does not support the video tag.

Video 2: Detailed review and demonstration of the WEN Waxer/Polisher, showcasing its effectiveness and user-friendly features for various applications.

6. MAINTENANCE

6.1 Cleaning the Unit

After each use, unplug the polisher and wipe down the exterior with a clean, damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure no liquids enter the motor housing.

6.2 Replacing Bonnets

Bonnets should be cleaned or replaced regularly to maintain optimal performance. To remove a bonnet, simply peel it off the foam pad. Replace with a clean applicator or terry cloth bonnet as needed. Ensure replacement bonnets are 6-inch in diameter.

6.3 Storage

Store the WEN 6010 in a clean, dry place, out of reach of children. Ensure the power cord is neatly wrapped and not kinked.

7. TROUBLESHOOTING

- **Tool does not turn on:** Check if the power cord is securely plugged into a working outlet. Verify that the

ON/OFF switch is fully engaged.

- **Poor polishing/waxing results:** Ensure the bonnet is clean and properly attached. Use appropriate wax or polish for the surface. Apply light, even pressure and consistent movement.
- **Excessive vibration:** Check if the bonnet is evenly seated on the foam pad. Ensure the foam pad itself is not damaged or worn.

For issues not listed here, please contact WEN customer support.

8. SPECIFICATIONS

Specification	Value
Model Number	6010
Power Source	Corded Electric
Voltage	120 Volts
Amperage	0.5 Amps
Speed	3500 RPM
Item Weight	3.35 pounds
Product Dimensions	7.3 x 6.8 x 6.8 inches
Pad Size	6 inches
Specific Uses	Bathroom, Garage, Kitchen

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The WEN 6010 6-Inch Waxer/Polisher comes with a 1-year limited warranty. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation included with your product.

9.2 Customer Support

For technical assistance, parts, or service, please visit the official WEN website or contact their customer service department. You can find more information and support resources at [WEN Store](#).