

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [De'Longhi](#) /
- › [De'Longhi Perfecto Indoor Grill BG24 Instruction Manual](#)

De'Longhi BG24

De'Longhi Perfecto Indoor Grill BG24 Instruction Manual

Model: BG24

1. PRODUCT OVERVIEW

The De'Longhi Perfecto Indoor Grill BG24 is designed for healthy indoor grilling. It features a die-cast aluminum non-stick cooking surface with an embedded heating element and a special M-shaped grill design to ensure consistent heat distribution across the entire surface. The adjustable, detachable thermostat offers five temperature levels for precise cooking control. A non-stick splatter shield and tempered glass lid help contain mess and retain moisture, while cool-touch handles ensure safe operation. An indicator light signals when the grill is heating up.



Figure 1: De'Longhi Perfecto Indoor Grill with Lid.

2. KEY FEATURES

- **Even Heat Distribution:** Fully embedded grill plate heating element and M-shaped design for consistent results.
- **Moisture Retention:** Tempered glass lid helps keep food juicy and can keep grilled food warm.
- **Large Cooking Surface:** Ample space to prepare meals for the entire family.
- **Adjustable Thermostat:** Detachable thermostat with five temperature levels for personalized grilling.
- **Easy Cleaning:** Non-stick grill plate and removable non-stick drip tray simplify cleanup.
- **Safety Features:** Cool-touch handles and an indicator light for safe operation.

3. PACKAGE CONTENTS

Ensure all items are present upon unpacking:

- De'Longhi Perfecto BG24 Indoor Grill
- Tempered Glass Lid
- Instruction Manual

4. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- **Read All Instructions:** Familiarize yourself with the entire manual before operation.
- **Hot Surfaces:** The grill plate and lid become very hot during use. Use cool-touch handles and oven mitts as needed.
- **Electrical Safety:** Do not immerse the thermostat or electrical components in water. Ensure hands are dry when plugging/unplugging.
- **Ventilation:** Use in a well-ventilated area.
- **Non-Stick Coating:** Avoid using metal utensils on the non-stick surface to prevent damage. Use wooden or heat-resistant plastic utensils.
- **Children:** Keep the appliance out of reach of children.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the grill plate, drip tray, and tempered glass lid with warm, soapy water. Rinse thoroughly and dry completely.
3. **Assemble:** Place the drip tray into the base of the grill. Ensure it is properly seated.
4. **Install Grill Plate:** Position the non-stick grill plate securely over the heating element.
5. **Attach Thermostat:** Insert the detachable thermostat into the designated slot on the side of the grill plate. Ensure it clicks firmly into place.
6. **Add Water to Drip Tray:** Fill the removable drip tray with water up to the indicated maximum level. This helps reduce smoke and keeps food moist.



Figure 2: Close-up of the grill plate.



Figure 3: Detachable thermostat with temperature settings.

6. OPERATING INSTRUCTIONS

1. **Plug In:** Plug the power cord into a standard 120V electrical outlet.
2. **Preheat:** Turn the adjustable thermostat to your desired temperature setting. The indicator light will illuminate, signaling that the grill is heating. Allow 3-4 minutes for the grill to preheat. The indicator light will turn off when the desired temperature is reached.
3. **Place Food:** Carefully place food directly onto the preheated non-stick grill plate.
4. **Use Lid:** For juicier results and to reduce splatter, place the tempered glass lid over the grill while cooking.
5. **Monitor Cooking:** Adjust the thermostat as needed during cooking.
6. **Remove Food:** Once cooked, carefully remove food using wooden or heat-resistant plastic utensils.
7. **Turn Off:** After use, turn the thermostat to the 'OFF' position and unplug the appliance.



Figure 4: Grill with tempered glass lid in place.



Figure 5: Proper placement of the tempered glass lid.

7. CLEANING AND MAINTENANCE

- 1. Unplug and Cool:** Always unplug the grill and allow it to cool completely before cleaning.
- 2. Remove Thermostat:** Detach the adjustable thermostat. Do not immerse the thermostat in water.
- 3. Empty Drip Tray:** Carefully remove and empty the non-stick drip tray. The drip tray is machine cleanable.
- 4. Clean Grill Plate:** Wipe the non-stick grill plate with a soft, damp cloth or sponge. For stubborn residue, use a mild dish soap. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- 5. Clean Lid:** The tempered glass lid can be washed with warm, soapy water or placed in the dishwasher.
- 6. Clean Base:** Wipe the exterior of the grill base with a damp cloth. Do not immerse the base in water.
- 7. Storage:** Ensure all parts are clean and dry before storing the grill in a cool, dry place.

8. TROUBLESHOOTING

- Grill Not Heating:** Ensure the thermostat is correctly inserted and plugged into a working outlet. Check that the thermostat is turned to an 'ON' position.
- Excessive Smoke:** Ensure the drip tray contains water. Excessive fat in the drip tray can also cause smoke; empty and refill with water if necessary.
- Food Sticking:** Ensure the grill plate is properly seasoned before use. Use a small amount of cooking oil or spray if needed. Avoid using metal utensils that can scratch the non-stick surface.

9. SPECIFICATIONS

Brand	De'Longhi
Model Number	BG24
Product Dimensions	19.69"D x 13.19"W x 6.69"H
Item Weight	5 Pounds
Color	Black
Material	Aluminum (Plates), Glass (Lid), Stainless Steel (Handle)
Fuel Type	Electric
Voltage	120 Volts
Wattage	1500 Watts
Number of Power Levels	5
Special Feature	Heat-Resistant Handle

10. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Product Summary Video for De'Longhi Perfecto Indoor Grill.

11. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the contact details provided in the included Instruction Manual or visit the official De'Longhi website.