

## Coby CXCD113

# Coby CX-CD113 Super-Slim Personal CD Player User Manual

Model: CXCD113

## INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your Coby CX-CD113 Super-Slim Personal CD Player. Please read this manual thoroughly before using the device and retain it for future reference.

The Coby CX-CD113 is a compact and stylish personal CD player designed for portable audio enjoyment. It features interchangeable color inserts, allowing for personalization, and incorporates a Digital Bass Boost Sound (DBBS) system for enhanced audio quality.

## PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Coby CX-CD113 CD Player
- Stereo Headphones (3.5mm jack)
- Interchangeable Color Inserts (Red, Purple, Clear, Blue)
- User's Manual (this document)



Image: The Coby CX-CD113 CD player shown with included headphones and a selection of interchangeable color inserts. The player is silver with a light blue insert visible.

## SETUP

### Powering the Device

The CX-CD113 can be powered by two (2) AA batteries (not included) or an optional AC/DC adapter (sold separately).

1. **Battery Installation:** Open the battery compartment located on the underside of the player. Insert two AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the compartment securely.
2. **AC Power (Optional):** Connect a compatible DC 4.5V AC/DC adapter (not included) to the DC 4.5V AC/DC adapter jack on the player. Plug the adapter into a standard wall outlet.

## Inserting Interchangeable Color Inserts

To change the appearance of your CD player, gently lift the clear cover on the top of the unit. Place your desired color insert (red, purple, clear, or blue) into the designated slot, ensuring it sits flat. Close the clear cover securely.

## Connecting Headphones

Plug the 3.5mm jack of the included stereo headphones into the headphone jack located on the side of the CD player.

## OPERATING INSTRUCTIONS

---

### Loading a CD

1. Gently press the "OPEN" button or slide the latch to open the CD compartment lid.
2. Place a CD onto the center spindle with the label side facing up.
3. Gently press the CD down until it clicks into place.
4. Close the CD compartment lid firmly until it latches.

### Basic Playback Functions

- **Play/Pause:** Press the **PLAY/PAUSE** button to start or pause playback.
- **Stop:** Press the **STOP** button to stop playback.
- **Skip Tracks:** Press the **SKIP FORWARD** (>>|) button to advance to the next track. Press the **SKIP BACKWARD** (|<<) button to go to the beginning of the current track, or press twice to go to the previous track.
- **Search:** Press and hold the **SKIP FORWARD** (>>|) or **SKIP BACKWARD** (|<<) button during playback to fast-forward or rewind through the track.
- **Volume Control:** Adjust the volume using the volume dial or buttons (location may vary, typically on the side or front).

### Advanced Playback Functions

- **Repeat:** Press the **REPEAT** button once to repeat the current track (Repeat 1). Press it again to repeat all tracks on the CD (Repeat All). Press a third time to cancel repeat mode.
- **Random Play:** Press the **RANDOM** button to play tracks in a random order. Press again to cancel.
- **Intro Scan:** Press the **INTRO** button to play the first few seconds of each track on the CD. Press again to cancel.
- **Programmable Track Memory:**
  - a. In stop mode, press the **PROGRAM** button.
  - b. Use the **SKIP FORWARD** (>>|) or **SKIP BACKWARD** (|<<) buttons to select the desired track.
  - c. Press **PROGRAM** again to confirm and add the track to the program list.
  - d. Repeat steps 2 and 3 for up to 20 tracks.
  - e. Press **PLAY** to start programmed playback.
- **Digital Bass Boost Sound (DBBS):** This feature is typically activated by a switch or button labeled "DBBS" or "Bass Boost". Toggle it on or off to enhance low-frequency audio.

## MAINTENANCE

---

## Cleaning the Unit

Wipe the exterior of the CD player with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish. For the lens, use a specialized CD lens cleaner if necessary, following its instructions carefully.

## Battery Care

Remove batteries if the unit will not be used for an extended period to prevent leakage and corrosion.

## CD Care

Handle CDs by their edges. Keep them clean and free of scratches. Store CDs in their cases when not in use.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Player does not turn on.	No power; batteries dead or incorrectly inserted; AC adapter not connected.	Check battery polarity and charge. Ensure AC adapter is securely connected and outlet is functional.
"DISC" error message or no playback.	CD is dirty, scratched, or inserted incorrectly; lens is dirty.	Clean the CD with a soft, lint-free cloth. Reinsert the CD correctly. Clean the optical lens with a specialized CD lens cleaner.
Sound skips or distorts.	CD is scratched or dirty; player is subject to excessive vibration; headphones are faulty.	Clean or replace the CD. Use the player on a stable surface or minimize movement. Test with different headphones.
No sound from headphones.	Headphones not fully plugged in; volume too low; headphones are faulty.	Ensure headphones are fully inserted. Increase volume. Test with different headphones.
Automatic power off.	Feature designed to save battery life when idle.	This is normal operation. Press PLAY to resume.

## SPECIFICATIONS

Model Number	CXCD113
Power Source	2 x AA Batteries (not included), DC 4.5V AC/DC Adapter (sold separately)
Audio Output	3.5mm Headphone Jack
D/A Converter	1-bit
Display	Digital 6-digit LCD
Dimensions (Approx.)	11.9 x 7.2 x 2.1 inches (Package Dimensions)
Weight (Approx.)	0.01 ounces (Item Weight)
Features	Dynamic Bass Boost System (DBBS), Programmable Track Memory, Skip, Search, Play/Pause, Intro, Random, Repeat 1, Repeat All Functions, Automatic Power Off, Interchangeable Color Inserts

## WARRANTY AND SUPPORT






For warranty information or technical support, please refer to the warranty card included with your product or visit the official Coby website. Please have your model number (CXCD113) and purchase details ready when contacting support.

*Note: Specific warranty terms and conditions may vary by region and date of purchase.*



© 2003 Coby Electronics. All rights reserved.  
This manual is subject to change without notice.

### Related Documents - CXCD113

 <p><b>COBY</b> MP201</p>	<p><a href="#">Coby MP201 USB MP3 Player Instruction Manual</a></p> <p>Comprehensive instruction manual for the Coby MP201 USB MP3 Player, covering setup, features, controls, music playback, software installation, and troubleshooting.</p>
 <p><b>IFIXIT</b> Coby DVD209 The bottom portion of the DVD player Replacement</p>	<p><a href="#">Coby DVD209 DVD Player Bottom Portion Replacement Guide</a></p> <p>A step-by-step repair guide from iFixit for replacing the bottom portion of a Coby DVD209 DVD player. Learn how to safely remove screws, disconnect cables, and access internal components.</p>
 <p><b>COBY</b> MP-610 QUICK SETUP GUIDE</p>	<p><a href="#">Coby MP-610 MP3 &amp; Video Player Quick Setup Guide</a></p> <p>Quick setup guide for the Coby MP-610 MP3 &amp; Video Player with FM Radio, covering music, video, and photo file transfer using Windows Media Player and conversion software.</p>
 <p><b>COBY</b> CD201 Wireless Anti-Skip CD Player Manual de usuario / User Manual</p>	<p><a href="#">Coby CD201 Wireless Anti-Skip CD Player User Manual</a></p> <p>User manual for the Coby CD201 Wireless Anti-Skip CD Player, covering features, operation, charging, Bluetooth audio-out, FM radio, specifications, safety precautions, and warranty information.</p>
 <p><b>IFIXIT</b> Coby Digital Photo Frame Alarm Clock Teardown</p>	<p><a href="#">Coby Digital Photo Frame Alarm Clock Teardown Guide</a></p> <p>A detailed teardown guide of the Coby Digital Photo Frame Alarm Clock (Model DP356) by iFixit, exploring its internal components and reparability.</p>

**COBY**  
WIRELESS HEADPHONES



Instruction  
Manual CHBT590

MODEL#: CHBT590



[Coby CHBT590 Wireless Headphones Instruction Manual](#)

Instruction manual for the Coby CHBT590 Wireless Headphones, covering setup, operation, music controls, and warranty information.