

Loewe Xelos 5270

Loewe Xelos 5270 28-Inch LED TV Instruction Manual

Model: Xelos 5270 (61457A62)

1. INTRODUCTION

Thank you for choosing the Loewe Xelos 5270 LED TV. This manual provides essential information for the safe and efficient operation of your television. Please read these instructions thoroughly before using the device and retain them for future reference.

Important Safety Instructions

- Ensure the television is placed on a stable, level surface to prevent tipping.
- Do not block ventilation openings. Maintain adequate space around the TV for proper airflow.
- Avoid exposing the TV to rain or moisture to prevent fire or electric shock.
- Do not open the TV casing. Refer all servicing to qualified service personnel.
- Unplug the TV from the wall outlet during lightning storms or when unused for long periods.

2. SETUP

2.1 Unpacking

Carefully remove the television and all accessories from the packaging. Retain the packaging materials for potential future transport or servicing.

2.2 Placement

Place the TV on a sturdy table or mount it on a wall using a compatible VESA mount (sold separately). Ensure the location allows for proper ventilation and is away from direct sunlight or heat sources. The Loewe Xelos 5270 is designed for table mounting.



Image 1: Loewe Xelos 5270 28-Inch LED TV on its table stand.

2.3 Connecting Cables

1. **Power Cable:** Connect the power cable to the TV's power input and then to a wall outlet.
2. **HDMI Devices:** For high-definition video and audio, connect external devices (e.g., Blu-ray player, game console) to the HDMI ports on the back of the TV using HDMI cables.
3. **Antenna/Cable:** Connect your antenna or cable TV feed to the RF input on the TV.

2.4 Initial Power-On

After connecting all necessary cables, press the power button on the TV or the remote control. The TV will guide you through the initial setup process, including language selection, channel scanning, and network configuration.

3. OPERATING THE TV

3.1 Basic Controls

- **Power:** Press the power button on the remote or TV to turn the unit on or off.
- **Volume:** Use the VOL +/- buttons on the remote to adjust the sound level.
- **Channel:** Use the CH +/- buttons to change channels.
- **Input:** Press the SOURCE or INPUT button to select connected devices (e.g., HDMI 1, HDMI 2).

3.2 Menu Navigation

Press the MENU button on your remote control to access the on-screen display (OSD) menu. Use the arrow buttons to navigate through options and the OK/ENTER button to confirm selections. The EXIT or BACK button will return you to the previous menu or exit the OSD.

3.3 Smart Features (Browser)

The Loewe Xelos 5270 includes a built-in web browser. Ensure your TV is connected to the internet via an Ethernet cable or Wi-Fi (if supported). Access the browser through the main menu to navigate websites directly on your television screen.

4. MAINTENANCE

4.1 Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

4.2 Cleaning the Casing

Use a soft, dry cloth to wipe the TV casing. Avoid using abrasive cleaners or solvents, as these can damage the finish.

5. TROUBLESHOOTING

Before contacting customer support, please refer to the following common issues and solutions:

- **No Power:** Ensure the power cable is securely connected to both the TV and the wall outlet. Check if the outlet is functional.
- **No Picture/Sound:** Verify that the correct input source is selected. Check all cable connections (HDMI, antenna).
- **Remote Control Not Working:** Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.
- **Poor Picture Quality:** Check antenna or cable connections. Adjust picture settings in the TV menu. Ensure the source device is outputting a high-quality signal.

6. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	LOEWE
Model Name	Xelos 5270
Model Number	61457A62
Display Technology	LED
Screen Size	28 Inch
Resolution	4K
Aspect Ratio	16:9
Refresh Rate (Frequency)	100 Hz
Hardware Interface	HDMI
Connector Type	HDMI
Mounting Type	Table Mount
Special Features	Flat Screen
Supported Internet Services	Browser
Color	Black

7. WARRANTY AND SUPPORT






7.1 Warranty Information


Your Loewe Xelos 5270 TV is covered by a manufacturer's warranty. Please refer to the separate warranty card included with your purchase for detailed terms and conditions, including warranty period and coverage specifics. Keep your proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, service inquiries, or to report issues not covered in the troubleshooting section, please contact Loewe customer support. Contact details can typically be found on the official Loewe website or in your warranty documentation.

Related Documents - Xelos 5270

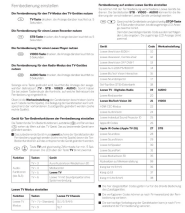
	<p>Loewe Xelos TV Operating Instructions: Models 46, 40, 32</p> <p>User manual for Loewe Xelos televisions (46, 40, 32). Covers setup, operation, multimedia, recording, external device connectivity, safety, and technical details from Loewe Opta GmbH.</p>
	<p>Loewe Xelos TV Operating Instructions</p> <p>Comprehensive operating instructions for Loewe Xelos television models (Xelos 46, Xelos 40, Xelos 32), covering setup, daily operation, features, safety, and troubleshooting. Includes information on connecting devices and optimizing your viewing experience.</p>
	<p>Loewe Xelos LED TV Operating Instructions</p> <p>Comprehensive operating instructions for the Loewe Xelos 40 LED and Xelos 32 LED televisions, covering setup, features, safety, and daily operation.</p>
	<p>Loewe stellar OLED TV User Manual</p> <p>Comprehensive user manual for the Loewe stellar OLED TV, covering setup, features, remote control operation, smart hub, EPG, channel management, accessibility, recording, magic.light, magic.motion, and technical specifications. Made in Germany.</p>
	<p>Loewe Fernbedienung einstellen: Anleitung und Gerätecodes</p> <p>Umfassende Anleitung zur Einrichtung Ihrer Loewe Fernbedienung für verschiedene Geräte wie TV, Recorder, Player und Audiosysteme. Enthält detaillierte Schritte und eine vollständige Liste der Gerätecodes für die Umbelegung von Tasten.</p>



Loewe Individual 40-55 User Manual: Comprehensive Guide to Features and Operation

Explore the Loewe Individual 40, 46, and 55 televisions with this detailed user manual. Learn about setup, advanced features, media playback, connectivity, and troubleshooting for your Loewe TV.

Documents - Loewe – Xelos 5270

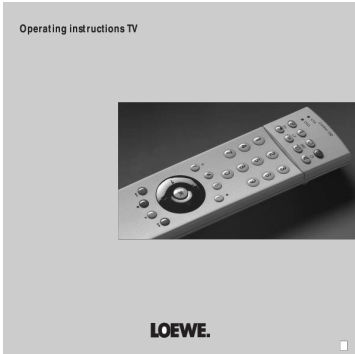


[\[pdf\]](#) User Manual Owner's Manual Instructions Accessories

29061 002Q4140C150 GB 4 6 Preusz UM 002 ARCADA CALIDA VITROS XELOS bulletin qualifi au s3 amazonaws Loewe CRT Q4140 Owners Manual Q 4140 |||

Operating instructions TV 41 Contents Remote control TV functions 43 Operating panels 44 45 ... Weight kg 24 TV tube Black Matrix Format 4:3 Screen class 55, visible 51 cm Xelos 5261 ZW **Xelos 5270** ZW 61456 59457 63,5 x 47,5 x 48,5 73,0 x 53,0 x 51,0 27,0 37,0 Black Matrix Blackl...

lang:en **score:26** filesize: 1.22 M page_count: 18 document date: 2002-06-05




[\[pdf\]](#) User Manual Owner's Manual Instructions Accessories

BAQ25 29372 021 6 GB Preusz bulletin qualifi au s3 amazonaws Loewe CRT Q2500 Owners Manual Q 2500 ARCADA 8755 CALIDA 5755 5763 5772 VITROS 6370 6372 XELOS 5255 5261 5270 |||

Arcada 8755 Z Calida 5755 Z Calida 5763 Z Calida 5772 Z Vitros 6370 ZW Vitros 6372 ZP Xelos 5255 Z Xelos 5261 ZW **Xelos 5270** ZW Neu fr 6.Auflage: S10, 12, 17, 23, 24 Operating Instructions. TV. 23329372.021 Television HomeMultiMedia DVD/Video Audio Telekommunikation 1 BAQ25_29372_021_6_G...

lang:en **score:26** filesize: 3.31 M page_count: 26 document date: 2002-06-05

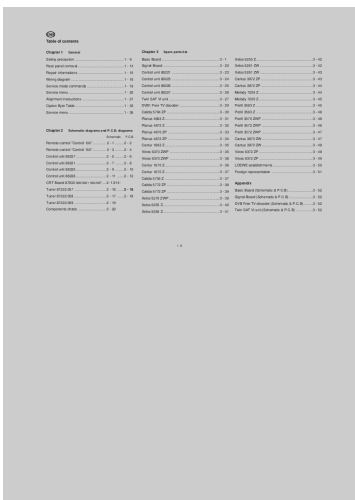

[\[pdf\]](#) User Manual Instructions Diagram

Seite 1 19 Juergen G4 Q 2500 B komplett bulletin qualifi au s3 amazonaws Loewe CRT Q250B Service Manual all documents |||

Table of contents Chapter 1 General Safety precaution 3 - 38 Calida 5772 ZP 3 - 39 **Xelos 5270** ZWP 3 - 39 Xelos 5255 Z 3 - 39

lang:fr **score:24** filesize: 8.84 M page_count: 114 document date: 2002-02-28