

One For All URC3420

One For All URC 3420 Universal Remote Control Instruction Manual

Model: URC3420

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your One For All URC 3420 Universal Remote Control. Please read these instructions carefully before using the device to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The One For All URC 3420 is a pre-programmed universal remote control designed to operate two devices, typically a Television (TV) and a Video Cassette Recorder (VCR). It features a numeric keypad and dedicated function buttons for common operations.



Image of the One For All URC 3420 universal remote control, showing its silver body and various buttons for TV and VCR functions.

SETUP

1. Battery Installation

1. Open the battery compartment cover on the back of the remote control.
2. Insert two new AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
3. Close the battery compartment cover securely.

2. Device Programming (Code Setup)

The URC 3420 is pre-programmed for many popular brands. If your device does not respond immediately, you may need to program it using a specific code.

1. Turn on the device (TV or VCR) you wish to control manually.
2. Press and hold the **MAGIC** button until the LED light on the remote blinks twice and then stays on.
3. Press the device button you want to program (e.g., **TV** or **VCR**). The LED will blink once and then stay on.
4. Enter the 4-digit setup code for your device brand. Refer to the code list provided with your remote (not included in this manual).
5. After entering the code, the LED will blink twice and turn off if the code is valid. If the LED shows a long blink, the code is invalid; try another code.
6. Test the remote by pressing the **POWER** button. If the device turns off, the programming was successful. If not, repeat the process with a different code for your brand.

OPERATING INSTRUCTIONS

To operate your devices, first select the desired device mode.

- **Device Selection:** Press the **TV** button to control your television or the **VCR** button to control your video cassette recorder. The remote will remain in this mode until another device button is pressed.
- **Power:** Press the **POWER** button to turn the selected device on or off.
- **Volume Control:** Use the **VOL+** and **VOL-** buttons to adjust the volume.
- **Channel Selection:** Use the **CH+** and **CH-** buttons to change channels. You can also use the numeric keypad (0-9) to directly enter channel numbers.
- **Mute:** Press the **MUTE** button to silence the audio. Press again to restore.
- **VCR Playback Controls:** For VCR mode, use buttons such as **PLAY**, **STOP**, **PAUSE**, **REW** (rewind), and **FF** (fast forward).

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or the LED indicator does not light up. Always replace both batteries at the same time with new AAA alkaline batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage. Store in a cool, dry place.

TROUBLESHOOTING

- **Remote not working:**
 - Check if the batteries are inserted correctly and are not depleted. Replace if necessary.
 - Ensure there is a clear line of sight between the remote and the device. Remove any obstructions.
 - Make sure the correct device mode (TV or VCR) is selected on the remote.
- **Device not responding to commands:**
 - The device code may be incorrect. Try reprogramming the remote with a different code for your brand.
 - Ensure the device is powered on and functioning correctly with its original remote.

SPECIFICATIONS

Model Number	URC3420
--------------	---------

Brand	One For All
Control Type	Pre-programmed
Number of Devices Controlled	2 (TV, VCR)
Learnable Functionality	No
Numeric Keypad	Yes
Power Source	2 x AAA Batteries (not included)

WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or visit the official One For All website. If you require technical support or have questions not covered in this manual, please contact One For All customer service through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question