

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fujifilm](#) /
- › [Fujifilm Instax 200 Instant Film Camera User Manual](#)

## Fujifilm INSTAX 200

# Fujifilm Instax 200 Instant Film Camera User Manual

Model: INSTAX 200

## 1. INTRODUCTION

---

This manual provides instructions for the proper use and care of your Fujifilm Instax 200 Instant Film Camera. The Instax 200 is designed to capture and deliver vivid, high-quality instant prints. Please read this manual thoroughly before using your camera to ensure optimal performance and longevity.



**Figure 1.1:** Fujifilm Instax 200 Instant Film Camera. This image displays the front view of the camera, highlighting its large body and lens assembly.

## 2. PRODUCT FEATURES

---

The Fujifilm Instax 200 Instant Film Camera incorporates several features designed for ease of use and quality instant photography:

- **Automatically-Adjusting Flash:** Ensures proper exposure in various lighting conditions.
- **High-Resolution Retracting Lens:** A Fujinon lens (aspheric), 2 groups, 2 elements, F14, designed for clear image capture.
- **Large, Clear Viewfinder:** A real image viewfinder for accurate framing.
- **LCD Control Panel:** Displays focal distance and film count for user convenience.
- **Programmed Electronic Shutter:** Operates at speeds from 1/64 to 1/200 seconds.
- **Two-Range Selectable Shooting Options:** Allows selection between 0.9-3m (close-up) and 3m-Infinity (landscape) focus ranges.

- **High-Speed ISO 800 Film Compatibility:** Utilizes Instax Instant Color Film for vivid, sharp images with super-fine grain and fast developing.
- **Auto-Retracting Lens Barrel and Auto-Closing Lens Cover:** Protects the lens when not in use.
- **Easy Grip Design:** Ergonomically designed for comfortable handling.

## 3. SETUP

---

### 3.1. Battery Installation

1. Locate the battery compartment cover on the side or bottom of the camera.
2. Slide or lift the cover to open the compartment.
3. Insert four (4) AA-size alkaline batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

**Note:** Always use new, high-quality alkaline batteries for optimal performance. Do not mix old and new batteries or different types of batteries.

### 3.2. Film Loading

1. Ensure the camera is powered off.
2. Open the film compartment cover, typically located on the back of the camera.
3. Align the yellow mark on the film pack with the yellow mark inside the camera's film compartment.
4. Gently insert the film pack into the compartment. Do not press on the film surface.
5. Close the film compartment cover firmly until it clicks. The camera will automatically eject the dark slide (film cover). Do not open the film compartment until all film has been used.

**Important:** Use only Fujifilm Instax Instant Color Film. Opening the film compartment after loading film will expose the film and render it unusable.

## 4. OPERATING THE CAMERA

---

### 4.1. Powering On/Off

To power on the camera, press the power button. The lens will automatically extend. To power off, press the power button again, and the lens will retract.

### 4.2. Selecting Focus Range

The Instax 200 offers two focus ranges. Use the switch or button (refer to camera body markings) to select between:

- **0.9m - 3m:** For subjects closer to the camera.
- **3m - Infinity:** For subjects further away, such as landscapes or group shots.

The selected focal distance will be displayed on the LCD control panel.

### 4.3. Taking a Picture

1. Power on the camera.
2. Look through the viewfinder to frame your shot.
3. Select the appropriate focus range (0.9-3m or 3m-Infinity).
4. Press the shutter button firmly. The camera's automatic flash will fire if needed, and the picture will be ejected from the top of the camera.

5. Allow the ejected film to develop naturally. Do not shake or bend the film.

**Tip:** The camera has a built-in automatic flash. For fill-in flash, press the flash-on button if available (refer to camera body for specific button location).

## 5. MAINTENANCE

---

### 5.1. Cleaning the Camera

- Use a soft, dry cloth to wipe the camera body.
- For the lens, use a lens cleaning cloth specifically designed for optical surfaces. Do not use abrasive materials or solvents.
- Keep the film ejection slot clear of dust and debris.

### 5.2. Storage

- Store the camera in a cool, dry place away from direct sunlight and high humidity.
- Remove batteries if the camera will not be used for an extended period to prevent leakage.
- Store film packs in their original packaging in a cool, dry place.

## 6. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Camera does not power on.	Dead or incorrectly inserted batteries.	Replace with new AA alkaline batteries, ensuring correct polarity.
Film does not eject.	Film pack empty or incorrectly loaded.	Check film count on LCD. If empty, replace film pack. Re-load film pack correctly.
Photos are too dark/light.	Insufficient or excessive light; flash not firing.	Ensure flash is enabled in low light. Avoid shooting into bright light sources.
Photos are blurry.	Incorrect focus range selected; camera movement during exposure.	Select the correct focus range (0.9-3m or 3m-Infinity). Hold the camera steady when pressing the shutter.
Film compartment opens accidentally.	Cover not securely closed.	Ensure the film compartment cover clicks shut. Avoid opening it until film is used.

## 7. SPECIFICATIONS

---

Model Name	INSTAX 200
Film Type	Fujifilm Instax Instant Color Film
Image Size	99 (W) x 62 (H) mm
Lens	Fujinon lens (aspheric), 2 groups, 2 elements, F14
Viewfinder	Real image viewfinder
Shutter	Programmed electronic shutter, 1/64 - 1/200 sec.
Flash	Built-in automatic flash, fill-in flash by flash-on button

<b>Power Source</b>	4 x AA-size alkaline batteries
<b>Dimensions (W x H x D)</b>	171.5 x 119.5 x 91.5 mm (6.75 x 4.7 x 3.6 inches)
<b>Weight</b>	650g (1.43 lbs) (without batteries and film)
<b>Item Weight (packaged)</b>	1.8 pounds
<b>Product Dimensions (packaged)</b>	22 x 20.5 x 7 inches
<b>ASIN</b>	B0000C76XK
<b>Date First Available</b>	December 26, 2007

## 8. WARRANTY AND SUPPORT

---

For information regarding warranty coverage, service, or technical support for your Fujifilm Instax 200 Instant Film Camera, please refer to the warranty card included with your product or visit the official Fujifilm support website. Contact information for customer service is typically available on the manufacturer's website.

**Fujifilm Official Website:** [www.fujifilm.com](http://www.fujifilm.com)

