

KRUPS 293-70

KRUPS 293-70 Pressa Maxi Citrus Press Juicer User Manual

Model: 293-70

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the juicer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse the cord, plugs, or the main motor unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact KRUPS customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is properly assembled before operation.

2. PRODUCT OVERVIEW

The KRUPS Pressa Maxi is a robust and portable electric citrus juicer designed for efficient juice extraction from various citrus fruits. It features a durable stainless steel construction and a 24-ounce capacity.



Image 1: The KRUPS 293-70 Pressa Maxi Citrus Press Juicer. This image displays the complete juicer unit, highlighting its compact design and stainless steel components, including the reamer and pulp filter.

Key Components:

- **Motor Base:** Contains the powerful, single-speed motor and power cord.
- **Juice Container:** Collects up to 24 ounces (1.5 pounds) of fresh juice.
- **Pulp Filter:** Separates pulp and seeds from the juice.
- **Reamer:** The cone-shaped part that extracts juice from the fruit.
- **Dust Cover:** Protects the reamer and filter when not in use.

3. SETUP AND ASSEMBLY

Before first use, wash all removable parts (juice container, pulp filter, reamer, dust cover) in warm, soapy water, then rinse and dry thoroughly. The main motor base should be wiped with a damp cloth.

1. Place the motor base on a stable, flat, and dry surface.
2. Position the juice container onto the motor base, ensuring it is seated correctly.
3. Place the pulp filter into the juice container.
4. Mount the reamer onto the shaft in the center of the pulp filter.
5. Plug the power cord into a standard electrical outlet. The juicer is now ready for use.

4. OPERATING INSTRUCTIONS

The KRUPS Pressa Maxi is designed for simple, one-handed operation.

1. **Prepare Fruit:** Wash your citrus fruits (oranges, lemons, limes, grapefruits). Cut them in half across the middle.
2. **Juicing:** Place one half of a citrus fruit onto the reamer. Press down firmly. The motor will activate automatically as you apply pressure.
3. **Extract Juice:** Rotate the fruit slightly while pressing down to extract as much juice as possible. The juice will flow through the pulp filter into the juice container below.
4. **Repeat:** Continue juicing fruit halves until you have the desired amount of juice or the container is full. The juicer has a 24-ounce capacity.
5. **Stop Juicing:** Release pressure from the reamer to stop the motor.
6. **Serve:** Unplug the juicer. Carefully lift the juice container from the motor base and pour the fresh juice.

Note: For optimal results, use fresh, ripe citrus fruits at room temperature.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures the longevity and hygienic operation of your juicer.

Cleaning After Each Use:

1. **Unplug:** Always unplug the juicer from the power outlet before cleaning.
2. **Disassemble:** Remove the reamer, pulp filter, and juice container from the motor base.
3. **Wash Removable Parts:** The juice container, pulp filter, and reamer are dishwasher safe for easy cleaning. Alternatively, wash them by hand in warm, soapy water using a soft brush to remove any pulp residue. Rinse thoroughly and dry.
4. **Clean Motor Base:** Wipe the exterior of the motor base with a damp cloth. **Never immerse the motor base in water or any other liquid.**
5. **Dry and Store:** Ensure all parts are completely dry before reassembling or storing the juicer. Store in a clean, dry place, preferably with the dust cover in place.

General Care:

- Do not use abrasive cleaners or scouring pads on any part of the juicer, as this may scratch surfaces.
- Check the power cord regularly for any signs of damage. If damaged, contact customer service.

6. TROUBLESHOOTING

If you encounter issues with your KRUPS Pressa Maxi, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|-----------------------------|--|---|
| Juicer does not turn on. | Not plugged in; power outage; improper assembly. | Ensure the power cord is securely plugged into a working outlet. Check your home's circuit breaker. Verify all parts are correctly assembled. |
| Motor stops during juicing. | Overheating; excessive pressure applied. | Release pressure on the reamer. Allow the motor to cool down for a few minutes. Apply moderate, consistent pressure when juicing. |
| Low juice yield. | Fruit not ripe; insufficient pressure; reamer clogged. | Use ripe, room-temperature fruit. Apply firm, consistent pressure. Clean the reamer and pulp filter if clogged. |
| Juicer is noisy. | Improper assembly; foreign object. | Disassemble and reassemble all parts, ensuring they are correctly seated. Check for any foreign objects. |

If the problem persists after trying these solutions, please contact KRUPS customer support.

7. SPECIFICATIONS

| Feature | Specification |
|--------------|---------------|
| Model Number | 293-70 |
| Brand | KRUPS |

| Feature | Specification |
|-----------------------|--------------------------------------|
| Capacity | 24 ounces (1.5 pounds) |
| Power Source | Corded Electric |
| Number of Speeds | 1 |
| Material | Stainless Steel |
| Color | Black |
| Special Feature | Portable |
| Recommended Use | Citrus Fruits |
| Dishwasher Safe Parts | Juice container, pulp filter, reamer |

8. WARRANTY AND SUPPORT

Your KRUPS Pressa Maxi Citrus Press Juicer is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about warranty service, please contact KRUPS customer support. Contact information can typically be found on the KRUPS official website or on your product packaging.

When contacting support, please have your model number (293-70) and proof of purchase readily available.