

[Manuals.plus](#) /

› [Polder](#) /

› Polder Digital In-Oven Thermometer/Timer User Manual

Polder 362-90

Polder Digital In-Oven Thermometer/Timer

Model: 362-90

Brand: Polder

PRODUCT OVERVIEW

The Polder Digital In-Oven Thermometer/Timer is designed to simplify cooking by providing precise temperature monitoring and timing capabilities. This device features a pre-settable alarm for both temperature and time, ensuring your dishes are cooked to perfection. It includes a durable probe for in-oven use and a clear digital display for easy reading.



Image: The Polder Digital In-Oven Thermometer/Timer, showing the main unit with its digital display and the connected temperature probe. The unit is white with gray buttons and a clear screen.

Key Features:

- Programmable timer and thermometer with On/Off switch.
- 24-hour countdown timer, usable independently or with the thermometer.

- Memory function to save frequently used temperature settings.
- Flip-top display and magnetic wall mount for versatile placement and easy viewing.
- Temperature range: 32°F to 392°F (0°C to 200°C), switchable between Celsius and Fahrenheit.
- Long 43-inch probe wire for convenient use in ovens.

SETUP GUIDE

1. Battery Installation

The thermometer/timer requires one AAA battery (included). To install:

1. Locate the battery compartment on the back of the unit.
2. Open the battery cover.
3. Insert one AAA battery, ensuring correct polarity (+/-).
4. Close the battery cover securely.



Image: Rear view of the Polder Digital In-Oven Thermometer/Timer, highlighting the battery compartment, the main ON/OFF switch, and the two magnetic pads for mounting.

2. Probe Connection

Connect the temperature probe to the designated port on the side of the main unit. Ensure the connection is firm.

3. Initial Placement

The unit features a flip-top display for optimal viewing angles and magnets on the back for convenient mounting on metallic surfaces like oven doors or refrigerators.



Image: The Polder thermometer demonstrating its flip-top display, showing how the screen can be angled for better visibility.



Image: The Polder Digital In-Oven Thermometer/Timer magnetically attached to the side of an oven, with the probe inserted into a dish inside the oven.

OPERATING INSTRUCTIONS

Power On/Off

Locate the main ON/OFF switch on the back of the unit. Slide it to the "ON" position to power on the device. Slide to "OFF" when not in use to conserve battery life.

Setting Temperature Alarm

1. Ensure the main power switch on the back is "ON".
2. Press the **TEMP SET** button. The "SET TEMP" display will flash.
3. Use the **UP** and **DOWN** buttons to adjust the desired target temperature.
4. Press **TEMP SET** again to confirm, or wait a few seconds for it to set automatically.

- Slide the **TEMP ALERT** switch on the front of the unit to "ON" to activate the temperature alarm. The alarm will sound when the probe reaches the set temperature.

Setting Timer

- Press the **HR** button to set the hours and the **MIN** button to set the minutes.
- Press **START/STOP** to begin the countdown.
- To pause, press **START/STOP** again. Press again to resume.
- To clear the timer, press the **CLEAR** button.
- The alarm will sound when the timer reaches zero.

Using Timer and Thermometer Simultaneously

The unit can operate both the timer and thermometer functions concurrently. Set both as described above. The alarm will sound for whichever function reaches its set point first.

Switching Temperature Units (°F/°C)

On the back of the unit, near the battery compartment, there is a small switch to toggle between Fahrenheit (°F) and Celsius (°C) temperature readings.

Memory Function

The thermometer/timer is equipped with a memory function that saves the last used temperature setting, allowing for quick recall for frequently cooked items.

MAINTENANCE

Cleaning

To clean the unit, wipe it with a damp cloth. Do not immerse the main unit in water. The probe can be wiped clean with a damp cloth and mild detergent. Ensure the probe connection port on the main unit remains dry.

Battery Replacement

When the display dims or the unit stops functioning correctly, it may be time to replace the AAA battery. Follow the battery installation steps in the "Setup Guide" section.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Main ON/OFF switch on the back is off, or battery is depleted/incorrectly installed.	Ensure the main ON/OFF switch on the back is in the "ON" position. Check battery installation and replace if necessary.
Temperature alarm does not sound.	TEMP ALERT switch is off, or target temperature not set.	Slide the TEMP ALERT switch on the front to "ON". Verify that a target temperature has been set.
Timer alarm sounds only once and then counts up silently.	This is the intended behavior for this model.	Be attentive to the initial alarm. The unit will continue to display the elapsed time after the alarm stops.

Problem	Possible Cause	Solution
Inaccurate temperature readings.	Probe not fully inserted, or probe damage.	Ensure the probe is fully inserted into the food. If readings remain inaccurate, the probe may need replacement.

SPECIFICATIONS

Feature	Detail
Model Name	THM-362-90
Item Model Number	362-90
Brand	Polder
Temperature Range	32°F to 392°F (0°C to 200°C)
Probe Wire Length	43 inches
Power Source	1 x AAA Battery (included)
Display Type	Digital
Material	Plastic (Outer Material)
Item Weight	2.24 ounces
Product Care	Wipe Clean

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for this product are not provided in this manual. Please refer to the product packaging or the official Polder website for the most current warranty information.

Customer Support

For further assistance, product inquiries, or troubleshooting not covered in this manual, please visit the official Polder website or contact their customer service department. Contact information can typically be found on the brand's official website or product packaging.

You can visit the Polder Store for more information:[Polder Official Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question