

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Cuisinart](#) /

> [Cuisinart 12-Cup Replacement Glass Carafe for Coffee Maker, DCC-1200PRC Instruction Manual](#)

Cuisinart DCC-1200PRC

Cuisinart 12-Cup Replacement Glass Carafe (DCC-1200PRC) Instruction Manual

Model: DCC-1200PRC | Brand: Cuisinart

INTRODUCTION

This instruction manual provides detailed information for the Cuisinart 12-Cup Replacement Glass Carafe (DCC-1200PRC). This carafe is designed as a direct replacement for various Cuisinart coffeemakers, ensuring continued functionality and fresh coffee brewing. Please read this manual thoroughly to understand the features, proper usage, and maintenance of your new carafe.

SAFETY INFORMATION

- Handle glass carafe with care. Glass is fragile and can break if dropped or subjected to sudden temperature changes.
- Avoid placing the hot carafe on cold or wet surfaces.
- Do not use abrasive cleaners, steel wool, or other abrasive materials to clean the carafe, as this can scratch or weaken the glass.
- Ensure the carafe is properly seated on the warming plate of your coffeemaker to prevent spills and ensure proper heating.
- Keep out of reach of children.

PRODUCT OVERVIEW

The Cuisinart 12-Cup Replacement Glass Carafe is designed to seamlessly integrate with compatible Cuisinart coffeemakers. It features a durable glass construction and user-friendly design elements.

Key Features:

- **12-Cup Capacity:** Holds 60 fluid ounces (approximately 2.8 liters), suitable for brewing 2 to 12 cups of coffee.
- **Ergonomic Handle:** Designed for a comfortable and secure grip, suitable for both left and right-handed users.
- **Dripless Spout:** Engineered to prevent drips and spills during pouring.
- **Knuckle Guard:** Provides added protection against accidental burns from the hot warming plate or carafe.
- **Brewer Markings:** Clear markings on the side indicate liquid levels from 2 to 12 cups.
- **BPA Free:** All materials in contact with coffee are BPA free.



Figure 1: Cuisinart 12-Cup Replacement Glass Carafe with handle and lid.



Figure 2: Close-up view of the carafe's clear 2-12 cup brewer markings.



Figure 3: A hand holding the carafe, illustrating its ergonomic design and approximate dimensions (8.4"W x 7.5"H).

SETUP

1. **Unpack:** Carefully remove the carafe from its packaging. Inspect for any damage.
2. **Initial Cleaning:** Before first use, wash the carafe and lid in warm, soapy water. Rinse thoroughly.
3. **Placement:** Place the clean carafe onto the warming plate of your compatible Cuisinart coffeemaker. Ensure it is seated correctly.

OPERATING INSTRUCTIONS

The carafe functions as the coffee collection vessel for your coffeemaker. Refer to your specific Cuisinart coffeemaker's manual for detailed brewing instructions.

- **Brewing:** Ensure the carafe is correctly positioned on the warming plate before starting the brewing cycle.
- **Pouring:** Use the ergonomic handle and dripless spout to pour brewed coffee. The knuckle guard helps protect your hand from heat.
- **"Brew Pause" Feature:** If your coffeemaker has a "Brew Pause" feature, the carafe can be temporarily removed during brewing to pour a cup without drips. Return the carafe to the warming plate within 30 seconds to prevent overflow.

Your browser does not support the video tag.

Video: Official product overview of the Cuisinart DCC-1200PRC 12-Cup Replacement Glass Carafe, demonstrating its features and use.

MAINTENANCE AND CLEANING

- **Daily Cleaning:** Wash the carafe and lid in warm, soapy water after each use. Rinse thoroughly.
- **Dishwasher Safe:** The carafe and lid are dishwasher safe. Place them on the upper rack only.
- **Stain Removal:** For stubborn coffee stains, fill the carafe with a solution of equal parts white vinegar and water, let it sit for an hour, then scrub gently with a soft brush and rinse well.
- **Preventing Stains:** To prevent coffee stains from building up, clean the carafe daily and avoid leaving coffee in it for extended periods.

TROUBLESHOOTING

If you encounter issues with your carafe, consider the following:

- **Carafe not fitting:** Ensure you have the correct model (DCC-1200PRC) for your Cuisinart coffeemaker. Refer to the compatibility list in the specifications section.
- **Dripping during pouring:** Check if the lid is properly secured on the carafe. The dripless spout relies on a correct lid fit.
- **Glass breakage:** Glass is fragile. Avoid impacts with hard surfaces (e.g., granite or tile countertops) and sudden temperature changes.

SPECIFICATIONS

Brand	Cuisinart
Model Name	DCC-1200PRC 12-Cup Replacement Glass Carafe
Material	Glass
Capacity	2.8 Liters (94.7 Ounces / 12 Cups)
Product Dimensions	8.4"W x 7.5"H
Item Weight	1 Pound
Special Feature	Ergonomic Handle, Dripless Spout, Knuckle Guard
Material Feature	BPA Free
Compatibility	CHW-12, CHW-12P1, DCC-1100BK, DCC-1200, DCC-2650, DGB-550BK, DGB-550BK1, DGB-625BC, DGB-700BC, SS-12, DGB500BK

WARRANTY AND SUPPORT

For warranty information or product support, please contact Cuisinart customer service or visit the official Cuisinart website. Keep your purchase receipt for warranty claims.