

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Hamilton Beach](#) /
- › [Hamilton Beach Extra-Tall Electric Automatic Can Opener User Manual](#)

Hamilton Beach 76380Z

Hamilton Beach Extra-Tall Electric Automatic Can Opener User Manual

Model: 76380Z

Brand: Hamilton Beach

1. OVERVIEW

The Hamilton Beach Extra-Tall Electric Automatic Can Opener is designed to simplify meal preparation. It features SureCut patented technology for reliable can opening, an automatic shutoff for convenience, and a built-in knife sharpener. The removable cutting unit ensures easy cleaning, and integrated cord storage helps maintain a tidy countertop.

2. SETUP

1. **Unpack the Unit:** Carefully remove the can opener from its packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the can opener on a stable, flat surface near an electrical outlet.
3. **Cord Management:** Unwind the power cord from the cord storage area located at the back of the unit. Plug the can opener into a standard electrical outlet.



Useful built-in features

A knife sharpener and cord storage are on the back

A convenient built-in knife sharpener is located on the back of the unit, along with cord storage.

3. OPERATING INSTRUCTIONS

1. **Positioning the Can:** Lift the lever of the can opener. Place the can under the cutting unit, ensuring the rim of the can is positioned between the cutting blade and the drive wheel.
2. **Engaging the Opener:** Press the lever down firmly until the cutting blade pierces the can lid. The can opener will automatically start rotating the can and cutting the lid.
3. **Automatic Shutoff:** The can opener is designed to automatically shut off once the can has been fully opened. This allows for hands-free operation.
4. **Lid Removal:** After the cutting process is complete, the lid will remain attached to the magnetic holder. Carefully lift the can and detach the lid from the magnet. Dispose of the lid safely.
5. **Using the Knife Sharpener:** For sharpening knives, locate the knife sharpener slot on the back of the unit. Hold the knife with the blade facing away from you and insert it into the slot. Pull the knife through the slot several times, applying light, even pressure.

Opens cans the first time, every time

With SureCut™ technology



The SureCut patented technology ensures cans are opened efficiently on the first attempt, every time.

Automatically shuts off

For easy,
hands-free operation



The automatic shutoff feature allows for hands-free operation once the can is engaged.

Opens small to tall cans

With an extra-tall design



Its extra-tall design accommodates a wide range of can sizes, from small to large.

4. MAINTENANCE AND CLEANING

Regular cleaning of your can opener will ensure optimal performance and hygiene.

1. **Disconnect Power:** Always unplug the can opener from the electrical outlet before cleaning.
2. **Remove Cutting Unit:** The cutting unit is removable for easy cleaning. Press the release button (if applicable, usually located near the cutting mechanism) and detach the unit.
3. **Wash Cutting Unit:** The removable cutting unit is dishwasher safe. Alternatively, wash it by hand with warm, soapy water and rinse thoroughly. Ensure it is completely dry before reattaching.
4. **Clean Base:** Wipe the exterior of the can opener base with a damp cloth. Do not immerse the base in water.
5. **Reassemble:** Once all parts are dry, reattach the cutting unit to the base until it clicks securely into place.

Easy to clean

The removable cutting unit is dishwasher safe



The cutting unit is easily removable for convenient cleaning and is dishwasher safe.

5. TROUBLESHOOTING

- **Can Opener Does Not Start:**

- Ensure the power cord is securely plugged into a working electrical outlet.
- Verify that the cutting lever is fully pressed down to engage the motor.

- **Can Does Not Open Properly:**

- Check that the can rim is correctly positioned between the cutting blade and the drive wheel.
- Ensure the cutting blade and drive wheel are clean and free from food debris. Clean the removable cutting unit if necessary.
- Some cans with unusually thick rims or irregular shapes may be difficult to open.

- **Lid Does Not Detach from Magnet:**

- The magnet is designed to hold the lid after cutting. If it doesn't, ensure the can opener has completed its cycle and the lid is fully separated from the can.
- Gently pull the can away from the unit, and the lid should remain attached to the magnet for easy disposal.

6. SPECIFICATIONS

- **Model:** 76380Z
- **Color:** Black
- **Material:** Metal, Plastic
- **Blade Material:** Metal
- **Operation Mode:** Automatic
- **Wattage:** 60 watts
- **Item Dimensions (W x H):** 5.9 inches x 10.24 inches
- **Included Components:** Cutting Unit, Knife Sharpener

Hamilton Beach®



CLASSIC CHROME Extra-Tall Can Opener

Product dimensions: 5.9 inches wide x 10.24 inches high.

7. WARRANTY AND SUPPORT

This Hamilton Beach Electric Automatic Can Opener comes with a manufacturer's warranty.

- **Manufacturer Warranty:** One (1) Year Warranty.
- **Customer Support:** For further assistance, product registration, or warranty claims, please visit the official Hamilton Beach website or contact their customer service department.

