

## KRUPS FNC211-42

# KRUPS FNC211-42 Novo 3000 Espresso/Cappuccino/Latte Maker User Manual

Model: FNC211-42

## INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your KRUPS FNC211-42 Novo 3000 Espresso/Cappuccino/Latte Maker. Please read this manual thoroughly before first use and keep it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

---

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.

## PRODUCT COMPONENTS

---

Familiarize yourself with the main components of your espresso machine:



Image: The KRUPS FNC211-42 Novo 3000 Espresso/Cappuccino/Latte Maker. This black machine features a control knob, power buttons, a portafilter, a steam wand, and a removable drip tray. Two white espresso cups are shown on the drip tray, filled with coffee.

- **Water Tank:** Large, 37-ounce (approx. 1 liter) removable tank for water supply.
- **Control Panel:** Includes power buttons and a central control knob for selecting functions (espresso, steam, hot water).
- **Portafilter:** Holds ground coffee or ESE pods. Comes with two filter holders: one for ground coffee and one for ESE pods.
- **Steam Wand/Frother:** Used for frothing milk for cappuccinos and lattes, and for dispensing hot water.
- **Drip Tray:** Removable for easy cleaning, collects excess liquid.
- **Cup Warming Plate:** Located on top of the machine to keep cups warm.

## SETUP

---

Before first use, follow these steps:

1. **Unpack:** Carefully remove all packaging materials and components.
2. **Clean:** Wash the water tank, portafilter, and drip tray with warm, soapy water. Rinse thoroughly and dry.
3. **Fill Water Tank:** Fill the removable water tank with fresh, cold water up to the MAX line. Place it back securely on the machine.
4. **Prime the System:**
  - Place a large container under the portafilter and steam wand.
  - Plug the machine into a grounded electrical outlet.
  - Turn on the machine. Allow it to heat up until the indicator light illuminates steadily.

- Turn the control knob to the hot water/steam position to release water through the steam wand until water flows continuously.
- Turn the control knob to the espresso position to release water through the portafilter until water flows continuously.
- Turn the machine off. The system is now primed.

## OPERATING INSTRUCTIONS

---

### Making Espresso

1. Ensure the water tank is filled.
2. Select the appropriate filter holder (for ground coffee or ESE pod) and insert it into the portafilter.
3. For ground coffee: Fill the filter holder with finely ground espresso coffee. Tamp lightly. For ESE pod: Place one ESE pod into the designated filter holder.
4. Attach the portafilter to the brewing head by aligning it and twisting firmly to the right until secure.
5. Place one or two espresso cups on the drip tray beneath the portafilter spouts.
6. Turn on the machine and wait for the indicator light to signal it's ready (heated).
7. Turn the control knob to the espresso brewing position. Coffee will begin to flow into the cups.
8. Once the desired amount of espresso is brewed, turn the control knob back to the standby/off position.
9. Carefully remove the portafilter and discard the used coffee grounds or pod.

### Making Cappuccino or Latte (Milk Frothing)

1. Brew your espresso shot(s) first, as described above.
2. Fill a frothing pitcher with cold milk (dairy or non-dairy) to about one-third full.
3. Turn the control knob to the steam position and wait for the machine to heat up for steaming (indicator light will signal readiness).
4. Position the steam wand just below the surface of the milk in the pitcher.
5. Turn the control knob to release steam. Move the pitcher up and down slowly to incorporate air and create froth.
6. Once the milk is frothed to your desired consistency and temperature, turn the control knob back to the standby/off position.
7. Wipe the steam wand immediately with a damp cloth to prevent milk residue from drying.
8. Pour the frothed milk over your espresso.

### Hot Water Function

1. Ensure the water tank is filled.
2. Place a cup under the steam wand.
3. Turn on the machine and wait for it to heat up.
4. Turn the control knob to the hot water/steam position. Hot water will dispense from the steam wand.
5. Turn the control knob back to the standby/off position when done.

## MAINTENANCE

---

Regular cleaning ensures optimal performance and longevity of your machine.

### Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray after each use.
- **Portafilter and Filter Holders:** Remove and rinse after each use. Clean any coffee residue from the brewing head with a damp cloth.
- **Steam Wand:** Wipe immediately after frothing milk. Periodically, remove the tip and clean any dried milk with a small brush or toothpick.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners.

## Monthly Cleaning (or as needed)

- **Descaling:** Depending on water hardness and frequency of use, descale the machine every 1-3 months. Use a commercial descaling solution designed for espresso machines, following the product's instructions.
- **Water Tank:** Wash the water tank thoroughly with warm, soapy water.

## TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No coffee flow or very slow drip	Coffee too finely ground or tamped too hard; clogged filter; machine needs descaling.	Use a coarser grind; reduce tamping pressure; clean filter; descale machine.
Water leaking from machine	Portafilter not properly secured; water tank not seated correctly; cracked component.	Ensure portafilter is twisted firmly; reseal water tank; inspect for damage and contact support if necessary.
No steam or weak steam	Steam wand clogged; machine not heated sufficiently; machine needs descaling.	Clean steam wand opening; allow machine to fully heat; descale machine.
Espresso is too weak	Not enough coffee; coffee too coarsely ground; insufficient brewing time.	Increase coffee amount; use finer grind; ensure machine is fully heated before brewing.

## SPECIFICATIONS

Feature	Detail
Model Name	FNC211-42
Brand	KRUPS
Color	Black
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Wattage	3000 watts
Water Tank Capacity	37 ounces (approx. 1 liter)
Dimensions (L x W x H)	13 x 12 x 11 inches

Feature	Detail
Item Weight	11.8 pounds
Special Features	Removable Tank, Milk Frother

## WARRANTY AND SUPPORT

---

This product typically comes with a 1-year warranty. For warranty claims, technical support, or service inquiries, please refer to the official KRUPS website or contact their customer service directly. Keep your proof of purchase for warranty validation.

For additional resources, you may refer to the official user manual PDF available at [KRUPS FNC211-42 User Manual PDF](#)