

[manuals.plus](#) /› [EIZO](#) /› [NANAO FlexScan L767-R 19-inch Color LCD Display User Manual](#)

## EIZO L767-R

# NANAO FlexScan L767-R User Manual

Model: L767-R | Brand: EIZO

## 1. INTRODUCTION

Thank you for purchasing the NANAO FlexScan L767-R 19-inch Color LCD Display. This manual provides essential information for setting up, operating, and maintaining your monitor. Please read this manual thoroughly before use to ensure proper and safe operation.



Figure 1: NANAO FlexScan L767-R LCD Monitor. This image shows the monitor from a slight angle, highlighting its slim bezel and adjustable stand.

## 2. FEATURES

The FlexScan L767-R is designed for optimal visual performance and user convenience. Key features include:

- **Vibrant Color Display:** Supports approximately 16.77 million full colors for impressive color vibrancy.
- **FineContrast Function:** Easily adjust brightness and gamma settings to match content (text, images) for optimal viewing.
- **Dual Input Support:** Equipped with both analog and digital input terminals for versatile connectivity.
- **Integrated Audio:** Features built-in speakers for audio output.
- **Ergonomic Stand:** The stand allows for a 50mm vertical height adjustment, enhancing user comfort.
- **Non-Glare Surface:** The screen surface is non-glare, reducing reflections and eye strain.

## 3. SETUP

Follow these steps to set up your FlexScan L767-R monitor:

1. **Unpack the Monitor:** Carefully remove the monitor and all accessories from the packaging.
2. **Position the Monitor:** Place the monitor on a stable, flat surface. Ensure adequate ventilation around the monitor.
3. **Connect Video Cable:**
  - For *Analog Connection*: Connect the D-Sub (VGA) cable from your computer's video output to the analog input port on the monitor.
  - For *Digital Connection*: Connect the DVI cable from your computer's video output to the digital input port on the monitor.
4. **Connect Audio Cable (Optional):** If you wish to use the built-in speakers, connect an audio cable from your computer's audio output to the audio input port on the monitor.
5. **Connect Power Cable:** Plug the power cable into the monitor's power input, then plug the other end into a grounded electrical outlet.
6. **Power On:** Press the power button on the monitor. Power on your computer. The monitor should display your computer's screen.

## 4. OPERATING

This section describes the basic operation of your FlexScan L767-R monitor.

### 4.1. FineContrast Function

The FineContrast function allows you to quickly switch between different display modes optimized for various content types. Use the dedicated buttons on the monitor's front panel to cycle through modes such as Text, Picture, Movie, and Custom. Each mode adjusts brightness, gamma, and color temperature for the best viewing experience.

### 4.2. Stand Adjustment

The monitor stand offers vertical height adjustment. Gently push or pull the monitor panel up or down to adjust its height within the 50mm range. Ensure the monitor is stable after adjustment.

### 4.3. On-Screen Display (OSD) Menu

Access the OSD menu using the control buttons on the front panel to fine-tune settings such as brightness, contrast, color balance, input selection, and more. Refer to the detailed OSD menu guide in the full manual for comprehensive options.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and performance of your monitor.

- **Cleaning the Screen:** Use a soft, lint-free cloth slightly dampened with water or a non-abrasive, monitor-

specific cleaning solution. Do not spray liquid directly onto the screen.

- **Cleaning the Casing:** Wipe the monitor casing with a soft, dry cloth. Avoid using strong detergents or solvents.
- **Ventilation:** Ensure the ventilation openings on the monitor are not blocked to prevent overheating.
- **Power Off:** Always turn off the monitor and unplug it from the power outlet before cleaning or if it will be unused for an extended period.

## 6. TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common problems and solutions:

- **No Image on Screen:**
  - Check if the monitor is powered on.
  - Verify that the video cable is securely connected to both the monitor and the computer.
  - Ensure the correct input source is selected on the monitor (Analog/Digital).
- **Image is Distorted or Blurry:**
  - For analog connections, perform an auto-adjustment via the OSD menu.
  - Check the display resolution settings on your computer. Ensure it matches the monitor's native resolution (1280x1024).
- **No Sound from Speakers:**
  - Verify the audio cable is properly connected.
  - Check the volume settings on both the monitor and your computer.

If the problem persists after trying these solutions, please contact EIZO customer support or refer to the comprehensive troubleshooting guide in the full product manual.

## 7. SPECIFICATIONS

Feature	Specification
Brand	EIZO
Model	L767-R
Screen Size	19 Inches
Resolution	1280 x 1024
Screen Surface Description	Non-glare
Brightness	250 cd/m <sup>2</sup>
Refresh Rate	60 Hz
Backlight Technology	CCFL

HDMI Input Ports	0
USB Function	None
Built-in Speaker	Yes
TV Function	No
3D Display Support	Not supported
Touch Panel	Not supported
Item Weight	10 Kilograms
Package Dimensions	56 x 53.5 x 22.5 cm

## 8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your product or visit the official EIZO website. Warranty terms and conditions may vary by region.

For technical support, product inquiries, or service requests, please contact EIZO customer support through their official channels. Keep your product model number (L767-R) and serial number ready when contacting support.

EIZO Official Website: [www.eizo.com](http://www.eizo.com)

© 2024 EIZO Corporation. All rights reserved.

## Related Documents - L767-R

<p>Instructions for Use ■User's Manual</p> <p><b>FlexScan</b> T1781 Touch Panel Color LCD Monitor</p> <p><small>Important Please read this document, User's Manual, and the Help Guide before using the monitor. Detailed information including safety and operating instructions is provided with this monitor. Please refer to the Help Guide for more information regarding how to use the monitor. The latest User's Manual is available on the download page on our website. <a href="http://www.eizo.com">www.eizo.com</a></small></p> <p></p>	<p><b>EIZO FlexScan T1781 Touch Panel Color LCD Monitor User's Manual</b></p> <p>User's manual for the EIZO FlexScan T1781 Touch Panel Color LCD Monitor, covering features, setup, adjustments, troubleshooting, and specifications.</p>
<p><b>User's Manual</b></p> <p><b>FlexScan</b> S1934 Color LCD Monitor</p> <p><small>Important Please read this document, User's Manual, and the Help Guide before using the monitor. Detailed information including safety and operating instructions is provided with this monitor. Please refer to the Help Guide for more information regarding how to use the monitor. The latest User's Manual is available on the download page on our website. <a href="http://www.eizo.com">www.eizo.com</a></small></p> <p></p>	<p><b>EIZO FlexScan S1934 Color LCD Monitor User's Manual</b></p> <p>User's manual for the EIZO FlexScan S1934 Color LCD Monitor, covering setup, basic and advanced adjustments, troubleshooting, specifications, and warranty information.</p>

Documents - EIZO – L767-R

液晶モニター用保護パネル

概要



光沢面/ノングレアコーティング両用タイプ (通過率: 90%)

FlexScan

FP-2701W	27.0型	SX2761W
FP-2201W	22.0型	S2201W-E
FP-2100W	21.1型	S2111W, S2110W, S2110W-R
FP-2000W	20.1型	S2021W, S2020W
FP-2000	20.1型	S2000
FP-2000W	20.1型	S2020W
FP-1904	17型	S170, L568, P170, L561
ColorEdge	21.1型	CE210W
FP-2100W	21.1型	

光沢面/ノングレアコーティング両用タイプ (通過率: 87%)

FlexScan

FP-24	19.5型	L771
FP-701	19型	S 590, L768, L770, L780, L798, L767-R, L787
FP-601	18.1型	L695, L695EX, L696, L695, L690, L676, L675, L671, L681
FP-503	17型	L590, L590EX, L590
FP-502	17型	L591-R, L591
FP-501	17型	L567-R, L567, L565-A, L565
FP-401	16.5型	L465, L461
ColorEdge	20.1型	CE200W
FP-701	19型	C019
FP-601	18.1型	C018

光沢面/ノングレアコーティング両用タイプ (通過率: 87%)

[\[pdf\] Catalog](#)

discontinued lcd panel eizo co jp support db files catalogs ac |||

90 FlexScan FP-2701W FP-2201W FP-2100W FP-2000W FP-2000 FP-2001W FP-504 ColorEdge FP-2100W ... P-401 ColorEdge FP-701 FP-601 19.6 19 18.1 17 17 17 16 19 18.1 L771 S190, L768, L797, L788, L795, **L767-R**, L767 L695, L685EX, L685, L665, L680, L676, L675, L671, L661 L550-R, L550 L557-R, L557 L567-R...

lang:id **score:15** filesize: 337.75 K page\_count: 2 document date: 2012-01-16

ハイトアジャスタブルス탠ド

概要



ハイトアジャスタブルス탠드

LS-H62-D	16/15型	LS-H62-D
	LS-H62-D	標準価格 : 12,600円 (税込13,200円)
	LS-H62-D	特典価格 : 10,800円 (税込11,880円)
LS-H50-D	19型	LS-H51-D
	LS-H50-D	標準価格 : 16,800円 (税込18,480円)
	LS-H50-D	特典価格 : 14,700円 (税込15,870円)
LS-H50-D-BK	21.1/19/18.1型	LS-H63-D
	LS-H50-D-BK	標準価格 : 18,800円 (税込20,680円)
	LS-H50-D-BK	特典価格 : 16,700円 (税込18,370円)
LS-H50-D-BK	17型	LS-H50-D
	LS-H50-D	標準価格 (税込) : 16,000円
LS-H50-D-BK	16.5型	LS-H50-D
	LS-H50-D	標準価格 (税込) : 16,000円
LS-H50-D-BK	17型	LS-H51-D
	LS-H51-D	標準価格 (税込) : 14,200円
LS-H51-D	16/15型	LS-H62-D
	LS-H51-D	標準価格 (税込) : 12,000円

対応周波数

※ 別途スピーカーは付属いたしません。また、当社の付属機器との組合せによっては、音量が異なることがあります。

LS-H51-D

LS-H52-D

[\[pdf\] Catalog](#)

discontinued lcd std h1 eizo co jp support db files catalogs ac |||

LS - H62 - D LS - H50 - D - BK 16/15 LS-H32-D 12,600 12,000 19 LS-H71-D 16,800 16,000 17 L ... 5L675 LS-H63-D FlexScan 21.1 19 18.1 ColorEdge 21.1 S2111W, S2110W, S2110W-R M1950-R, M190, L778, **L767-R**, L767 L665 CE210W LS-H51-D FlexScan 17 M1700, M1700-R, M1700C, M1700C-R, L567-R, L567, L565...

lang:i-klingon **score:15** filesize: 424.54 K page\_count: 11 document date: 2012-01-16