

[Manuals.plus](#) /

› [TIMEX](#) /

› Timex T479029J Expedition Easy Set Alarm Watch User Manual

TIMEX T479029J

Timex T479029J Expedition Easy Set Alarm Watch User Manual

Model: T479029J

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex T479029J Expedition Easy Set Alarm Watch. Please read this guide thoroughly to ensure proper use and to maximize the lifespan of your timepiece.



Image: The Timex T479029J Expedition Easy Set Alarm Watch, featuring a round case, analog display, and a brown leather strap.

SETUP

1. Setting the Time

1. Pull the crown (the knob on the side of the watch) out to the furthest position.
2. Turn the crown clockwise or counter-clockwise to move the hands to the correct time.
3. Push the crown back in to its original position to start the watch.

2. Setting the Date (Quick Date Feature)

1. Pull the crown out to the middle position.
2. Turn the crown clockwise or counter-clockwise to adjust the date display.
3. Once the correct date is displayed, push the crown back in to its original position.

4. *Note:* Avoid setting the date between 9 PM and 3 AM, as this may interfere with the automatic date change mechanism.

3. Setting the Alarm (Easy Set Alarm)

Specific instructions for setting the alarm are typically found on the watch's dial or through a dedicated pusher. Refer to the markings on your watch for precise alarm setting procedures. Generally, alarm watches have a separate hand or sub-dial for alarm time setting, adjusted via a dedicated pusher or by pulling the crown to a specific position and rotating.

OPERATING FEATURES

1. Indiglo Night-Light

To activate the Indiglo night-light, press and hold the crown (or the designated Indiglo pusher, if present). The entire watch dial will illuminate for easy viewing in low-light conditions. Release the crown/pusher to turn off the light.

2. Water Resistance

Your Timex T479029J watch is water-resistant to 50 meters (164 feet). This means it is suitable for short periods of recreational swimming, showering, and fishing. It is **not** suitable for diving or snorkeling. To maintain water resistance, ensure the crown is fully pushed in before any contact with water. **Do not operate the crown or pushers while the watch is wet or submerged.**

MAINTENANCE

1. Battery Replacement

This watch requires 1 product-specific battery. When the watch stops running or the Indiglo light dims significantly, it is likely time for a battery replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and maintain water resistance.

2. Cleaning

- **Case:** Wipe the watch case with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials.
- **Leather Strap:** Leather straps can be cleaned with a soft, slightly damp cloth. Allow the strap to air dry completely. Avoid prolonged exposure to direct sunlight or extreme moisture, which can damage the leather.

3. Storage

When not in use, store your watch in a cool, dry place away from direct sunlight and strong magnetic fields.

TROUBLESHOOTING

- **Watch Not Running:**
 - Check if the crown is fully pushed in.
 - The battery may need replacement. See "Battery Replacement" in the Maintenance section.
- **Indiglo Light Not Working:**
 - Ensure the crown/pusher is being pressed correctly.
 - A weak battery can cause the Indiglo light to dim or fail.
- **Date Not Advancing Automatically:**
 - Ensure the time is set correctly, especially distinguishing between AM and PM for the 24-hour cycle.

- Avoid manually setting the date between 9 PM and 3 AM. If the issue persists, a watch technician may need to inspect the movement.
- **Alarm Not Sounding:**
 - Verify that the alarm time is set correctly and the alarm function is activated (if applicable, depending on the watch's specific alarm mechanism).
 - A low battery can affect alarm functionality.

SPECIFICATIONS

Model Number	T479029J
Brand	TIMEX
Movement Type	Quartz
Display Type	Analog
Case Material	Metal
Case Diameter	39 Millimetres
Case Thickness	10 Millimetres
Crystal Material	Acrylic
Band Material Type	Leather
Band Colour	Brown
Band Width	16 Millimetres
Clasp Type	Tang Buckle
Water Resistance Depth	50 Metres (164 Feet)
Special Features	Alarm, Indiglo Night-Light, Date Display
Power Source	Battery Powered (1 Product Specific battery)
Product Dimensions	8.9 x 0.6 x 7.6 cm; 113.4 g

WARRANTY INFORMATION

Warranty terms and conditions for your Timex T479029J watch are typically provided with your purchase documentation. For detailed information regarding warranty coverage, duration, and claims procedures, please refer to the warranty card included in your product packaging or visit the official Timex website.

SUPPORT

Should you require further assistance, have questions not covered in this manual, or need to arrange for service, please contact Timex customer support. You can typically find contact information, including phone numbers and email addresses, on the official Timex website: www.timex.com.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0000TIJ4U>

More documents and user manuals: <https://manuals.plus/>