

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm QuickSnap Flash 400 One-Time-Use Camera Instruction Manual

Fujifilm 7032835

Fujifilm QuickSnap Flash 400 One-Time-Use Camera Instruction Manual

Model: 7032835

INTRODUCTION

The Fujifilm QuickSnap Flash 400 camera is a convenient and easy-to-use one-time-use camera designed for capturing moments without complex settings. It comes pre-loaded with high-speed film and features a built-in flash, making it suitable for various lighting conditions.



Figure 1: Front view of two Fujifilm QuickSnap Flash 400 cameras.

SETUP

The Fujifilm QuickSnap Flash 400 camera is designed for immediate use. It comes pre-loaded with Fujicolor 400-speed film, providing 27 exposures. No film loading or battery installation is required by the user.

- Ensure the camera is free from any packaging materials.
- Verify the film counter, usually located on the top or back, indicates 27 exposures remaining.



Figure 2: Top-down view highlighting the film counter on the camera.

OPERATING INSTRUCTIONS

Using the QuickSnap Flash 400 is straightforward. Follow these steps to capture your photos:

1. **Advance the Film:** Locate the thumbwheel on the top right of the camera (when looking from the back). Rotate the thumbwheel forward until it stops. This advances the film to the next frame and cocks the shutter.



Figure 3: Angled view showing the film advance thumbwheel.

2. **Activate the Flash (Optional):** For indoor shots or low-light conditions, slide the flash switch on the front of the camera to the "ON" position. The flash will charge automatically. The flash has a range of up to 10 feet. For continuous flash, keep the switch in the "ON" position.



Figure 4: Front view detailing the flash unit and its ON/OFF switch.

3. **Compose Your Shot:** Look through the viewfinder to frame your subject. The camera features a fixed-focus lens, providing sharp images for subjects typically from 3 feet to infinity.
4. **Take the Picture:** Press the shutter button located on the top of the camera firmly.
5. **Repeat:** Advance the film again for the next shot. The film counter will decrease with each picture taken.

MAINTENANCE

The Fujifilm QuickSnap Flash 400 requires minimal maintenance due to its one-time-use design. However, proper handling ensures optimal performance:

- Keep the camera dry and away from extreme temperatures.
- Avoid exposing the camera to direct sunlight for prolonged periods, especially after use, as this can affect the film.
- Do not attempt to open the camera body, as this will expose the film and ruin your pictures.

Recycling Information

In line with Fujifilm's commitment to environmental conservation, all Fujicolor QuickSnap cameras are recyclable. After all

exposures have been used and the film has been developed, please dispose of the camera responsibly according to local recycling guidelines for electronic waste or return it to a photo lab that offers recycling services for disposable cameras.

TROUBLESHOOTING

While the QuickSnap camera is simple to use, here are some common issues and their solutions:

Problem	Possible Cause	Solution
Flash does not fire.	Flash switch is in the "ON" position, but flash is not charged or camera is faulty.	Ensure the flash switch is in the "ON" position and allow a few seconds for the flash to charge. If it still doesn't fire, the flash unit may be depleted or faulty.
Film will not advance.	All 27 exposures have been used.	The camera has reached the end of its film. It is ready for development.
Photos are blurry.	Subject too close or too far; camera shake.	Ensure subjects are within the recommended focus range (approx. 3 feet to infinity). Hold the camera steady when pressing the shutter. Use flash in low light.
Photos are too dark.	Insufficient light; flash not used or subject out of flash range.	Use the flash for indoor shots or in low-light conditions. Ensure subjects are within the 10-foot flash range.

SPECIFICATIONS

Feature	Detail
Film Type	Fujicolor 400-speed film
Exposures	27 per camera
Flash Range	Up to 10 feet (3 meters)
Lens	Fixed-focus
Dimensions (L x W x H)	4.5 x 1.33 x 2.12 inches (11.43 x 3.38 x 5.38 cm)
Weight	3.2 ounces (90.7 grams)
Model Number	7032835
Color	Black with green accents

WARRANTY AND SUPPORT

For specific warranty information, please refer to the packaging or contact Fujifilm customer support directly. As a one-time-use product, warranty coverage typically pertains to manufacturing defects prior to use. Additional support and information can be found in the official Instructions for Use (IFU) PDF document:

Download Official User Guide
(PDF)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question