

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KRUPS](#) /

› **KRUPS 10-Cup Glass Carafe Instruction Manual for Models 136, 140, 149, 177, 178, 264, 464**

KRUPS KR034-42

KRUPS 10-Cup Glass Carafe Instruction Manual

Model: KR034-42

INTRODUCTION

This instruction manual provides essential information for the proper use and care of your KRUPS 10-Cup Glass Carafe. This carafe is designed as a replacement for specific KRUPS coffee maker models, ensuring continued functionality and convenience. Please read this manual thoroughly before first use.

Compatibility: This carafe is compatible with KRUPS coffee maker models 136, 140, 149, 177, 178, 264, and 464.

Note: The lid for this carafe is not included and must be used from your original coffee maker or purchased separately if required.

PRODUCT OVERVIEW



Figure 1: KRUPS 10-Cup Glass Carafe. This image displays the KRUPS 10-Cup Glass Carafe. It features a clear glass body with cup measurement markings on the side, a white ergonomic handle, and a silver-colored base ring. The spout is designed for easy pouring.

The KRUPS 10-Cup Glass Carafe is constructed from durable glass, featuring a comfortable handle and clear measurement

markings for precise liquid volume. Its design ensures a secure fit with compatible KRUPS coffee machines.

SETUP

- 1. Unpacking:** Carefully remove the carafe from its packaging. Inspect for any signs of damage.
- 2. Initial Cleaning:** Before first use, wash the carafe thoroughly with warm, soapy water. Rinse completely and dry.
- 3. Lid Attachment:** If using a lid, ensure it is securely placed on top of the carafe. The lid from your original coffee maker should fit this replacement carafe.
- 4. Placement:** Position the clean carafe onto the warming plate of your compatible KRUPS coffee maker. Ensure it is centered and stable.

OPERATING INSTRUCTIONS

Using the KRUPS 10-Cup Glass Carafe is straightforward. Follow these steps for optimal performance:

- 1. Filling:** Remove the carafe from the coffee maker. Fill it with the desired amount of water, using the cup markings as a guide. Pour the water into your coffee maker's water reservoir.
- 2. Adding Coffee Grounds:** Add your preferred coffee grounds to the coffee maker's filter basket.
- 3. Brewing:** Place the carafe back onto the warming plate. Ensure the lid (if used) is properly seated to allow coffee to drip into the carafe. Start the brewing cycle on your coffee maker.
- 4. Serving:** Once brewing is complete, carefully remove the carafe by its handle to pour coffee.

Your browser does not support the video tag.

Video 1: Carafe Placement Demonstration. This video demonstrates the proper placement and removal of a coffee carafe from a coffee maker. It highlights how the carafe fits securely under the brewing mechanism.

MAINTENANCE AND CLEANING

Regular cleaning will extend the life of your carafe and ensure the best coffee taste.

- Daily Cleaning:** After each use, empty any remaining coffee and rinse the carafe with warm water. Wash with mild dish soap and a soft sponge.
- Stain Removal:** For coffee stains, fill the carafe with warm water and add a small amount of baking soda or a specialized coffee cleaner. Let it soak for 15-30 minutes, then scrub with a brush and rinse thoroughly.
- Dishwasher Safety:** The glass carafe is generally dishwasher safe, but check your coffee maker's manual for specific instructions regarding the lid and handle if they are detachable.
- Drying:** Allow the carafe to air dry completely or dry with a clean cloth to prevent water spots.

TROUBLESHOOTING

Issue	Possible Cause	Solution
Carafe does not fit coffee maker.	Incorrect model compatibility.	Verify your coffee maker model number against the compatible models listed in the Introduction section. This carafe is specifically designed for KRUPS models 136, 140, 149, 177, 178, 264, and 464.
Lid does not fit the carafe.	Lid is not original or is damaged.	This carafe does not include a lid. Use the lid from your original coffee maker. If the original lid is damaged or lost, a replacement lid may be required.

Issue	Possible Cause	Solution
Coffee spills when pouring.	Lid not properly seated or pouring too quickly.	Ensure the lid is correctly aligned and securely placed on the carafe. Pour coffee at a moderate pace.

SPECIFICATIONS

- **Brand:** KRUPS
- **Model Number:** KR034-42
- **Capacity:** 10 Cups
- **Material:** Glass
- **Color:** Black (handle and base ring)
- **Product Dimensions:** 8 x 8 x 6 inches
- **Item Weight:** 15.2 ounces
- **Included Components:** Glass Carafe (Lid not included)
- **UPC:** 010942104803, 010942105183

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation provided with your original KRUPS coffee maker or visit the official KRUPS website. Keep your purchase receipt for warranty claims.

For additional assistance, you may contact KRUPS customer service directly. Contact details can typically be found on the manufacturer's website or in your coffee maker's original manual.

© 2023 KRUPS. All rights reserved.