

Hasbro 06618

Lite Brite Instruction Manual

Model: 06618 | Brand: Hasbro

INTRODUCTION

The Lite Brite is an engaging toy designed to spark creativity through light and color. This cordless flat-screen console allows users to create illuminated designs by inserting colorful pegs into pre-patterned or free-form design sheets. It comes with over 200 factory-sealed pegs and a variety of design pictures to get you started.

SAFETY INFORMATION

- **Small Parts Warning:** This product contains small pegs which may pose a choking hazard for children under 3 years of age. Adult supervision is recommended.
- **Battery Safety:**
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Do not dispose of batteries in fire; they may leak or explode.
- Keep the unit away from water or excessive moisture.
- Do not attempt to open or modify the console.

PACKAGE CONTENTS

Please ensure all items are present in your package:

- 1 x Lite Brite Flat-Screen Console
- Over 200 x Factory Sealed Pegs (various colors)
- 8 x New Design Pictures
- 2 x Free-Form Pictures

SETUP

1. Battery Installation:

Locate the battery compartment on the back of the Lite Brite console. Using a Phillips head screwdriver (not included), open the compartment cover. Insert the required batteries (*batteries not included*) according to the polarity indicators (+/-) inside the compartment. Close the cover and secure it with the screw.

2. Prepare Design Sheet:

Select one of the provided design pictures or a free-form picture. Carefully place the design sheet over the lighted screen area of the console, aligning it with the peg holes. The sheet should lay flat against the screen.

3. Organize Pegs:

The Lite Brite console features a storage area for pegs, typically located at the bottom. Open this compartment and sort your pegs by color for easy access during play.



Image: The Lite Brite Flat-Screen Console, showcasing its design area filled with colorful pegs forming a cake and balloon pattern, and the peg storage tray at the bottom.

OPERATING INSTRUCTIONS

1. **Turn On:** Locate the power button, usually near the screen. Press it to illuminate the screen.
2. **Insert Pegs:** Choose a colored peg and gently insert it into a hole on the design sheet, pushing it firmly until it clicks into place. The peg will light up when properly inserted and the unit is powered on.
3. **Create Designs:** Follow the patterns on the design sheets or create your own unique illuminated artwork.
4. **Automatic Shut-off:** The Lite Brite console is designed with an automatic shut-off feature to conserve battery life. The light will turn off after approximately three minutes of inactivity. To reactivate, simply press the power button again.
5. **Remove Pegs:** To remove pegs, gently pull them out from the screen. Store them in the designated compartment.
6. **Change Design Sheets:** Turn off the unit, remove all pegs, and then carefully lift the current design sheet to replace it with a new one.

MAINTENANCE

- **Cleaning:** Wipe the Lite Brite console with a soft, dry cloth. Do not use abrasive cleaners or immerse the unit in water.
- **Peg Care:** Keep pegs clean and free from debris. Store them in the console's designated compartment to prevent loss.
- **Storage:** When not in use, store the Lite Brite in a cool, dry place, away from direct sunlight and extreme temperatures. Remove batteries if the unit will not be used for an extended period.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones, ensuring correct polarity.
Pegs do not light up.	Pegs not fully inserted or light source issue.	Ensure pegs are pushed firmly into the holes. If problem persists, check power.
Pegs fall out easily.	Holes are worn or pegs are damaged.	Ensure pegs are fully inserted. If holes are worn, try different holes or contact support for replacement pegs.
Design sheets are damaged.	Normal wear and tear or improper handling.	Handle design sheets with care. Replacement sheets may be available from the manufacturer or retailers.

SPECIFICATIONS

Model Number: 06618

Brand: Hasbro

Product Dimensions: 11.8 x 10.9 x 3.9 inches

Item Weight: 2.2 pounds

Power Source: Batteries (not included)

Recommended Age: 6 years and up

ASIN: B00015XMEK

UPC: 076930066188

WARRANTY INFORMATION

This product is manufactured by Hasbro. For specific warranty details, please refer to the packaging or visit the official Hasbro website. Typically, products are covered against manufacturing defects for a limited period from the date of purchase. Please retain your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

For further assistance, questions, or to inquire about replacement parts, please contact Hasbro customer service. You can often find contact information on the product packaging or by visiting the official Hasbro website:

www.hasbro.com

Please have your model number (06618) and purchase details ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question