

Manuals.plus /

› Kenwood /

› Kenwood MultiPro Food Processor Attachment KAH65.000PL Instruction Manual

Kenwood KAH65.000PL

Kenwood MultiPro Food Processor Attachment KAH65.000PL Instruction Manual

Model: KAH65.000PL

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your Kenwood MultiPro Food Processor Attachment, model KAH65.000PL. This accessory is designed to expand the capabilities of your compatible Kenwood stand mixer, offering versatile food preparation functions such as slicing, shredding, chopping, and dicing. Please read these instructions thoroughly before first use and retain them for future reference.

2. SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances, including this attachment. Failure to do so may result in injury or damage to the appliance.

- Ensure the attachment is correctly assembled and securely fitted to the stand mixer before operation.
- Never insert hands or utensils into the feed tube or bowl while the appliance is operating. Always use the pusher provided.
- Switch off and unplug the stand mixer before fitting or removing parts, or when cleaning.
- Handle blades and cutting discs with extreme care, as they are very sharp. Store them safely when not in use.
- Do not process excessively hot liquids or ingredients.
- Keep children away from the appliance during operation.
- Do not overload the attachment. Refer to the capacity guidelines in the operating section.

3. PRODUCT OVERVIEW

The Kenwood MultiPro Food Processor Attachment KAH65.000PL is designed for efficiency and versatility. It

includes a robust bowl, a lid with a feed tube and pusher, and a selection of cutting tools.



Figure 1: The Kenwood MultiPro Food Processor Attachment KAH65.000PL, showing the main bowl, lid, and pusher, ready for attachment to a compatible Kenwood stand mixer.

Key Features:

- **6-in-1 Adjustable Cutting Discs:** Offers six thickness options for slicing, from fine to coarse, and the ability to cut into cubes.
- **Express Dice™ System:** Patented technology for dicing, crudité, and chips, designed for ease of use and cleaning.
- **EverSharp™ Cutting Blades:** Durable blades engineered for efficient processing of ingredients.
- **1.2 Liter Capacity:** Generous bowl capacity for various food preparation tasks.
- **SmartStore Bag:** Convenient storage solution for all essential tools and accessories.
- **Dishwasher Safe:** Most parts are dishwasher safe for easy cleaning.

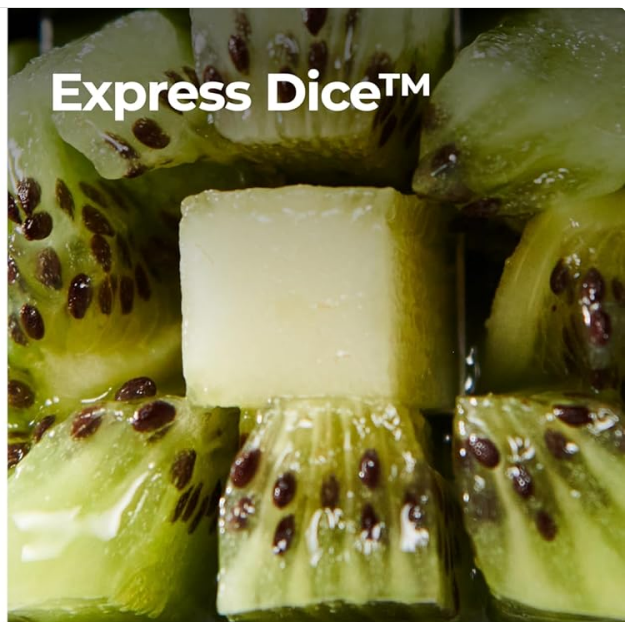


Figure 2: A visual representation of the MultiPro's key features, including the adjustable slicing disc, the Express Dice system for cubing, the EverSharp™ blade, and examples of various cuts achievable with the attachment.

4. SETUP

This attachment is compatible with Kenwood Titanium, Chef, and Elite range stand mixers. Ensure your mixer is unplugged before attaching the food processor.

1. **Prepare the Stand Mixer:** Ensure your Kenwood stand mixer is switched off and unplugged from the power outlet.
2. **Identify the High-Speed Outlet:** The MultiPro Food Processor Attachment connects to the high-speed outlet on your Kenwood stand mixer. This is typically located at the top front of the mixer head.
3. **Attach the Food Processor:** Align the attachment's drive shaft with the high-speed outlet. Push the attachment firmly into place and twist it clockwise until it locks securely. You should hear or feel a click.
4. **Assemble the Bowl and Lid:** Place the desired blade or disc onto the drive shaft inside the bowl. Then, place the bowl onto the attachment base. Secure the lid by aligning it and twisting clockwise until it locks. The appliance will not operate if the lid is not correctly secured.

PASST AUF DEN HOCHGESCHWINDIGKEITSAUFSATZ Einfach aufsetzen und andrehen



Figure 3: A user demonstrating the process of attaching the Kenwood MultiPro Food Processor to the high-speed outlet of a Kenwood stand mixer, highlighting the simple twist-and-lock mechanism.

5. OPERATING INSTRUCTIONS

Once the attachment is securely fitted, you can begin processing ingredients. Always ensure the lid is locked before switching on the mixer.

General Operation:

1. Prepare ingredients by cutting them into pieces that fit easily into the feed tube.
2. Select the appropriate blade or disc for your task (e.g., chopping blade, slicing disc, shredding disc, Express Dice system).
3. Place the ingredients into the feed tube. For best results, feed ingredients evenly and apply gentle, consistent pressure with the pusher.
4. Switch on the Kenwood stand mixer and select a suitable speed setting. Refer to your stand mixer's manual for recommended speeds for attachments.
5. Process until the desired consistency is achieved.
6. Switch off the mixer and unplug it before removing the lid and processed food.

MACHE MEHR AUS DEINER KENWOOD CHEF

Prüfe dein Modell auf Kompatibilität



Figure 4: Fresh strawberries being processed within the Kenwood MultiPro Food Processor bowl, demonstrating its capability for preparing fruits for various recipes.

Using the Adjustable Slicing Disc:

The adjustable slicing disc allows you to choose from six different thickness settings. To adjust:

1. Ensure the mixer is off and unplugged.
2. Remove the lid and the disc.
3. Locate the adjustment knob on the disc. Turn the knob to select your desired slicing thickness (settings typically range from 1 to 6).
4. Re-install the disc and lid, then proceed with slicing as per general operation.

Using the Express Dice™ System:

The Express Dice™ system is designed for uniform dicing. Follow the specific assembly instructions for the dicing grid and blade. Ensure ingredients are cut to fit the dicing grid opening for optimal results.

Capacity Guidelines:

- **Bowl Capacity:** 1.2 Liters. Do not exceed the maximum fill line indicated on the bowl.
- Avoid overfilling to ensure efficient processing and prevent strain on the motor.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Kenwood MultiPro Food Processor Attachment.

1. **Disassembly:** Always switch off and unplug the stand mixer before disassembling the attachment. Carefully remove the lid, then the blade or disc, and finally the bowl from the base.
2. **Washing:** Most parts of the attachment, including the bowl, lid, pusher, and cutting discs, are dishwasher safe. For manual cleaning, wash parts in warm, soapy water using a soft brush for hard-to-reach areas. Rinse thoroughly.
3. **Blades:** Handle the EverSharp™ blades with extreme caution. Use a brush for cleaning to avoid direct contact with the sharp edges.
4. **Drying:** Ensure all parts are completely dry before reassembling or storing.
5. **Storage:** Store all essential tools and accessories neatly in the provided SmartStore bag to protect them and keep them organized.

7. TROUBLESHOOTING

If you encounter issues with your Kenwood MultiPro Food Processor Attachment, refer to the following common solutions:

- **Appliance Not Starting:**
 - Ensure the attachment is correctly fitted and locked onto the high-speed outlet of the stand mixer.
 - Verify that the lid is securely locked onto the bowl. The safety interlock prevents operation if not properly assembled.
 - Check that the stand mixer is plugged in and switched on.
- **Poor Processing Results:**
 - Ensure ingredients are cut to an appropriate size for the feed tube and the specific blade/disc being used.
 - Do not overload the bowl. Process in smaller batches if necessary.
 - Check that the correct blade or disc is installed for the desired task.
 - For slicing/shredding, apply consistent, gentle pressure with the pusher.
- **Excessive Noise or Vibration:**
 - Ensure the attachment is securely locked onto the stand mixer.
 - Verify that the bowl and lid are correctly assembled and locked.
 - Reduce the amount of ingredients being processed if the bowl is overloaded.

If problems persist, please refer to the Kenwood customer support section of this manual or visit the official Kenwood website for further assistance.

8. SPECIFICATIONS

Brand	Kenwood
Model Name	KAH65.000PL
Product Dimensions	7.91"D x 7.24"W x 10.91"H (20.1 cm D x 18.4 cm W x 27.7 cm H)
Bowl Capacity	1.2 Liters
Color	Metallic Silver
Special Features	Dishwasher Safe, Practical handle, Stainless steel knife, Tritan plastic for maximum load-bearing capacity
Recommended Uses	Slice, Shred, Chop, Dice
Blade Material	Metal
Item Weight	5.19 pounds

KENWOOD

**1.2L
Fassungsvermögen**

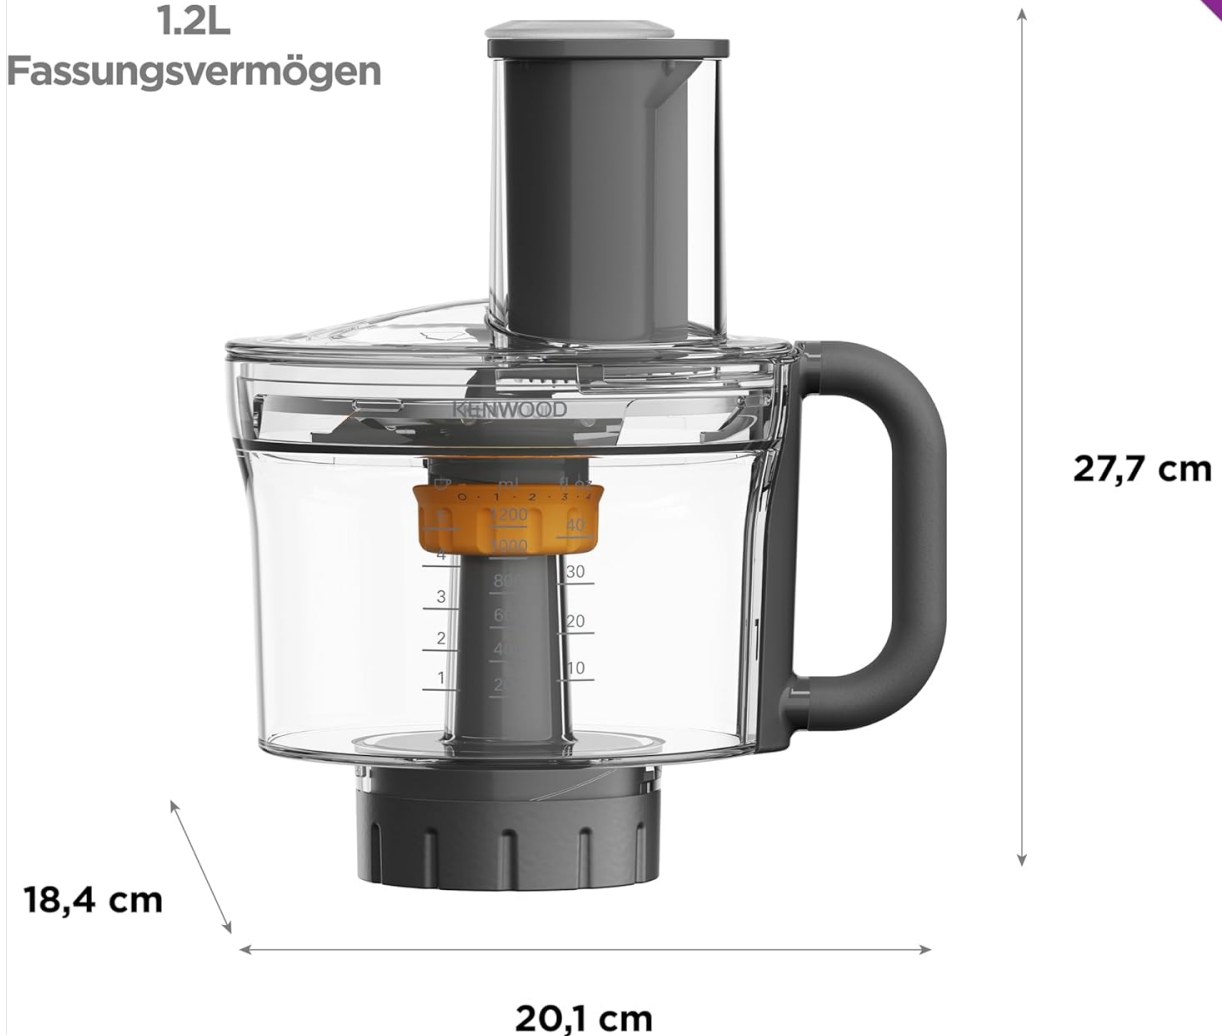


Figure 5: Detailed dimensions of the Kenwood MultiPro Food Processor Attachment, showing its height, width, and depth for reference.

9. WARRANTY AND SUPPORT

Kenwood products are manufactured to high-quality standards and are covered by a manufacturer's warranty. For specific warranty details, including terms and conditions, please refer to the warranty card included with your product or visit the official Kenwood website.

For technical support, spare parts, or service inquiries, please contact Kenwood customer service through their official website or the contact information provided in your product packaging. When contacting support, please have your model number (KAH65.000PL) and purchase details readily available.