

[Manuals.plus](#) /

> [Kenwood](#) /

> Kenwood Garment Steamer GSP80 Instruction Manual

Kenwood GSP80

Kenwood Garment Steamer GSP80 Instruction Manual

MODEL: GSP80

1. Introduction

Thank you for purchasing the Kenwood Garment Steamer GSP80. This appliance is designed to provide efficient and convenient garment care, smoothing wrinkles and refreshing fabrics with powerful steam. To ensure safe and optimal performance, please read this instruction manual thoroughly before using the appliance and retain it for future reference.

2. Important Safety Instructions

- Always ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steamer head away from your body and face during operation to avoid steam burns.
- Never direct steam at people, pets, or electrical appliances.
- Unplug the appliance from the power outlet when not in use, before filling or emptying the water tank, and before cleaning.
- Use only distilled or demineralized water to prevent mineral buildup and extend the life of the appliance.
- The appliance features an automatic shut-off function for safety.
- Ensure the appliance is placed on a stable, level surface during use.

3. Package Contents

Carefully unpack your Kenwood Garment Steamer GSP80 and check that all items are present and in good condition. The package should include:

- Main Steamer Unit (Base with water tank and telescopic poles)
- Integrated 3-Position Ironing Board
- Steamer Head with Digital Controls
- Fabric Brush Attachment
- Lint Brush Attachment
- Protective Gloves (2 pieces)



Image: Included accessories for the Kenwood Garment Steamer GSP80, featuring two types of brushes and two protective gloves.

4. Product Diagram and Components

Familiarize yourself with the different parts of your garment steamer:







Image: Front view of the Kenwood Garment Steamer GSP80, showing the main unit, water tank, telescopic poles, and the ironing board in its vertical configuration.

- **Base Unit:** Contains the heating element and water reservoir.
- **Water Tank:** Removable 2-liter tank for water.
- **Telescopic Poles:** Adjustable height support for the ironing board and steamer head.
- **3-Position Ironing Board:** Can be adjusted to vertical, 45-degree, and horizontal positions.
- **Steamer Head:** Emits steam and features digital controls for power and steam levels.
- **Hangers:** Integrated hangers for garments.
- **Wheels:** For easy mobility of the unit.



Image: Detailed view of the steamer head, highlighting the digital power and steam level controls for convenient operation.

5. Setup

1. **Assembly:** Insert the telescopic poles into the base unit. Secure the ironing board onto the top of the poles. Ensure all connections are firm.
2. **Adjusting Height:** Release the clamps on the telescopic poles and extend them to your desired height. Secure the clamps.
3. **Filling the Water Tank:** Remove the 2-liter water tank from the base. Open the cap and fill it with distilled or demineralized water. Do not exceed the maximum fill line. Close the cap securely and place the tank back into the base.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet.



Image: Diagram illustrating the mechanism for adjusting the height of the steamer's telescopic poles, ensuring ergonomic use.

6. Operating Instructions

The Kenwood GSP80 offers versatile steaming options with its adjustable ironing board and digital controls.

6.1. Powering On and Steam Selection

1. Once the water tank is filled and the unit is plugged in, press the power button on the steamer head or the touch control on the base to turn on the appliance.
2. The steamer will heat up in approximately 70 seconds. The indicator light will show when it is ready.
3. Use the steam level control buttons on the steamer head to select one of the 3 available steam levels, suitable for different fabric types.

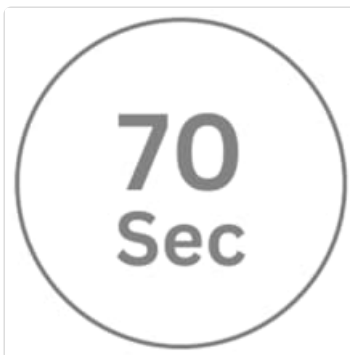


Image: The steamer head actively emitting steam, demonstrating its readiness for use.

6.2. Using the 3-Position Ironing Board

The integrated ironing board can be adjusted to three positions:

- **Vertical:** Ideal for hanging garments like shirts, dresses, and suits.
- **45-Degree Angle:** Provides a comfortable angle for steaming and light pressing.

- **Horizontal:** Functions like a traditional ironing board for more precise pressing of collars, cuffs, or heavier fabrics.



Image: The Kenwood Garment Steamer GSP80 demonstrating its versatile ironing board, adjustable to vertical, 45-degree, and horizontal positions for various garment care needs.

6.3. Steaming Techniques

- Hang the garment on the integrated hanger or place it on the ironing board.
- Hold the steamer head a few inches from the fabric and move it slowly downwards, allowing the steam to penetrate the fibers.
- For stubborn wrinkles, gently press the steamer head against the fabric while steaming.
- Use the fabric brush attachment for heavier fabrics to help open the weave and allow steam to penetrate deeper.
- Use the lint brush attachment to remove lint and pet hair while steaming.

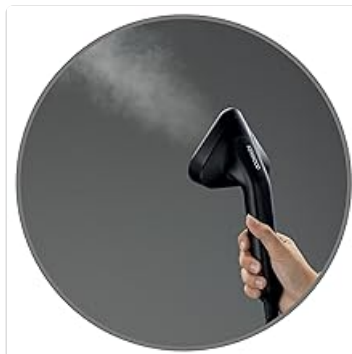


Image: A user steaming a jacket while it is hung on the vertical ironing board, illustrating effective wrinkle removal.



Image: A user steaming a piece of fabric laid flat on the horizontal ironing board, demonstrating the versatility for different garment types.

7. Maintenance and Cleaning

7.1. After Each Use

- Unplug the appliance and allow it to cool completely.
- Remove the water tank and empty any remaining water.
- Wipe the exterior of the steamer head and base unit with a soft, damp cloth.

7.2. Descaling

Over time, mineral deposits can build up inside the steamer, especially if tap water is used. To descale:

1. Mix a solution of 50% white vinegar and 50% water.
2. Pour the solution into the water tank.
3. Run the steamer until half of the solution has been used.
4. Turn off and unplug the steamer, allowing it to cool for 30 minutes.
5. Repeat the process with the remaining solution.
6. Rinse the water tank thoroughly and run the steamer with clean water to flush out any vinegar residue.

Perform descaling every 3-6 months, or more frequently if you notice reduced steam output or mineral residue.

7.3. Storage

Store the steamer in a cool, dry place. Ensure the water tank is empty before storage. The telescopic poles can be collapsed for more compact storage.

8. Troubleshooting

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty; Mineral buildup; Steamer not heated sufficiently	Refill water tank; Perform descaling; Allow 70 seconds for heating
Water leakage from steamer head	Condensation; Overfilling water tank; Steamer not hot enough	This is normal for initial use; Do not overfill; Allow full heating time

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in; Power outlet issue; Safety shut-off activated	Check power connection; Test outlet with another device; Unplug and replug after a few minutes

9. Specifications

- **Model:** GSP80
- **Power:** 2280W
- **Voltage:** 220V
- **Water Tank Capacity:** 2 Liters
- **Continuous Steam Output:** 95g/min
- **Heat-up Time:** Approximately 70 seconds
- **Product Dimensions:** 54L x 48W x 41H cm
- **Item Weight:** 7.2 Kilograms

10. Warranty and Support

This Kenwood Garment Steamer GSP80 comes with a manufacturer's warranty. Please refer to the warranty card included in your packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting beyond this manual, or to inquire about replacement parts, please contact Kenwood customer support. Contact information can typically be found on the Kenwood official website or on your product packaging.