

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Cloer](#) /

› [Cloer 3710 Long Slot Toaster Instruction Manual](#)

Cloer 3710

Cloer 3710 Long Slot Toaster Instruction Manual

Model: 3710

INTRODUCTION AND SAFETY INFORMATION

Thank you for choosing the Cloer 3710 Long Slot Toaster. This manual provides important instructions for the safe and efficient operation of your appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Precautions

- Always ensure the toaster is placed on a stable, heat-resistant surface, away from flammable materials.
- Do not operate the toaster near water or with wet hands.
- Never insert metal objects into the toaster slots.
- Unplug the toaster from the power outlet when not in use, before cleaning, or if a malfunction occurs.
- Do not leave the toaster unattended during operation.
- Bread can burn. Therefore, toasters must not be used near or below curtains and other combustible materials. They must be supervised.
- If bread becomes stuck, unplug the toaster and allow it to cool before carefully removing the bread.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Cloer 3710 Long Slot Toaster:

- **Toasting Slots:** Designed for up to four slices of toast.
- **Browning Control Dial:** Adjusts the desired level of toast browning.
- **Stop Button:** Immediately cancels the toasting cycle.
- **Lift Lever:** Lowers bread into the slots and raises it for easy removal.
- **Integrated Bun Warmer:** A rack that can be raised for warming buns, croissants, or pastries.

- **Crumb Tray:** Collects crumbs for easy cleaning.



Image: Cloer 3710 Long Slot Toaster with the integrated bun warmer in the raised position.



Image: Cloer 3710 Toaster with buns placed on the integrated bun warmer for heating.



Image: Close-up view of the control panel on the Cloer 3710 Toaster, showing the browning dial and stop button.

SETUP

1. **Unpacking:** Carefully remove the toaster and all packaging materials. Retain packaging for future transport if needed.
2. **Placement:** Place the toaster on a dry, stable, and heat-resistant surface. Ensure there is adequate space around the toaster for ventilation, especially above and behind it. Do not place it directly under cabinets or near curtains.
3. **First Use (Burn-off):** Before toasting food for the first time, operate the toaster without bread for a few minutes at the highest browning setting. This will burn off any manufacturing residues and eliminate initial odors. A slight smoke or odor is normal during this process. Ensure the area is well-ventilated.

4. **Power Connection:** Plug the power cord into a suitable grounded electrical outlet. Ensure the voltage matches the specifications of your toaster (230V).

OPERATING INSTRUCTIONS

Toasting Bread

1. **Insert Bread:** Place up to four slices of bread into the toasting slots. The toaster is designed with centering guides to ensure even toasting.
2. **Set Browning Level:** Turn the browning control dial to your desired setting. Settings range from 1 (lightest) to 5 (darkest). Start with a medium setting (e.g., 3) and adjust as needed for future use.
3. **Start Toasting:** Press the lift lever down until it locks into place. The toasting cycle will begin, and the indicator light will illuminate.
4. **Stop Toasting:** The toaster will automatically switch off and raise the toast when the selected browning level is reached. To stop the toasting cycle at any time, press the **STOP** button.
5. **Remove Toast:** Use the lift lever to raise the toast higher for easier and safer removal, especially for smaller items.

Using the Integrated Bun Warmer

1. **Raise Bun Warmer:** Push the bun warmer lever upwards until the rack locks into position above the toasting slots.
2. **Place Items:** Place buns, croissants, or other pastries on the bun warmer rack. Do not place items directly into the toasting slots when using the bun warmer.
3. **Set Browning Level:** Select a low browning setting (e.g., 1 or 2) for warming.
4. **Start Warming:** Press the lift lever down to start the warming cycle.
5. **Monitor and Remove:** Monitor the items closely to prevent burning. Once warmed to your preference, press the **STOP** button and carefully remove the items.
6. **Lower Bun Warmer:** After use, push the bun warmer lever downwards to retract the rack.



Image: A hand rotating the browning control dial on the Cloer 3710 Toaster to select the desired toast shade.

CARE AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your toaster.

Cleaning the Crumb Tray

1. **Unplug:** Always unplug the toaster and allow it to cool completely before cleaning.
2. **Remove Tray:** Pull out the removable crumb tray located at the bottom of the toaster.
3. **Empty and Clean:** Discard accumulated crumbs. Wipe the tray with a damp cloth and dry thoroughly.
4. **Reinsert Tray:** Slide the clean crumb tray back into its position until it clicks securely.

Cleaning the Exterior

- Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.

- Never immerse the toaster or its cord in water or any other liquid.
- Do not attempt to clean the inside of the toasting slots with any tools or your fingers.



Image: The removable crumb tray of the Cloer 3710 Toaster being pulled out for cleaning.

TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in; power outlet malfunction; lift lever not fully depressed.	Ensure the power cord is securely plugged in. Check the power outlet with another appliance. Press the lift lever down until it locks.
Bread is unevenly toasted.	Inconsistent bread thickness; browning setting too high/low; first use burn-off not performed.	Ensure bread slices are of similar thickness. Adjust the browning control. Perform the burn-off cycle if it's the first use.
Bread gets stuck in the slots.	Bread slices are too thick or too large; crumbs obstructing mechanism.	Use appropriately sized bread. Unplug the toaster, allow it to cool, and carefully remove the bread. Clean the crumb tray regularly. The toaster has a safety shutdown if bread gets stuck.

Problem	Possible Cause	Solution
Smoke or burning smell.	Crumbs in the toaster; food residue; first use burn-off.	Immediately press the STOP button and unplug the toaster. Allow it to cool. Clean the crumb tray. If it's the first use, this is normal. If persistent, contact support.

SPECIFICATIONS

Feature	Detail
Model Number	3710
Brand	Cloer
Power / Wattage	1380 watts
Voltage	230V
Number of Slices	4 (long slot design)
Material	Metal (Matte Metal Cover)
Product Dimensions	43.5 x 19.5 x 21.5 cm
Item Weight	1.77 kg
Special Features	Automatic Shut-Off, Removable Crumb Tray, Variable Browning Control, Integrated Bun Warmer, Bread Slice Centering

WARRANTY AND SUPPORT

Cloer products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Cloer website. If you require technical assistance or have questions not covered in this manual, please contact Cloer customer support through their official channels.

Please retain your proof of purchase for warranty claims.

