

OM SYSTEM C765

OM SYSTEM OLYMPUS C765 4MP Digital Camera User Manual

Model: C765

1. INTRODUCTION

This manual provides essential information for the safe and effective use of your OM SYSTEM OLYMPUS C765 4MP Digital Camera. The C765 features a 4-megapixel CCD sensor, a powerful 10x optical zoom, and a compact design, making it suitable for various photography needs. Please read this manual thoroughly before using the camera and keep it for future reference.

2. WHAT'S IN THE BOX

Verify that all the following items are included in your package:

- OM SYSTEM OLYMPUS C765 Digital Camera
- Rechargeable Lithium-Ion Battery
- Battery Charger
- Lens Cap
- USB Cable
- xD-Picture Card (16MB)
- Audio/Video Cable
- Carrying Strap
- Lens Hood
- CAMEDIA Master Software CD
- Quick Start Guide



Figure 2.1: The OM SYSTEM OLYMPUS C765 Digital Camera shown with its standard accessories, including the battery, charger, cables, and lens cap.

3. SETUP

3.1. Battery and Memory Card Installation

1. Locate the battery/memory card compartment cover on the bottom of the camera.
2. Slide the cover latch to open the compartment.
3. Insert the rechargeable lithium-ion battery into the battery slot, ensuring the correct orientation as indicated inside the compartment.
4. Insert the xD-Picture Card into the memory card slot until it clicks into place.
5. Close the compartment cover securely until it latches.

3.2. Attaching the Lens Cap

Place the lens cap over the camera lens when not in use to protect it from dust and scratches. Remove the lens cap before powering on the camera to avoid obstruction.

3.3. Powering On/Off

To power on the camera, press and hold the **POWER** button located on the back of the camera. The lens will extend automatically. To power off, press and hold the **POWER** button again. The lens will retract.

4. OPERATING THE CAMERA

4.1. Taking Photos

1. Power on the camera.
2. Frame your shot using the 1.8-inch LCD display or the electronic viewfinder.
3. Press the shutter button halfway down to focus. The camera will confirm focus with a beep and/or an indicator on the screen.
4. Press the shutter button fully down to capture the image.

4.2. Using the Flash

To activate the built-in flash, press the flash button located on the top-left side of the camera's rear panel. The flash unit will pop up. You can select various flash modes (e.g., Auto, Red-eye Reduction, Fill-in, Off) through the camera's menu system.

4.3. Zoom Function

The camera features a 10x optical zoom and a 4x digital zoom, providing a total of 40x zoom capability. Use the zoom

lever, typically located around the shutter button, to adjust the focal length. Optical zoom maintains image quality, while digital zoom digitally enlarges the image and may reduce quality.



Figure 4.1: The rear panel of the camera, highlighting the LCD screen, power button, and navigation controls for menu access and photo review.

5. FEATURES

- **4-Megapixel Sensor:** Captures sufficient detail for high-quality prints up to 11x14 inches.
- **10x Optical Zoom:** Provides clear magnification without loss of image quality.
- **4x Digital Zoom:** Extends zoom range to 40x total, suitable for less critical applications.
- **1.8-inch LCD Display:** For framing shots and reviewing images.
- **TruePic Turbo Image Processor:** Enhances processing speed and image quality.
- **PictBridge Enabled:** Allows direct printing to compatible printers without a computer.
- **QuickTime Movie Mode:** Records video clips.
- **xD-Picture Card Compatibility:** Uses xD memory cards for image storage.
- **Rechargeable Lithium-Ion Battery:** Powers the camera for extended use.
- **Multiple Shooting Modes:** Includes Scene Program, customizable MyMode presets, Landscape, Night Portrait, Portrait, and Sports modes.

6. SPECIFICATIONS

Feature	Specification
Photo Sensor Resolution	4 MP
Optical Zoom	10x
Digital Zoom	4x
Maximum Focal Length	380 Millimeters
Minimum Focal Length	38 Millimeters
Screen Size	1.8 Inches
Photo Sensor Technology	CCD
Supported File Format	xD Picture Card

Image Stabilization	Digital, Optical
Maximum Shutter Speed	1/1000 Seconds
Minimum Shutter Speed	16 seconds
Exposure Control	Manual, aperture-priority, program, shutter-priority
Connectivity Technology	USB
Item Weight	10.88 ounces

7. MAINTENANCE

7.1. Cleaning the Camera

- Use a soft, lint-free cloth to clean the camera body.
- For the lens and LCD screen, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- Use a blower brush to remove dust from the lens surface.

7.2. Battery Care

- Charge the battery fully before first use.
- Store batteries in a cool, dry place when not in use.
- Avoid exposing batteries to extreme temperatures.

7.3. Memory Card Handling

- Always format new memory cards in the camera before use.
- Do not remove the memory card while the camera is writing or reading data.
- Keep memory cards away from strong magnetic fields.

8. TROUBLESHOOTING

8.1. Camera Does Not Power On

- Ensure the battery is fully charged and correctly inserted.
- Check if the battery contacts are clean.
- Try using a different, fully charged battery if available.

8.2. Blurry Images

- Ensure the lens is clean and free from smudges.
- Check that the camera is properly focused on the subject.
- Use a tripod or stabilize the camera in low-light conditions or when using high zoom.
- Verify that the correct shooting mode is selected for the scene.

8.3. Memory Card Error

- Ensure the memory card is inserted correctly.
- Try reformatting the memory card (note: this will erase all data).
- Test with a different memory card to rule out a faulty card.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your camera or visit the official OM SYSTEM website. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question