

Coby CX-CD111

Coby CX-CD111 Slim Personal CD Player User Manual

Model: CX-CD111

1. INTRODUCTION

This manual provides instructions for the Coby CX-CD111 Slim Personal CD Player. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. The CX-CD111 is a compact and portable CD player designed for personal audio enjoyment.

What's in the Box:

- Coby CX-CD111 Slim Personal CD Player
- Stereo Headphones
- User's Manual (this document)

2. SAFETY INFORMATION

Please read and understand all safety instructions before using this product. Keep this manual for future reference.

- Do not expose the unit to moisture, rain, or extreme temperatures.
- Avoid placing the unit near heat sources or in direct sunlight.
- Do not attempt to disassemble, modify, or repair the unit yourself. Refer all servicing to qualified personnel.
- Use only the specified battery type (2 x AA batteries). Ensure correct polarity when inserting batteries.
- Remove batteries if the unit will not be used for an extended period to prevent leakage.
- Dispose of used batteries according to local regulations.
- Avoid listening at high volume levels for extended periods to prevent hearing damage.

3. PRODUCT OVERVIEW

The Coby CX-CD111 is a slim, portable CD player featuring a Digital Bass Boost Sound system (DBBS) for

enhanced audio. It includes programmable track memory, random, and repeat play functions, and an easy-to-read digital LCD display.



An image showing the Coby CX-CD111 Slim Personal CD Player in silver, accompanied by a pair of stereo headphones. The player is compact and features a visible CD compartment and control buttons.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the unit.
2. Open the battery compartment cover.
3. Insert two (2) AA batteries (not included), ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

4.2 Connecting Headphones

Plug the stereo headphones into the headphone jack located on the side of the unit. Ensure the plug is fully inserted for proper audio output.

5. OPERATING INSTRUCTIONS

5.1 Loading a CD

1. Press the **OPEN** button to open the CD compartment lid.
2. Place a CD onto the center spindle, gently pressing down until it clicks into place. Ensure the label side of the CD faces upwards.
3. Close the CD compartment lid securely until it latches.

5.2 Basic Playback

- Press the **PLAY/PAUSE** (▶/–) button to start playback. The track number and elapsed time will appear on the LCD display.
- Press the **PLAY/PAUSE** (▶/–) button again to pause playback. Press it once more to resume.
- Press the **STOP** (■) button to stop playback.

5.3 Skip/Search Tracks

- Press the **SKIP/SEARCH Forward** (▶▶) button to skip to the next track.
- Press the **SKIP/SEARCH Backward** (◀◀) button to skip to the beginning of the current track. Press it again to go to the previous track.
- Hold down the **SKIP/SEARCH Forward** (▶▶) or **Backward** (◀◀) buttons to fast-forward or rewind within a track.

5.4 Volume Control

Adjust the listening volume using the **VOLUME** dial or buttons, typically located on the side of the unit.

5.5 Digital Bass Boost Sound (DBBS)

Activate the **DBBS** function for enhanced bass response. Refer to the unit's controls for the specific DBBS button or switch, usually labeled 'DBBS' or 'BASS'.

5.6 Programmable Track Memory

1. While the unit is in **STOP** mode, press the **PROGRAM** button.
2. Use the **SKIP/SEARCH** buttons to select your desired track.
3. Press the **PROGRAM** button again to confirm the track.
4. Repeat steps 2 and 3 to add more tracks to your program list.
5. Press the **PLAY** button to start programmed playback.

5.7 Repeat and Random Play

Press the **MODE** button (if available) to cycle through different playback modes:

- **Repeat 1:** Repeats the current track.
- **Repeat All:** Repeats all tracks on the CD.
- **Random:** Plays tracks in a random order.

6. MAINTENANCE

6.1 Cleaning the Unit

Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the finish.

6.2 Cleaning the CD Lens

To ensure optimal playback quality, periodically clean the CD lens. Use a specialized CD lens cleaner disc or a soft, lint-free cloth with a small amount of isopropyl alcohol to gently wipe the lens. Avoid touching the lens directly with your fingers.

6.3 Storage

Store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods to prevent potential leakage and damage.

7. TROUBLESHOOTING

If you experience issues with your Coby CX-CD111, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Unit does not power on	Batteries are dead or incorrectly inserted.	Check battery installation and ensure correct polarity. Replace with fresh AA batteries.
CD does not play	CD is dirty, scratched, or inserted incorrectly. CD compartment is not closed.	Clean the CD with a soft cloth. Ensure the CD is placed correctly on the spindle. Close the CD compartment lid securely.
Sound skipping	Unit is being moved or vibrated. CD is dirty or scratched. Low battery power.	Place the unit on a stable surface. Clean the CD. Replace batteries.
No sound from headphones	Headphones not fully plugged in. Volume too low. Faulty headphones.	Ensure headphones are fully inserted into the jack. Increase the volume. Test with another pair of headphones.

8. SPECIFICATIONS

- **Model:** CX-CD111
- **Dimensions (W x H x D):** 5.25 x 5.5 x 1 inches
- **Item Weight:** 13.6 ounces
- **Power Source:** 2 x AA Batteries (not included)
- **Audio Features:** Digital Bass Boost Sound (DBBS), 1-bit Digital-to-Analog Converter
- **Playback Modes:** Programmable Track Memory, Repeat (1/All), Random
- **Display:** Digital LCD
- **Connectivity:** 3.5mm Headphone Jack (Auxiliary)
- **Additional Features:** Auto Power-Off Function

9. WARRANTY AND SUPPORT

This Coby CX-CD111 Slim Personal CD Player comes with a **90-day warranty** from the date of purchase. This warranty covers manufacturing defects under normal use and conditions.

For technical support, warranty claims, or further assistance, please refer to the contact information

provided with your original purchase documentation or visit the official Coby website for customer service details.