

## WOLF Garten 632835

# WOLF Garten WS 50 Z Hose Reel Cart Instruction Manual

MODEL: WS 50 Z (MODEL NUMBER: 632835)

## Introduction

---

This manual provides instructions for the safe and efficient use of your WOLF Garten WS 50 Z Hose Reel Cart. Please read these instructions carefully before assembly and operation to ensure proper function and longevity of the product. Keep this manual for future reference.

## Safety Instructions

---

- Always ensure the hose reel cart is placed on a stable, level surface before and during use to prevent tipping.
- Do not exceed the recommended hose capacity (50m for 1/2 inch hose, 30m for 3/4 inch hose) to avoid damage to the reel or hose.
- Keep hands and feet clear of moving parts, especially the crank handle and hose drum, during winding and unwinding operations.
- Disconnect the hose from the water source and drain it before storing the cart, especially in freezing temperatures, to prevent ice damage.
- Store the cart in a dry, protected area when not in use to prolong its lifespan and prevent corrosion.
- This product is intended for garden hose management only. Do not use it for purposes other than its intended design.

## Package Contents

---

Verify that all components are present before beginning assembly:

- Hose Reel Frame (metal)
- Hose Drum (metal)
- Wheels (2)

- Crank Handle
- Assembly Hardware (screws, nuts, washers)
- Internal Hose Connection / Leader Hose Connector

## Setup and Assembly

---

Follow these steps to assemble your WOLF Garten WS 50 Z Hose Reel Cart:

1. **Attach the Wheels:** Securely fasten the two wheels to the main frame using the provided hardware. Ensure they are tightly secured for stability.
2. **Mount the Hose Drum:** Position the hose drum within the main frame. Align the axle holes and insert the necessary pins or bolts to hold the drum in place.
3. **Install the Crank Handle:** Attach the crank handle to the designated axle on the side of the hose drum. Ensure it is firmly attached for smooth operation.
4. **Connect the Garden Hose:** Connect the internal end of your garden hose to the short leader hose connector on the drum. Ensure a watertight seal.
5. **Wind the Hose:** Begin winding your garden hose onto the drum. Distribute the hose evenly across the drum's width to prevent tangling and ensure balanced operation.



Image: The WOLF Garten WS 50 Z Hose Reel Cart, featuring a sturdy metal frame, two wheels, a crank handle, and an

orange garden hose wound around the central drum. The cart is designed for easy portability and hose management in a garden setting.

## Operating Instructions

---

To use your hose reel cart effectively:

- **Connecting to Water Source:** Use a short leader hose (not included) to connect the cart's inlet to your outdoor water tap. Ensure all connections are tight to prevent leaks.
- **Unwinding the Hose:** Pull the desired length of hose from the reel. The cart's wheels allow for easy movement around your garden as you unwind.
- **Winding the Hose:** After use, turn the crank handle clockwise to retract the hose onto the drum. Guide the hose evenly across the drum to prevent kinks and ensure proper storage.
- **Water Flow:** Ensure the water tap is fully open for optimal water pressure through the hose.

## Maintenance

---

Regular maintenance will ensure the longevity and performance of your hose reel cart:

- **Inspection:** Periodically inspect the hose for any signs of wear, cracks, or leaks. Check all connections for tightness.
- **Cleaning:** Clean the cart with a damp cloth to remove dirt and debris. Avoid using abrasive cleaners or solvents that could damage the finish.
- **Lubrication:** Annually, apply a small amount of general-purpose lubricant to the axle and moving parts of the crank handle to ensure smooth operation.
- **Winter Storage:** Before the first frost, disconnect the hose, drain all water from it, and store the cart indoors in a dry, protected area to prevent damage from freezing temperatures.

## Troubleshooting

---

Problem	Possible Cause	Solution
Hose not winding smoothly	Kinks in the hose, uneven winding, obstruction on drum	Straighten any kinks. Guide the hose evenly across the drum. Check for and remove any obstructions.
Leaks from connections	Loose connections, damaged washers	Tighten all hose connections. Inspect rubber washers and replace if they are worn or damaged.
Cart unstable or difficult to move	Wheels not securely attached, uneven ground	Ensure wheels are securely fastened. Move the cart to a flat, stable surface.
Low water pressure	Partially closed tap, kinked hose, clogged nozzle	Ensure the water tap is fully open. Check the hose for kinks. Clean or replace the nozzle if clogged.

## Specifications

---

- **Brand:** WOLF Garten

- **Model Name:** WS 50 Z
- **Model Number:** 632835 (Item Number: 5222000)
- **Material:** Alloy Steel, Nylon
- **Color:** Yellow, Silver
- **Dimensions (LxWxH):** 48 x 47 x 48 cm
- **Item Weight:** 2 kg
- **Hose Capacity:** 50 meters (for 1/2 inch hose) or 30 meters (for 3/4 inch hose)
- **Construction:** Galvanized, durably rust-protected
- **Operation Mode:** Manual
- **Installation Type:** Freestanding

## Warranty Information

---

WOLF Garten products typically come with a manufacturer's warranty. Please refer to your purchase documentation or the official WOLF Garten website for specific warranty terms and conditions applicable to your region. Spare parts are generally available for a duration of 1 year within the EU.

## Support and Contact

---

For technical assistance, inquiries about spare parts, or to make a warranty claim, please contact WOLF Garten customer support. You can find detailed contact information, including phone numbers and email addresses, on the official WOLF Garten website. When contacting support, please have your model name (WS 50 Z) and model number (632835) available.