

[Manuals.plus](#) /

› [Sharper Image](#) /

› Sharper Image Personal Cooling System 2.0 User Manual

Sharper Image SI488 SL2 SM/MD

Sharper Image Personal Cooling System 2.0 User Manual

Model: SI488 SL2 SM/MD

INTRODUCTION

The Sharper Image Personal Cooling System 2.0 is designed to provide personal evaporative cooling. This device utilizes a small amount of water and a gentle fan breeze to create a cooling effect around the back of your neck. It is portable and offers both high and low settings for customized comfort.

PRODUCT OVERVIEW

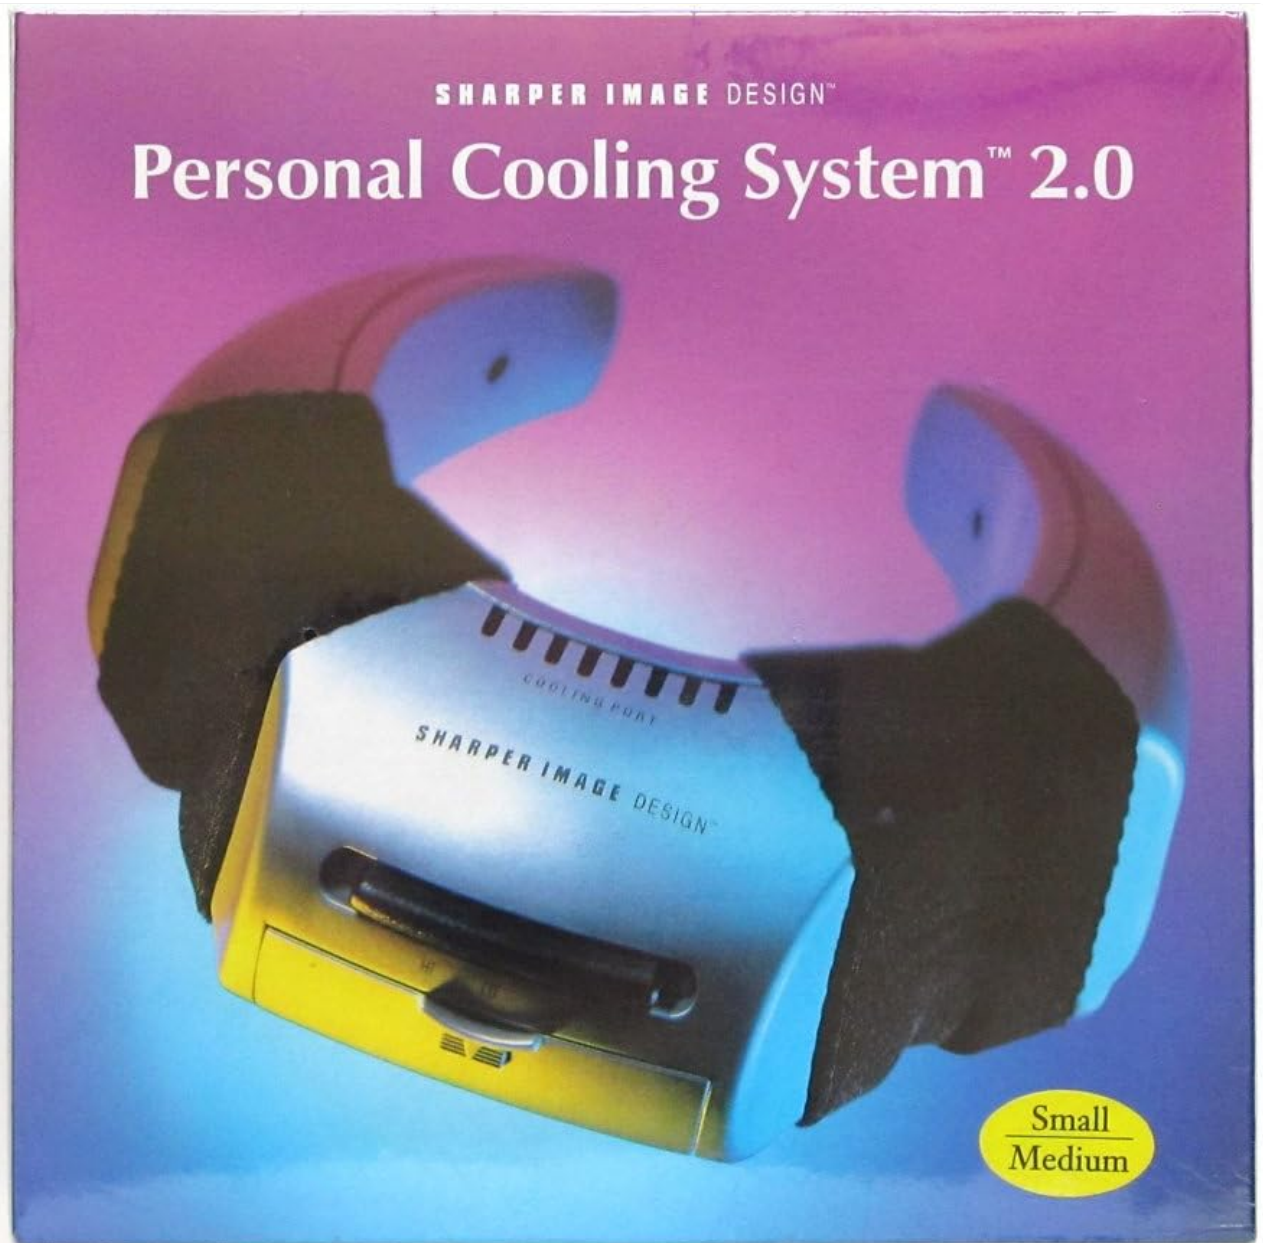


Figure 1: Front view of the Sharper Image Personal Cooling System 2.0 packaging, showing the device and branding.

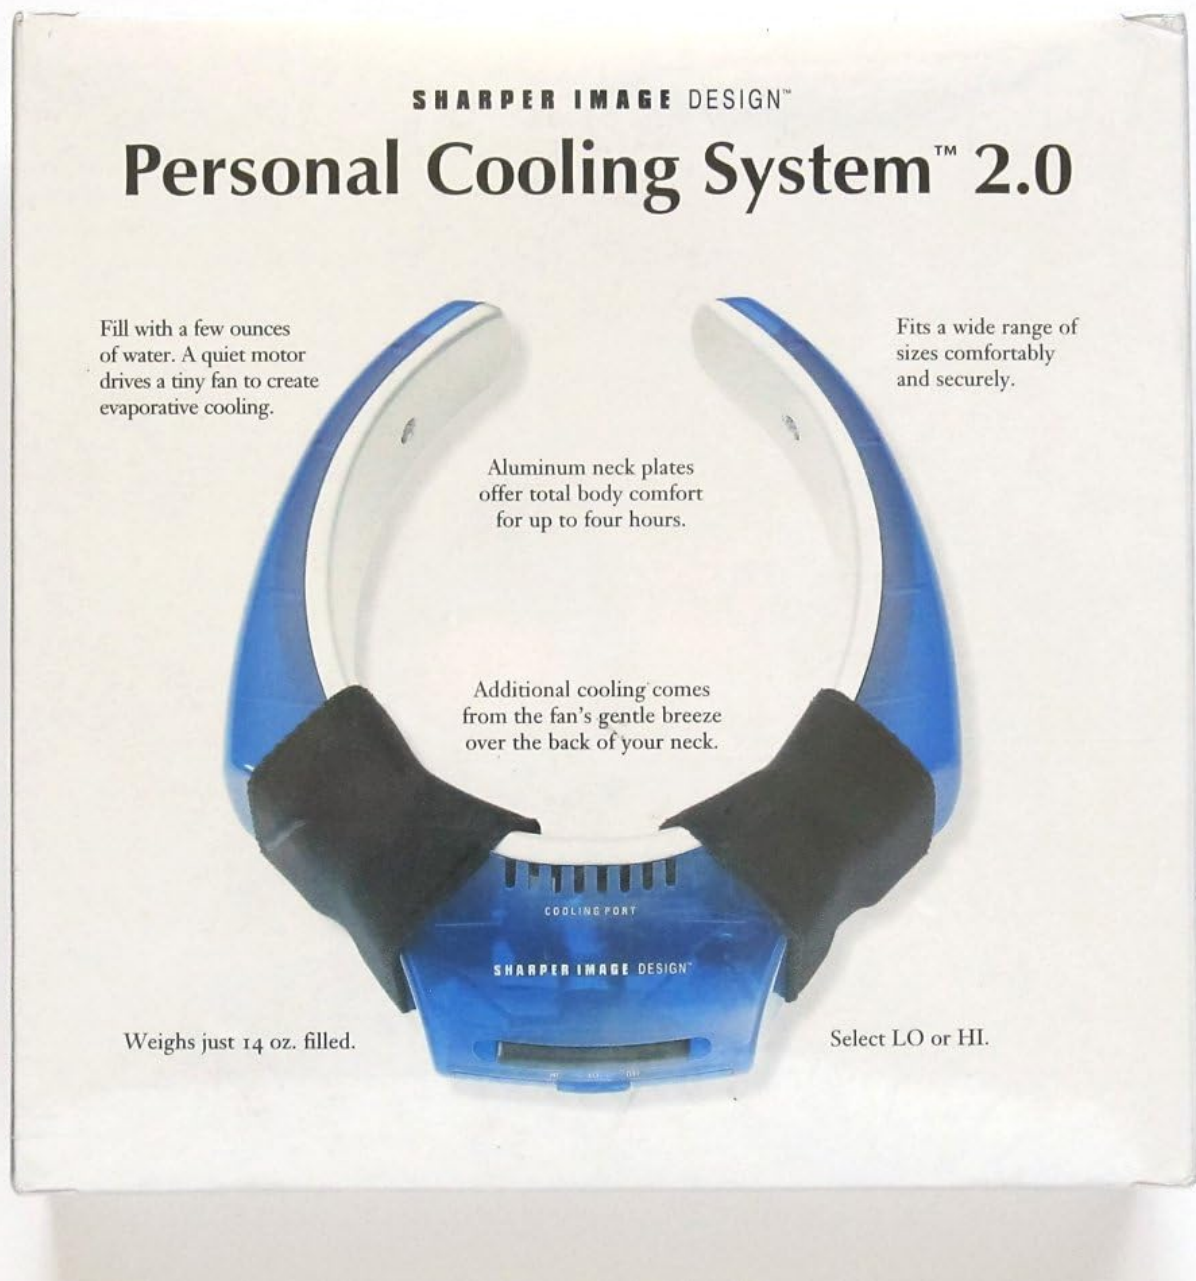


Figure 2: Rear view of the packaging, highlighting key features such as water reservoir, evaporative cooling, aluminum neck plates, and HI/LO settings.

SETUP

1. **Unpack the Device:** Carefully remove the Personal Cooling System 2.0 from its packaging.
2. **Locate Water Reservoir:** Identify the water reservoir on the device.
3. **Fill with Water:** Fill the reservoir with a few ounces of clean water. Do not overfill. Ensure the cap is securely closed after filling.
4. **Positioning:** Place the device around your neck, ensuring the cooling plates and fan are positioned correctly for optimal comfort.

OPERATING INSTRUCTIONS

The Personal Cooling System 2.0 features simple controls for ease of use.

- **Power On/Off:** Use the designated power button or remote control to turn the device on or off.
- **Select Cooling Level:** Choose between HI (High) or LO (Low) settings to adjust the intensity of the evaporative cooling and fan breeze. The HI setting provides maximum cooling, while LO offers a gentler effect.
- **Evaporative Cooling:** The device will begin to provide cooling as the fan gently blows over the water-filled reservoir and the aluminum neck plates.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your cooling system.

- **Water Reservoir:** Regularly empty and refill the water reservoir with fresh, clean water. Do not leave stagnant water in the reservoir for extended periods.
- **Cleaning:**
 - Wipe the exterior of the device with a soft, damp cloth.
 - For the water reservoir, rinse with clean water. If necessary, use a mild soap solution and rinse thoroughly to prevent residue buildup.
 - Ensure the device is completely dry before storage.
- **Storage:** When not in use, store the Personal Cooling System 2.0 in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the water reservoir is empty before storing.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	No power / Low battery (if applicable).	Ensure the device is charged or has fresh batteries (if battery-operated). Check power connection if applicable.
No cooling effect.	Water reservoir is empty or fan is not operating.	Refill the water reservoir. Check if the fan is spinning; if not, refer to "Device does not turn on" solution.
Weak fan breeze.	Set to LO mode or obstruction.	Switch to HI mode. Ensure there are no obstructions around the fan vents.

SPECIFICATIONS

- **Brand:** Sharper Image
- **Model Name:** SI488 SL2 SM/MD
- **UPC:** 780352292277
- **Color:** Black
- **Mounting Type:** Freestanding (worn around neck)
- **Special Feature:** Portable
- **Controls Type:** Remote
- **Item Weight:** Approximately 14.4 ounces (filled)
- **Package Dimensions:** 8 x 7.9 x 2.5 inches
- **Power:** 1 watt
- **Batteries Required:** No

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the original product packaging or contact Sharper Image customer service directly. Keep your purchase receipt for warranty claims.

For further assistance, visit the official Sharper Image website or contact their customer support line.

© 2024 Sharper Image. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question