



Manuals.plus /

› Sony /

› Sony DVP-NS575P/S Progressive Scan DVD Player User Manual

## Sony DVP-NS575P

# Sony DVP-NS575P/S Progressive Scan DVD Player User Manual

Model: DVP-NS575P

Brand: Sony

## INTRODUCTION

---

This manual provides comprehensive instructions for the operation and maintenance of your Sony DVP-NS575P/S Progressive Scan DVD Player. Designed for high-quality video and audio playback, this player incorporates advanced technologies such as Precision Cinema Progressive and Precision Drive 3 systems to deliver an optimal viewing and listening experience.

Key features include:

- Single-disc DVD player with support for DVD-Video, DVD-R, DVD-RW, DVD+R, DVD+RW, DVD-VR, CD-R, CD-RW, MP3 CD, and JPEG image CD.
- Progressive-scan video output for seamless, flicker-free images on high-definition and HD-ready TVs.
- Precision Drive 3 system for improved readability of damaged discs.
- 12-bit video DAC with 54 MHz processing for pristine video quality.
- Dolby Digital and DTS 5.1-channel digital surround decoding and output.

## PRODUCT OVERVIEW

---



Image: Front view of the Sony DVP-NS575P/S DVD Player in silver, showing the disc tray, display, and control buttons.



Image: Front view of the Sony DVP-NS575P/S DVD Player with the disc tray open, revealing a DVD disc.

## SETUP

---

### 1. Unpacking and Placement

Carefully remove the DVD player and all accessories from the packaging. Place the unit on a stable, level surface with adequate ventilation. Avoid placing it near heat sources or in direct sunlight.

### 2. Connecting to Your TV

The DVP-NS575P/S offers several connection options for video and audio.

- **Composite Video (Yellow RCA):** Connect the yellow video cable from the DVD player's VIDEO OUT to your TV's VIDEO IN. This provides standard definition video.
- **S-Video:** For improved picture quality over composite video, connect an S-Video cable from the DVD player's S-VIDEO OUT to your TV's S-VIDEO IN.

- **Component Video (Green, Blue, Red RCA):** For the best picture quality, especially for progressive scan output (480p), connect component video cables from the DVD player's COMPONENT VIDEO OUT (Y, Pb, Pr) to your TV's corresponding COMPONENT VIDEO IN. Ensure your TV supports progressive scan.

### 3. Connecting Audio

- **Analog Audio (Red, White RCA):** Connect the red and white audio cables from the DVD player's AUDIO OUT (L/R) to your TV's or receiver's AUDIO IN (L/R).
- **Digital Coaxial Audio:** For surround sound (Dolby Digital, DTS), connect a digital coaxial cable from the DVD player's DIGITAL OUT (COAXIAL) to your compatible AV receiver's digital coaxial input.

### 4. Power Connection

Plug the AC power cord into the DVD player and then into a wall outlet.

### 5. Initial Setup Wizard

Upon first power-on, a Quick Setup screen will appear to guide you through initial configuration steps, including language selection and video output settings. Follow the on-screen prompts.

## OPERATING INSTRUCTIONS

---

### 1. Basic Playback

1. Power on the DVD player and your TV/receiver.
2. Select the correct input on your TV/receiver for the DVD player.
3. Press the OPEN/CLOSE button on the player or remote to open the disc tray.
4. Place a disc (DVD, CD, MP3 CD, JPEG CD) onto the disc tray with the label side facing up.
5. Press the OPEN/CLOSE button again to close the tray. The player will begin reading the disc.
6. Use the PLAY, PAUSE, STOP, FAST FORWARD, REWIND, and SKIP buttons on the remote control to manage playback.

### 2. Supported Disc Formats

The player supports a wide range of disc formats:

- DVD-Video, DVD-R, DVD-RW (Video Mode), DVD+R, DVD+RW, DVD-VR
- Audio CD, CD-R, CD-RW
- MP3 CDs (for audio playback)
- JPEG CDs (for photo viewing)

### 3. Advanced Features

- **Multi-disc Resume:** The player can remember the stop point for up to six discs, allowing you to resume playback from where you left off.
- **Custom Parental Control:** Set parental control levels for up to 40 discs to restrict playback of certain content. Refer to the on-screen menu for setup.
- **Instant Replay/Search:** Quickly jump back 10 seconds or use the instant search function for audible scanning.
- **Advanced SmoothScan and SmoothSlow Modes:** Provide smooth fast-forward, rewind, and slow-motion playback.
- **TV Virtual Surround:** Enhance audio with four surround modes for a more immersive experience.

## MAINTENANCE

---

### 1. Cleaning the Unit

Wipe the exterior of the DVD player with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.

## 2. Disc Handling

- Always hold discs by their edges.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases to prevent scratches and dust accumulation.
- Avoid exposing discs to direct sunlight or extreme temperatures.

## TROUBLESHOOTING

Problem	Solution
No power	Ensure the power cord is securely plugged into the player and a working wall outlet.
No picture	Check video cable connections. Ensure your TV is set to the correct input/source.
No sound	Check audio cable connections. Ensure your TV/receiver volume is up and not muted. Verify correct audio output settings on the player.
Disc does not play or skips	Clean the disc. Check for scratches or damage. Ensure the disc format is supported. The Precision Drive 3 system helps with warped discs, but severely damaged discs may not play.
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the player's sensor.

## SPECIFICATIONS

- **Model:** DVP-NS575P
- **Brand:** Sony
- **Media Type:** CD, DVD
- **Special Features:** Progressive Scan, Surround Sound
- **Built-in Decoders:** Dolby Digital, DTS decoder
- **Connectivity Technology:** Component-video, S-video, Composite-video
- **Connector Type:** RCA
- **Item Weight:** 7.48 pounds (approx. 3.4 kg)
- **Package Dimensions:** 20.4 x 20.3 x 6.9 inches
- **Color:** Silver
- **Power:** AC 120V, 60Hz (typical for US models)

## WHAT'S IN THE BOX

The retail package for the Sony DVP-NS575P/S typically includes:

- Sony DVP-NS575P/S DVD Player
- Remote Control
- 2 AA batteries (for remote)
- Stereo Analog Audio/Composite-Video Interconnect Cable
- User's Manual (this document)
- Warranty Information

## WARRANTY AND SUPPORT

---

For information regarding warranty coverage and technical support, please refer to the warranty card included with your product or visit the official Sony support website. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you may contact Sony customer service. Contact details are typically available on the official Sony website or in the included documentation.