

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Honeywell Home](#) /

› [Honeywell Home D534WE Wired Illuminated Bell Push - Instruction Manual](#)

Honeywell Home D534WE

Honeywell Home D534WE Wired Illuminated Bell Push - Instruction Manual

Model: D534WE

INTRODUCTION

This manual provides comprehensive instructions for the installation, operation, and maintenance of your Honeywell Home D534WE Wired Illuminated Bell Push. Please read these instructions carefully before installation and retain them for future reference.

The D534WE is a wired bell push designed to activate a doorbell chime unit. It features an integrated light for enhanced visibility, operating via a voltage drop across the lamp when connected to a low-voltage doorbell circuit.

SAFETY INFORMATION

- Always disconnect power to the doorbell circuit at the main fuse box or circuit breaker before beginning any installation or maintenance.
- Installation should be performed by a qualified electrician if you are unsure about electrical wiring.
- Ensure all wiring connections are secure and insulated to prevent short circuits.
- This product is designed for low-voltage AC doorbell systems. Verify your existing system's voltage compatibility.
- Do not expose the unit to excessive moisture or extreme temperatures.

PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- 1 x Honeywell Home D534WE Wired Illuminated Bell Push
- Mounting screws (typically included, but may vary)


SETUP AND INSTALLATION

Follow these steps to install your bell push:

1. **Power Disconnection:** Before starting, turn off the power to your doorbell circuit at the main electrical

panel to prevent electrical shock.

2. **Remove Old Bell Push:** Carefully remove your existing bell push, if any. Disconnect the two low-voltage wires connected to it.
3. **Prepare Wiring:** Ensure the two low-voltage wires are accessible and have approximately 1/2 inch (1.2 cm) of insulation stripped from their ends.
4. **Connect Wires:** Connect one wire to each terminal on the back of the D534WE bell push. The polarity typically does not matter for standard doorbell systems. Secure the wires firmly under the terminal screws.
5. **Mounting:** Position the bell push at the desired location, typically beside the door frame. Use the provided mounting screws to secure the unit to the wall. Ensure the wires are not pinched during mounting.
6. **Power Restoration:** Once the bell push is securely mounted and wired, restore power to the doorbell circuit at your main electrical panel.
7. **Test Functionality:** Press the bell push to confirm that your doorbell chime rings. The integrated light should illuminate when the button is not pressed and extinguish when pressed, indicating proper operation via voltage drop.

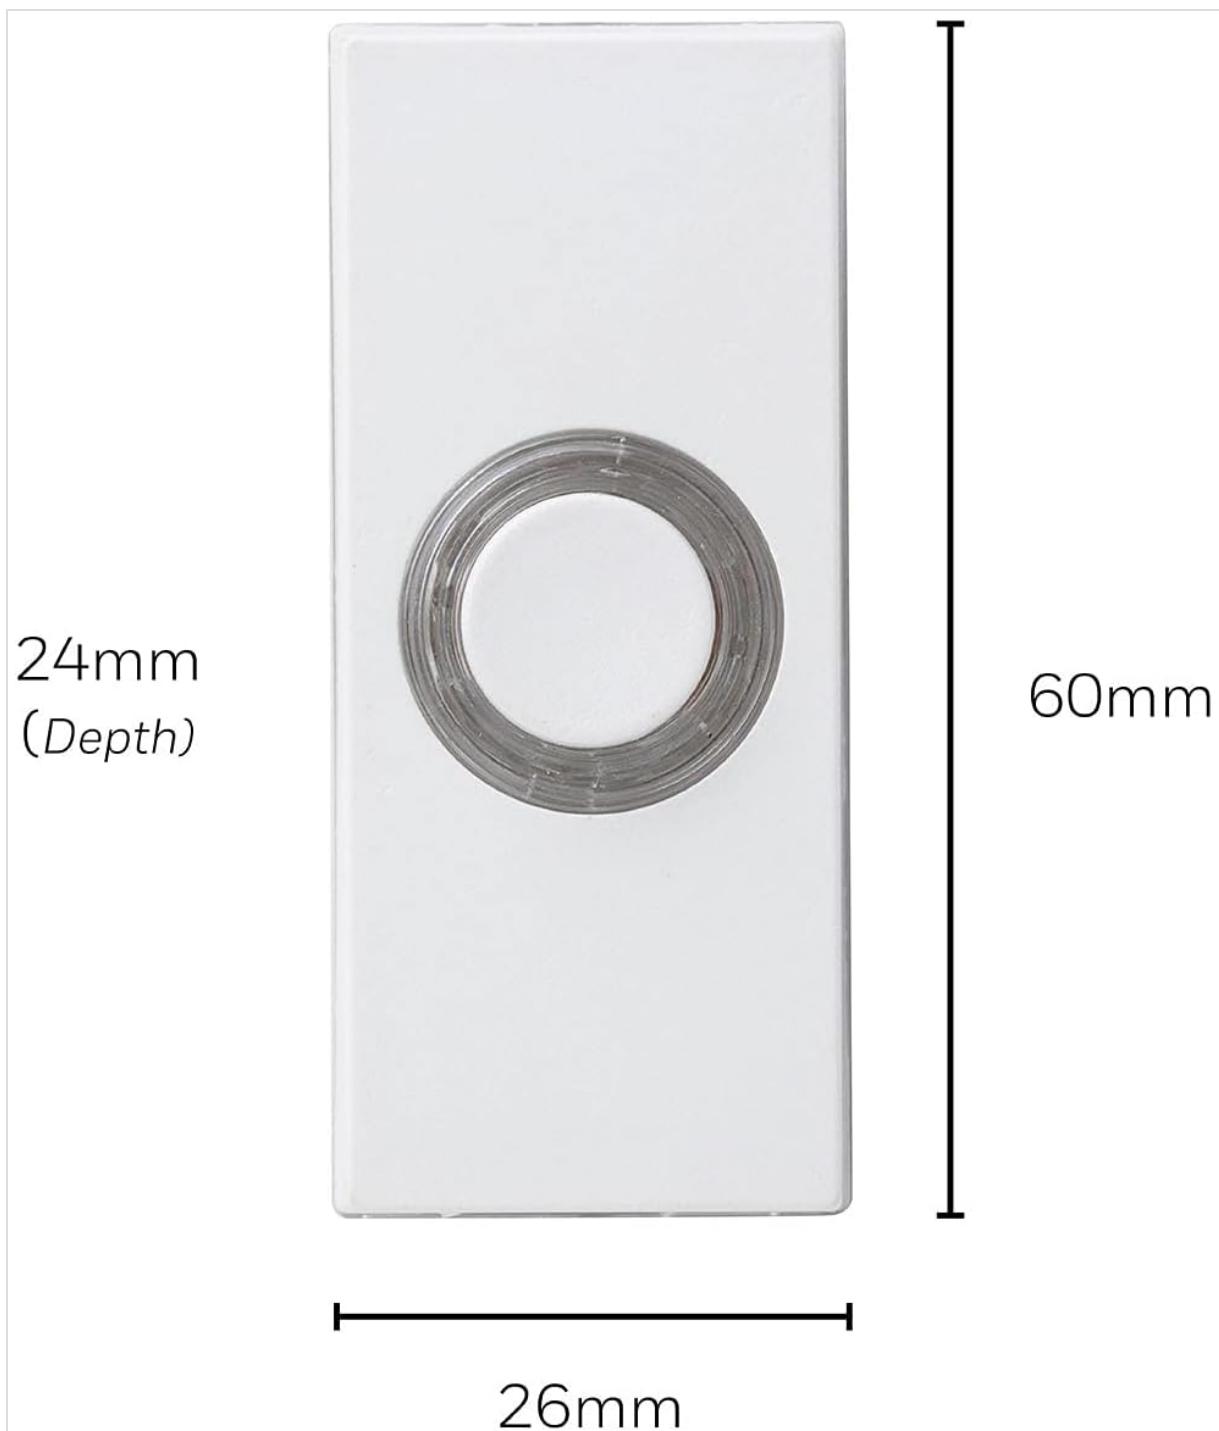

This image illustrates the physical dimensions of the bell push, which are 60mm in height, 26mm in width, and 24mm in depth, aiding in proper installation planning.

OPERATING INSTRUCTIONS

The Honeywell Home D534WE bell push is simple to operate:

- To activate your doorbell chime, press the illuminated button firmly.
- The integrated light will turn off while the button is pressed and re-illuminate when released, confirming activation.

MAINTENANCE

The D534WE bell push requires minimal maintenance:

- **Cleaning:** Wipe the surface with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these

may damage the finish.

- **Inspection:** Periodically check the unit for any signs of damage or loose connections.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Bell push light does not illuminate.	No power to the doorbell circuit. Loose or incorrect wiring. Incorrect voltage for the illuminated feature. Damaged bell push.	Check circuit breaker/fuse. Ensure wires are securely connected to terminals. Verify your doorbell transformer provides appropriate low AC voltage (typically 8-16V AC). Replace the bell push if damaged.
Doorbell chime does not ring when button is pressed.	No power to the doorbell circuit. Loose or incorrect wiring at bell push or chime unit. Faulty doorbell chime unit. Damaged bell push.	Check circuit breaker/fuse. Inspect and secure all wiring connections. Test the chime unit independently or consult a professional. Replace the bell push if damaged.

SPECIFICATIONS

- **Model Number:** D534WE
- **Brand:** Honeywell Home
- **Type:** Wired Illuminated Bell Push
- **Power Source:** AC (Low Voltage)
- **Bulb Type:** Light Emitting Diode (LED)
- **Color:** White
- **Finish:** White
- **Shape:** Round (button)
- **Mounting Type:** Wall Mount
- **Product Dimensions:** 60mm (Height) x 26mm (Width) x 24mm (Depth)
- **Item Weight:** 54.4 g

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or visit the official Honeywell Home website. Keep your proof of purchase for warranty claims.

