

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Nintendo](#) /

› [Nintendo Super Famicom Console \(SFC\) Instruction Manual](#)

Nintendo SHVC-001

Nintendo Super Famicom Console (SFC) Instruction Manual

Model: SHVC-001

INTRODUCTION

Welcome to the instruction manual for your Nintendo Super Famicom Console (SFC). This guide provides essential information for setting up, operating, and maintaining your console. The Super Famicom is the Japanese version of the Super Nintendo Entertainment System (SNES), offering a rich library of classic 16-bit games.

Please read this manual thoroughly before using your console to ensure proper function and longevity.

IMPORTANT SAFETY INFORMATION

- Power Supply:** Use only the specified AC adapter for the Super Famicom. Using an incorrect adapter can damage the console and pose a fire hazard. Ensure the voltage matches your region's electrical standards.
- Placement:** Place the console on a stable, level surface. Avoid placing it in direct sunlight, near heat sources, or in areas with high humidity or dust. Ensure adequate ventilation around the console.
- Liquid and Foreign Objects:** Keep liquids away from the console. Do not insert foreign objects into any openings. If liquid or an object enters the console, disconnect the power immediately and consult a qualified technician.
- Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosols.
- Electrical Storms:** During an electrical storm, disconnect the console from the power outlet to prevent damage from lightning strikes.
- Children:** Keep small parts, such as game cartridges, out of reach of young children to prevent choking hazards.

PACKAGE CONTENTS

A complete Super Famicom package typically includes the following items. Please note that for pre-owned consoles, some accessories may not be included. Refer to your specific purchase details for what is

provided.

- Super Famicom Console (Model: SHVC-001)
- AC Adapter (for power supply)
- AV Cable (for video and audio output)
- Super Famicom Controller(s)

Note: Game cartridges are sold separately.

CONSOLE OVERVIEW

Familiarize yourself with the main components and ports of your Super Famicom console.



Image: Front view of the Nintendo Super Famicom Console. This image displays the console's main body, including the cartridge slot, power button, reset button, and controller ports.

Front Panel:

- **Cartridge Slot:** Insert Super Famicom game cartridges here.
- **Power Button:** Slide to turn the console ON or OFF.
- **Reset Button:** Press to restart the current game.
- **Controller Ports (1 & 2):** Connect Super Famicom controllers.
- **Eject Button:** Press to release the game cartridge from the slot.

Rear Panel:

- **AC Adapter Port:** Connect the AC adapter here.
- **AV Multi Out Port:** Connect the AV cable to your television or display.

SETUP INSTRUCTIONS

Follow these steps to connect your Super Famicom console to your television.

1. **Connect AV Cable:** Insert one end of the AV cable into the "AV Multi Out" port on the back of the Super Famicom console. Connect the other end (typically yellow for video, red/white for audio) to the corresponding input jacks on your television.

2. **Connect AC Adapter:** Plug the AC adapter into the "AC Adapter" port on the back of the console. Plug the other end of the AC adapter into a standard electrical outlet.
3. **Connect Controllers:** Plug your Super Famicom controller(s) into the controller ports on the front of the console. Port 1 is typically for the primary player.
4. **Insert Game Cartridge:** Ensure the console is OFF. Gently insert a Super Famicom game cartridge into the cartridge slot on the top of the console, label facing forward, until it clicks into place. Do not force the cartridge.
5. **Power On:** Turn on your television and select the correct AV input channel. Slide the Power button on the Super Famicom console to the "ON" position. The game should now appear on your screen.

OPERATING THE CONSOLE

Playing a Game:

- After setup, ensure a game cartridge is properly inserted and the console is powered on.
- Use the connected controller to navigate game menus and play.

Resetting the Console:

- To restart the current game without turning off the console, press the **Reset** button on the front panel.

Removing a Game Cartridge:

- Ensure the console is OFF before removing a cartridge.
- Press the **Eject** button on the front panel to release the cartridge.
- Gently pull the cartridge straight up and out of the slot.

Powering Off:

- Slide the Power button to the "OFF" position.
- For extended periods of non-use, it is recommended to unplug the AC adapter from the wall outlet.

CARE AND MAINTENANCE

- **Cleaning the Console:** Use a soft, dry, lint-free cloth to wipe the exterior of the console. Do not use abrasive cleaners, solvents, or chemical sprays.
- **Cleaning Cartridges:** If a game cartridge is not working, gently clean the gold connectors on the bottom of the cartridge with a cotton swab lightly dampened with isopropyl alcohol. Allow to dry completely before reinserting.
- **Storage:** Store the console and cartridges in a cool, dry place away from direct sunlight, extreme temperatures, and excessive dust. Keep cartridges in their protective cases when not in use.
- **Cable Care:** Avoid bending or twisting cables excessively. Store them neatly to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
No picture or sound on TV.	<ul style="list-style-type: none"> Ensure the console is powered ON. Verify the AV cable is securely connected to both the console and the TV. Check that the TV is set to the correct AV input channel. Try a different AV cable if available. Ensure the AC adapter is properly connected and plugged into a working outlet.
Game does not start or freezes.	<ul style="list-style-type: none"> Ensure the game cartridge is fully and correctly inserted into the slot. Clean the game cartridge connectors (refer to "Care and Maintenance"). Press the Reset button to restart the game. Try a different game cartridge to determine if the issue is with the console or the game.
Controller not responding.	<ul style="list-style-type: none"> Ensure the controller is securely plugged into the correct port. Try plugging the controller into the other port (if available). Test with a different controller if possible.
Console powers on but no display.	<ul style="list-style-type: none"> Confirm the game cartridge is inserted correctly. Check all cable connections as described in "Setup Instructions". The console may require service if all connections are correct and the issue persists.

SPECIFICATIONS

Feature	Detail
Model Number	SHVC-001
Manufacturer	Nintendo
Console Name	Super Famicom
Gaming Platform	Super Famicom
Initial Release	1990
Player Capacity	1 to 2
Product Dimensions	7.87 x 9.53 x 2.83 inches
Item Weight	2.87 pounds

WARRANTY AND SUPPORT

As this is a pre-owned console, specific manufacturer warranty information may not apply. Please refer to the warranty or return policy provided by the seller from whom you purchased this item.

For technical assistance or further inquiries, please contact the seller directly or consult online resources and communities dedicated to the Super Famicom console.