

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech PlayStation 2 Cordless Action Controller User Manual

Logitech G 963320-0403

Logitech PlayStation 2 Cordless Action Controller User Manual

INTRODUCTION

This manual provides instructions for the Logitech PlayStation 2 Cordless Action Controller. This wireless controller offers freedom of movement and eliminates cable clutter, utilizing 2.4 GHz radio frequency technology for precise, lag-free control. It is designed for comfort and compatibility with PlayStation 2 consoles.



PACKAGE CONTENTS

Verify that all items are present in the package:

- 2.4 GHz Cordless Controller
- 2.4 GHz Mini-Receiver
- User Documentation
- 2 AA Batteries

KEY FEATURES

- **2.4 GHz Radio Frequency Technology:** Ensures reliable, lag-free wireless performance up to 30 feet.
- **Dual Analog Mini-Sticks:** Provides precise control for various game types.
- **Pressure-Sensitive D-pad:** Offers accurate directional input.
- **Sony Dualshock2 Compatible Controls:** Full set of D-pad, mini-joysticks, action buttons, triggers, Start, Select, and Mode buttons.
- **Twin Vibration Feedback Motors:** Enhances immersion with tactile feedback for in-game events.
- **Vibration On/Off Button:** Allows users to disable vibration to conserve battery life.
- **Sleep Mode:** Automatically activates after 5 minutes of inactivity to preserve battery life.
- **Mode/Status Lights:** Provides visual indication of controller mode, connection status, and low battery.
- **Battery Life:** Over 50 hours of gameplay with 2 AA batteries, even with vibration enabled.

SETUP

1. Install Batteries

1. Locate the battery compartment on the back of the controller.
2. Open the battery compartment cover.
3. Insert the two AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

2. Connect the Mini-Receiver

1. Locate an available controller port on your PlayStation 2 console.
2. Plug the 2.4 GHz mini-receiver directly into the controller port.
3. Ensure the receiver is fully inserted. The receiver's status light should illuminate, indicating it is powered on.

3. Establish Connection

The controller and receiver should automatically establish a connection. The status lights on both the controller and receiver will indicate a successful connection. If the connection is not established, ensure both devices are powered on and within range (up to 30 feet).

OPERATING INSTRUCTIONS

Basic Controls

The controller features a standard PlayStation 2 button layout:

- **D-pad:** Directional input.
- **Left/Right Analog Mini-Sticks:** For precise movement and camera control.
- **Action Buttons (Triangle, Circle, Cross, Square):** For in-game actions.
- **Shoulder Buttons (L1, L2, R1, R2):** Additional action inputs.
- **Start Button:** Pauses games or accesses menus.
- **Select Button:** Accesses secondary menus or functions.
- **Mode Button:** May switch between analog and digital modes for the D-pad/analog sticks in some games.

Vibration Feedback

The controller includes twin vibration feedback motors. To toggle vibration feedback on or off, press the dedicated **Vibration On/Off button** located on the controller. Disabling vibration can extend battery life.

Sleep Mode

To conserve battery power, the controller will automatically enter a sleep mode after approximately 5 minutes of inactivity. To wake the controller, press any button.

MAINTENANCE

Battery Replacement

When the low battery indicator illuminates, replace both AA batteries. Refer to the "Install Batteries" section under Setup for detailed instructions.

Cleaning

Wipe the controller with a soft, dry cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the surface.

Storage

Store the controller and receiver in a dry, cool place away from direct sunlight and extreme temperatures. If storing for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Controller not responding:**
 - Ensure the controller has fresh batteries and they are inserted correctly.
 - Verify the mini-receiver is securely plugged into the PlayStation 2 console.
 - Check if the controller and receiver status lights indicate a connection. If not, try re-establishing the connection by turning the console off and on, or re-inserting the receiver.
 - Ensure the controller is within the 30-foot operating range of the receiver.
 - Minimize interference from other 2.4 GHz wireless devices (e.g., cordless phones, Wi-Fi routers) by moving them further away or temporarily disabling them during use.
- **Vibration not working:**
 - Check if the Vibration On/Off button has been pressed, disabling the feature.
 - Ensure the game you are playing supports vibration feedback.

- Verify battery levels; low batteries can sometimes affect vibration strength.

- **Buttons sticking or unresponsive:**

- Clean around the buttons with a soft, dry cloth or a cotton swab to remove any debris.
- Avoid excessive force when pressing buttons.

SPECIFICATIONS

Model Number	963320-0403
Wireless Technology	2.4 GHz Radio Frequency
Operating Range	Up to 30 feet (10 meters)
Power Source	2 AA Batteries
Estimated Battery Life	Over 50 hours (with vibration)
Dimensions (Controller)	Approximately 2.7 x 8.1 x 10 inches
Weight (Controller)	Approximately 13.6 ounces (with batteries)
Compatibility	PlayStation 2 consoles

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Logitech website or the user documentation included in your package. Logitech provides customer support for their products.

Logitech Support: <https://support.logi.com/>

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question