

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KETTLER](#) /

› [KETTLER Roma Resin High Back Chair User Manual](#)

KETTLER 1438-000

KETTLER Roma Resin High Back Chair User Manual

Model: 1438-000

INTRODUCTION

The KETTLER Roma Resin High Back Chair is designed for outdoor use, offering comfort and durability. Constructed from high-impact resin, this chair features a contoured back, four reclining positions, and a unique Safety Fold track-and-latch mechanism for secure positioning and easy storage.



Image: The KETTLER Roma Resin High Back Chair positioned on a patio next to a pool, showcasing its design in an outdoor environment.

SAFETY INFORMATION

Please read and understand all safety instructions before using the KETTLER Roma Resin High Back Chair.

- Always use the Anti-Collapse lever when the chair is in use to ensure stability.
- Keep fingers away from moving parts when folding or unfolding the chair to prevent injury.
- Do not exceed the maximum weight capacity of 270 pounds (122 kg).

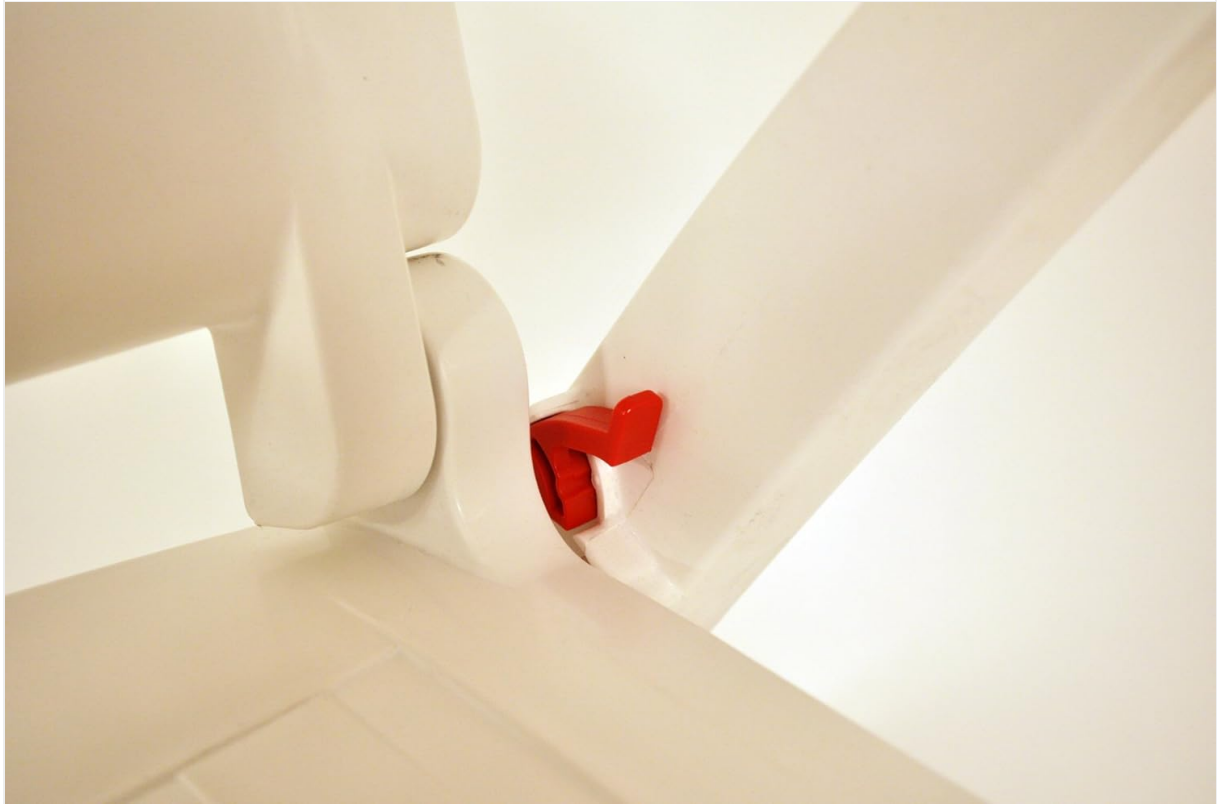


Image: A close-up view of the red safety latch, which must be engaged for secure use of the chair.

SETUP

The KETTLER Roma Resin High Back Chair requires no assembly. It arrives fully assembled and ready for immediate use.

1. Remove the chair from its packaging.
2. Unfold the chair carefully until it locks into the upright position.
3. Ensure the safety latch is engaged before sitting.

OPERATING INSTRUCTIONS

Adjusting Reclining Positions

The chair offers four reclining positions for optimal comfort. To adjust the backrest:

1. While seated, slightly lift both armrests.
2. Lean back or forward to select one of the four desired positions.
3. Release the armrests to lock the backrest into place.



Image: The chair shown in a reclined position, highlighting its adjustable backrest feature.

Folding for Storage

The chair features a unique Safety Fold track-and-latch system for easy folding and compact storage.

1. Ensure no one is seated in the chair.
2. Locate the red safety latch on the side of the chair (refer to Safety Information section for image).
3. Unlock the chair by disengaging the red latch.
4. Gently push the seat and backrest together to fold the chair in half.
5. The folded chair can stand upright on its own for convenient storage.



Image: The KETTLER Roma Resin High Back Chair shown in its compact, folded state, suitable for storage.

Video Demonstration: Roma Highback Chair Function

Your browser does not support the video tag.

Video: A demonstration of the KETTLER Roma Highback Chair's functionality, including reclining and folding mechanisms.

MAINTENANCE

To maintain the appearance and longevity of your KETTLER Roma Resin High Back Chair:

- Clean regularly with mild soap and water.
- Wipe dry with a soft cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these may damage the resin finish.
- Store in a dry, protected area during extreme weather conditions or prolonged periods of non-use.

TROUBLESHOOTING

This section addresses common issues you might encounter with your KETTLER Roma Resin High Back Chair.

- **Chair not locking into position:** Ensure both armrests are fully released after adjusting the recline. Check that the safety latch is properly engaged.
- **Difficulty folding:** Make sure the red safety latch is disengaged. Apply gentle, even pressure when folding.
- **General instability:** Verify that the chair is placed on a flat, stable surface. Always ensure the safety latch is engaged when the chair is in use.

If you experience any issues not covered here, please contact KETTLER USA customer support.

SPECIFICATIONS

Feature	Detail
Brand	KETTLER
Model Name	ROMA Multi-Position Chair
Model Number	1438-000
Material	Resin (KETTALUX Plus Polymer)
Product Dimensions	26"D x 24"W x 41.5"H
Item Weight	14 pounds (6.35 kg)
Maximum Weight Capacity	270 Pounds (122 kg)
Reclining Positions	4
Foldable	Yes
Assembly Required	No
Product Care	Wipe Clean
Origin	Made in Germany

 made
 in
 Germany



Image: The KETTLER Roma Resin High Back Chair, emphasizing its German manufacturing origin.

WARRANTY AND SUPPORT

For warranty information and customer support, please contact KETTLER USA directly. Spare parts for this product are available for a duration of 3 years within the EU.