

## Teac RWD200

# TEAC RW-D200 Dual Deck CD Recorder and Player

Model: RWD200

## INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your TEAC RW-D200 Dual Deck CD Recorder and Player. Please read this manual thoroughly before using the unit to ensure optimal performance and longevity.



Figure 1: Front view of the TEAC RW-D200 Dual Deck CD Recorder and Player, showing the two CD trays, display, and control buttons.

## SETUP

### Unpacking and Placement

Carefully remove the unit from its packaging. Retain all packing materials for future transport or storage. Place the RW-D200 on a stable, level surface away from direct sunlight, heat sources, and excessive dust or moisture. Ensure adequate ventilation around the unit.

### Connecting to Your Audio System

- Audio Connection:** Connect the audio output jacks (RCA L/R) on the rear of the RW-D200 to an available input on your amplifier or receiver using RCA audio cables. For recording, connect the audio output of your source device (e.g., another CD player, cassette deck) to the audio input jacks (RCA L/R) on the rear of the RW-D200.
- Power Connection:** After all audio connections are made, plug the AC power cord into a standard electrical outlet.

## OPERATING INSTRUCTIONS

### Basic CD Playback

- Press the **POWER** button to turn on the unit.
- Press the **OPEN/CLOSE** button for either Deck 1 or Deck 2 to open the disc tray.
- Place a CD (CD-R or CD-RW) onto the disc tray with the label side facing up.

- 4. Press the **OPEN/CLOSE** button again to close the tray.
- 5. Press the **PLAY** button for the selected deck to begin playback.

**Recording CDs (CD-R/CD-RW)**

The RW-D200 supports recording onto both CD-R and erasable CD-RW discs. It features a 2X dub speed for efficient recording.

- 1. Insert a source CD into Deck 1 (Player) and a blank recordable CD-R or CD-RW into Deck 2 (Recorder).
- 2. Select the desired recording mode (e.g., Synchro Recording, Manual Recording). Refer to the display for options.
- 3. Adjust the recording level using the **REC LEVEL** controls to prevent distortion. The unit features 24-bit Analog-to-Digital/Digital-to-Analog Converters for high-quality audio.
- 4. Press the **RECORD** button on Deck 2 to start recording. Playback from Deck 1 will automatically begin.
- 5. Press the **STOP** button on Deck 2 to end recording.
- 6. **Finalizing Disc:** After recording, it is crucial to finalize CD-R discs to make them playable on other CD players. Follow the on-screen prompts or refer to the unit's display for the finalization process. CD-RW discs do not require finalization for playback on the RW-D200 but may for other players.

**MAINTENANCE**

**Cleaning the Unit**

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents.
- To clean the disc trays, use a soft, lint-free cloth. Avoid touching the optical lens inside the disc compartment.

**Disc Handling and Storage**

- Always handle discs by their edges to avoid fingerprints and scratches.
- Store discs in their cases when not in use, away from direct sunlight and high temperatures.

**TROUBLESHOOTING**

If you experience issues with your RW-D200, please consult the following table before seeking professional service.

Problem	Possible Cause	Solution
No power	Power cord not connected; outlet not active.	Ensure power cord is securely plugged in. Check power outlet with another device.
Disc not playing	Disc inserted incorrectly; disc dirty or scratched; incorrect input selected on amplifier.	Reinsert disc correctly. Clean disc with a soft cloth. Select correct input on your amplifier/receiver.
Recording errors	Blank disc is not recordable (CD-R/CD-RW); recording level too high/low; disc not finalized.	Use appropriate CD-R or CD-RW media. Adjust recording level. Finalize CD-R discs after recording.

**SPECIFICATIONS**

- **Brand:** Teac
- **Model Name:** RW-D200
- **Item Model Number:** RWD200

- **Color:** Black
- **Connectivity Technology:** Auxiliary
- **Special Features:** Dual-Deck, CD-R/RW Compatible, 2X Dub Speed
- **Analog-to-Digital/Digital-to-Analog Converters:** 24-bit
- **Item Weight:** 14.5 pounds

## WARRANTY AND SUPPORT

---

This TEAC RW-D200 unit comes with a **1-Year Teac Warranty**. For warranty claims, technical support, or further assistance, please contact Teac customer service. Keep your purchase receipt as proof of purchase for warranty purposes.

For additional information or to find authorized service centers, please visit the official Teac website or contact their support channels.