

JVC VPR47DU30

JVC 4.7GB DVD+R Media 30-Pack Spindle User Manual

INTRODUCTION

This manual provides essential information for the proper use and care of your JVC 4.7GB DVD+R Media 30-Pack Spindle. These high-quality recordable DVD+R discs offer 4.7 GB or 120 minutes of storage capacity, making them ideal for video recording, digital photo storage, and general data archiving. The 30-pack spindle provides a convenient and economical solution for your storage needs. JVC DVD+R media is designed for reliability and broad compatibility with most DVD players and DVD drives.

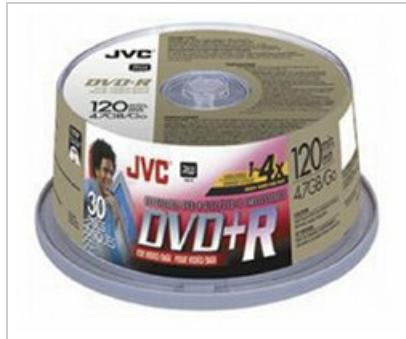


Image showing a spindle of JVC 4.7GB DVD+R discs, typically used for data storage or video recording.

SETUP INSTRUCTIONS

The JVC DVD+R discs are ready for use directly from the spindle. Follow these guidelines for initial handling:

- **Unpacking:** Carefully remove discs from the spindle one at a time to avoid scratching.
- **Handling:** Always hold the disc by its edges or by the center hole. Avoid touching the recording surface (the shiny side) or the label side to prevent fingerprints, dust, or scratches.
- **Storage:** Store unused discs back on the spindle or in a protective case to shield them from dust, direct sunlight, and extreme temperatures.

OPERATING INSTRUCTIONS

To record data or video onto your JVC DVD+R discs, you will need a compatible DVD+R recorder drive and

appropriate recording software. These discs support a maximum recording speed of 4X.

1. **Insert Disc:** Gently place a JVC DVD+R disc into your computer's DVD+R recorder drive, ensuring the label side is facing up.
2. **Launch Software:** Open your preferred DVD recording software (e.g., Nero, Roxio, Windows Media Player, macOS Disk Utility).
3. **Select Project Type:** Choose the type of project you wish to create (e.g., Data Disc, Video DVD, Audio CD, Backup Disc).
4. **Add Files:** Drag and drop the files or folders you want to record onto the disc into the software interface. Ensure the total size does not exceed 4.7 GB.
5. **Configure Settings:** Select the recording speed (it is recommended to use the maximum supported speed of 4X for these discs, or a lower speed if your drive or software suggests it for better compatibility).
6. **Start Recording:** Initiate the recording process. Do not interrupt the recording until it is complete.
7. **Finalize Disc:** Most software will automatically finalize the disc after recording, making it readable on other DVD players and drives. Confirm this step if prompted.
8. **Eject Disc:** Once recording is complete and verified, eject the disc from the drive.

For optimal performance and compatibility, ensure your DVD recorder drive's firmware is up to date and use reliable recording software.

CARE AND MAINTENANCE

Proper care of your JVC DVD+R media will ensure data longevity and reliable playback.

- **Cleaning:** If a disc becomes dirty, gently wipe it with a soft, lint-free cloth from the center outwards. Do not use abrasive materials or harsh chemical cleaners.
- **Storage:** Store discs in their original spindle or in individual jewel cases to protect them from dust, scratches, and physical damage. Keep discs away from direct sunlight, high humidity, and extreme temperatures.
- **Labeling:** Use a soft, felt-tip marker specifically designed for optical discs to label the non-recording side. Avoid using ballpoint pens or sharp objects, as they can damage the disc's data layer.
- **Avoid Bending:** Do not bend or flex the discs, as this can cause irreparable damage.

TROUBLESHOOTING

If you encounter issues while using your JVC DVD+R media, consider the following common solutions:

- **Disc Not Recognized:** Ensure the disc is inserted correctly into the drive. Check if your drive supports DVD+R media. Clean the disc if it appears dirty or smudged.
- **Recording Errors:** Reduce the recording speed in your software. Ensure there is enough free space on the disc. Close other applications running in the background to free up system resources. Update your DVD recorder drive's firmware.
- **Playback Issues:** Ensure the playback device (DVD player, computer drive) is compatible with DVD+R discs. Clean the disc. Try playing the disc on a different device to rule out a player-specific issue.
- **Slow Performance:** Verify that your drive is operating at its rated speed. Ensure the disc is clean and free from damage.

If problems persist, consult your DVD recorder drive's manual or the support resources for your recording software.

PRODUCT SPECIFICATIONS

Feature	Specification
Brand	JVC
Model Number	VPR47DU30
Storage Capacity	4.7 GB / 120 Minutes
Disc Type	DVD+R
Maximum Write Speed	4x
Packaging	30-Pack Spindle
Product Dimensions	5.7 x 5.5 x 2.4 inches
Item Weight	1 pound (16 ounces)
UPC	046838014833

WARRANTY AND CUSTOMER SUPPORT

JVC products are manufactured to high-quality standards. For specific warranty information regarding your JVC DVD+R media, please refer to the packaging or contact JVC customer support directly. While blank media typically has limited warranty coverage, JVC stands by the quality and reliability of its products.

For further assistance, technical support, or to inquire about product information, please visit the official JVC website or contact their customer service department. You may also find helpful resources and FAQs on the [JVC Store on Amazon](#).