



[Manuals.plus](#) /

> [Rival](#) /

> Rival Crock-Pot SC7600 6-Quart Oval VersaWare Slow Cooker Instruction Manual

## Rival SC7600

# Rival Crock-Pot SC7600 6-Quart Oval VersaWare Slow Cooker Instruction Manual

## INTRODUCTION

---

The Rival Crock-Pot SC7600 is a 6-quart oval slow cooker featuring VersaWare Extreme Temperature Cookware (ETC). This versatile stoneware crock can be used on a stovetop, in an oven, under a broiler, and in a microwave, offering flexibility beyond traditional slow cooking. The unit includes a brushed stainless-steel base with three heat settings: Low, High, and Keep Warm. Its design allows for convenient preparation, cooking, and serving of a wide variety of meals.

## IMPORTANT SAFETY INFORMATION

---

Please read all instructions thoroughly before operating this appliance to ensure safe use and to prevent injury or damage. Keep this manual for future reference.

- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse the power cord, plugs, or the heating base in water or any other liquid.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug the slow cooker from the outlet when not in use and before cleaning. Allow it to cool completely before adding or removing parts.
- Do not operate any appliance with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner. Contact an authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Exercise extreme caution when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect,

turn any control to 'OFF', then remove the plug from the wall outlet.

- Do not use this appliance for purposes other than its intended use.

## PRODUCT COMPONENTS

---

The Rival Crock-Pot SC7600 slow cooker consists of the following main components:

- **Heating Base:** The brushed stainless-steel base houses the heating element and the control knob. It features four metal legs with rubber feet for stability.
- **VersaWare Crock:** A 6-quart oval stoneware pot designed for extreme temperatures. This crock is suitable for use on a stovetop, in an oven, under a broiler, in a microwave, and for freezer storage. It has loop-style handles.
- **Lid:** A matching VersaWare lid for the stoneware crock, designed to fit securely and retain heat and moisture during cooking.
- **Control Knob:** Located on the front of the heating base, used to select the desired heat settings: Low, High, and Keep Warm.
- **Power Cord:** A detachable 32-inch power cord for connecting the unit to an electrical outlet.



This image displays the complete Rival Crock-Pot SC7600 slow cooker. It features a brushed stainless steel heating base with a black control knob for heat settings. Resting on top is the black oval VersaWare stoneware crock, covered by its

matching black lid. The unit has loop-style handles on both the crock and the base for easy handling.

## SETUP

---

Follow these steps to prepare your slow cooker for its first use:

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport if needed.
2. **Clean:** Before initial use, wash the VersaWare crock and its lid thoroughly in warm, soapy water. Rinse them well and dry completely. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.
3. **Placement:** Place the heating base on a stable, level, and heat-resistant surface, away from walls or cabinets that could be damaged by heat.
4. **Assemble:** Carefully place the clean, dry VersaWare crock into the heating base.

## OPERATING INSTRUCTIONS

---

This section details how to use your Rival Crock-Pot SC7600 for various cooking methods.

### General Slow Cooking

1. **Prepare Ingredients:** Place your desired ingredients into the VersaWare crock. Ensure the crock is not overfilled; leave at least one inch of space from the rim.
2. **Cover:** Place the lid securely on the VersaWare crock.
3. **Connect Power:** Plug the detachable power cord into the heating base, then plug the other end into a standard 220-volt electrical outlet.
4. **Select Setting:** Turn the control knob to your desired cooking setting: 'Low' for longer cooking times (typically 6-8 hours) or 'High' for shorter cooking times (typically 3-4 hours).
5. **Cook:** Allow the food to cook for the recommended duration. Avoid lifting the lid unnecessarily during cooking, as this releases heat and can significantly extend cooking times.
6. **Keep Warm:** Once cooking is complete, you may turn the control knob to the 'Keep Warm' setting to maintain the food's temperature until serving. This setting is not for cooking.
7. **Disconnect:** When finished, turn the control knob to 'OFF' and unplug the unit from the wall outlet.

### VersaWare Crock Versatility

The VersaWare crock offers enhanced versatility:

- **Stovetop Use:** The VersaWare crock can be used directly on a stovetop burner (gas or electric) for browning meats or sautéing vegetables before transferring to the slow cooker base. Use appropriate heat settings and always use oven mitts when handling a hot crock.
- **Oven/Broiler Use:** The crock and its lid are safe for use in a conventional oven or under a broiler. This allows for finishing dishes, baking covered meals, or browning the top of a casserole.
- **Microwave Use:** The VersaWare crock is microwave-safe, making it convenient for reheating leftovers.
- **Freezer/Refrigerator Use:** You can store pre-assembled meals or leftovers directly in the crock in the freezer or refrigerator, simplifying meal preparation and storage.

## CARE AND MAINTENANCE

---

Proper care and maintenance will ensure the longevity and optimal performance of your slow cooker.

### Cleaning

1. **Cool Down:** Always unplug the slow cooker and allow it to cool completely before attempting to clean any part.
2. **Crock and Lid:** The VersaWare crock and lid are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. For stubborn food residue, soak the crock in warm, soapy water for a period before cleaning.
3. **Heating Base:** Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water or any other liquid.
4. **Avoid Abrasives:** Do not use harsh abrasive cleaners, scouring pads, or steel wool on any part of the slow cooker, as this may scratch or damage the surfaces.

### Storage

- Ensure all components are clean and completely dry before storing.
- The power cord can be removed from the base for more compact storage.
- Store the slow cooker in a dry place, away from extreme temperatures.

## TROUBLESHOOTING

---

If you encounter issues with your slow cooker, refer to the following common problems and solutions:

- **Food Not Cooking Properly:**
  - Ensure the unit is plugged in securely and the control knob is set to 'Low' or 'High'.
  - Verify that the electrical outlet is functioning correctly.
  - Check that the lid is properly seated on the crock to retain heat and moisture.
  - Avoid frequently lifting the lid during cooking, as this can significantly extend the required cooking time.
- **Food Sticking to Crock:**
  - Ensure sufficient liquid is used in your recipes to prevent food from drying out and sticking.
  - For stubborn residue, soak the crock in warm, soapy water for an extended period before attempting to clean.
- **Unit Not Heating:**
  - Confirm that the power cord is securely connected to both the heating base and the wall outlet.
  - Check your household circuit breaker or fuse box if other electrical appliances are also not working.

## SPECIFICATIONS

---

<b>Brand</b>	Rival
<b>Model Number</b>	SC7600

<b>Capacity</b>	6 Quarts
<b>Color</b>	Stainless Steel (Base), Black (Crock/Lid)
<b>Material</b>	Stainless Steel (Base), VersaWare (Crock/Lid)
<b>Control Type</b>	Knob
<b>Number of Settings</b>	3 (Low, High, Keep Warm)
<b>Voltage</b>	220 Volts
<b>Shape</b>	Oval
<b>Dishwasher Safe</b>	Yes (Crock and Lid)
<b>Approximate Dimensions</b>	10 x 15 x 11 inches (Height x Width x Depth)
<b>UPC</b>	048894670770

## WARRANTY AND SUPPORT

---

This Rival Crock-Pot SC7600 slow cooker comes with a **1-year limited warranty** from the date of purchase.

For warranty claims, technical assistance, or customer support, please refer to the contact information provided in your original purchase documentation or visit the official Rival brand website. Please have your model number (SC7600) and proof of purchase available when contacting support.